



PowerHill-P125-261kWh

User Manual

Notice

This manual contains important safety instructions, installation, electrical connections, commissioning, maintenance, and troubleshooting of the equipment.

Save the manual!

This manual must be stored carefully and be available at all times.

Copyright Declaration

All rights to the content of this manual are owned by Dunext Technology Xiamen Co., Ltd. (hereinafter called as 'Dunext'). Any corporation or individual should not plagiarize, partially or fully copy it, and reproduce or distribute it in any form or means without prior written permission from Dunext.

Dunext reserves the right of final interpretation. This manual may be updated according to user's or customer's feedback. The information in this manual is subject to change without notice. Every effort has been made to ensure the accuracy of the contents of this manual, but nothing mentioned herein expresses or implies any other information.

Please check our website at <http://www.dunext.com> for latest version.

Contents

About This Manual	V
1 Safety Precautions	1
1.1 Statement	1
1.1.1 Personal Safety	2
1.1.2 General Requirements	3
1.1.3 Personnel Requirements	3
1.2 Electrical Safety	4
1.2.1 General Requirements	4
1.2.2 Grounding Requirements	6
1.2.3 Cabling Requirements	6
1.3 Environment Requirements	7
1.3.1 General Requirements	8
1.4 Mechanical Safety	9
1.4.1 General Requirements	9
1.4.2 Moving Heavy Objects Safety	10
1.4.3 Work-at-height Safety	11
1.4.4 Ladder Use Safety	12
1.4.5 Hoisting Safety	13
1.4.6 Drilling Safety	13
1.5 Product Safety	13
1.5.1 ESS Safety	13
1.5.2 Battery Safety	15
2 Product Introduction	20
2.1 Overview	20
2.2 Appearance	20
2.3 Components	21
2.3.1 Battery Pack	23
2.3.2 High-voltage Box	24
2.3.3 Power Conversion Module	25
2.3.4 Liquid Cooling Unit	26
2.3.5 Fire Suppression System	26
2.3.6 EMS	27
2.4 Working Principles	28
2.4.1 Circuit Diagram	28
2.4.2 ESS Status	29
2.5 Networking Applications	29
2.5.1 On-grid Scenarios	29
3 Storage Requirements	31
3.1 ESS Storage and Charging	31
3.2 Charging Operation Instructions	32
4 Site Requirements	33
4.1 Site Selection Requirements	33
4.1.1 General Requirements	33

4.1.2 Flood Prevention and Flood Control Requirements	35
4.1.3 Outdoor Requirements	35
4.2 Space Requirements	36
4.3 Foundation Requirements	41
5 Unpacking and Acceptance	44
6 Product Installation	45
6.1 Preparation Before Installation	45
6.1.1 Preparing Tools	45
6.1.2 Inspection Before Installation	47
6.2 ESS Installation	48
7 Cables Installation	55
7.1 Cable Preparation	55
7.2 Grounding Cable Installation	57
7.3 Reserved Port Wiring	57
7.3.1 Parallel Wiring of Multiple PCS	59
7.3.2 EMS Wiring	60
7.4 Power Cable Installation	61
7.4.1 AC Power Cable Installation	61
8 ESS Power-On and Power-Off	63
8.1 Check Before Power-On	63
8.1.1 General Check	63
8.1.2 ESS Installation and Check	64
8.2 Power-On and Power-Off Operations	65
9 System Commissioning	67
9.1 Local Startup	67
9.2 IP Address Settings	67
9.3 Scheduling Instructions	68
10 Human-Computer Interaction	70
10.1 Function Overview	70
10.2 System Login	70
10.3 Multilingual Function	72
10.4 Plant Overview	73
10.4.1 Plant Info	73
10.4.2 Operating Status	74
10.4.3 Energy Flow Diagram	74
10.4.4 Data Overview	75
10.4.5 Power Curve	76
10.4.6 Charge/Discharge Bar Chart	76
10.4.7 SOC Chart	76
10.4.8 Power Station Alarm	77
10.5 Monitoring	77
10.5.1 View PCS Data	77
10.5.2 View BMS Data	78
10.5.3 View Other Device Data	80
10.5.4 Parameter Settings	80
10.6 Strategy	82

10.6.1 Operation.....	82
10.6.2 Protection.....	87
10.6.3 Thermal Management	90
10.7 Alarm.....	93
10.7.1 Active Alarm.....	93
10.7.2 History Alarm.....	93
10.8 Data Export.....	94
10.9 System.....	95
10.9.1 Plant.....	95
10.9.2 Network Port Configuration.....	98
10.9.3 User	99
10.9.4 System Upgrade	101
11 Operation, Maintenance, and Troubleshooting	105
11.1 Monthly Operation & Maintenance Requirements.....	106
11.2 Annual Operation & Maintenance Requirements	107
11.3 Biennial Operation & Maintenance Requirements	110
11.4 ESS Troubleshooting.....	111
12 Technical Data.....	112
A Crimp an OT / DT Terminal.....	114
B How to Repair Paint Damage.....	117
C Emergency Handling.....	120
D How to Recycle Used Batteries	122
E Abbreviations.....	124


About This Manual

Overview

Please read the product manual carefully before installation, operation, or maintenance of PowerHill-P125-261kWh. This manual contains important safety instructions and installation instructions that must be followed during installation and maintenance of the equipment.

Designation explanation of PowerHill-P125-261kWh:

PowerHill-P125-261kWh

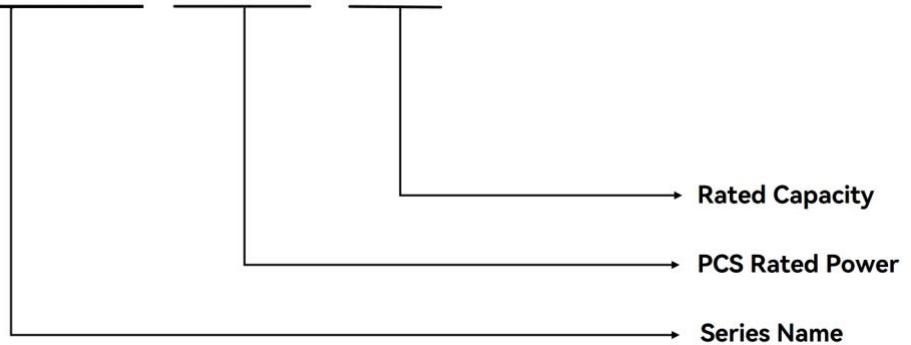

No.	Meaning	Description
1	Series Name	PowerHill: Integrated Outdoor Battery Energy Storage Cabinet
2	PCS Rated Power	P125: System power is 125kW
3	Rated Capacity	261: Nominal capacity is 261kWh

Intended Audience

This manual is intended for technical professionals for installation, commissioning and maintenance of the product. The technical personnel have to be familiar with the product, local standards, and electric systems.

Symbol Conventions

The following types of safety instructions and general information appear in this document as described below:

Symbol	Description
	'Danger' indicates a hazard with a high level of risk that, if not avoided, will result in death or serious injury.
	'Warning' indicates a hazard with a medium level of risk that, if not avoided, will result in death or serious injury.
	'Caution' indicates a hazard with a low level of risk that, if not avoided, could result in minor or moderate injury.
NOTICE 	'Notice' indicates a situation that, if not avoided, could result in equipment or property damage.
	'Note' provides tips that are valuable for the optimal operation of the product.
	CE Mark
	Product should not be disposed as normal household waste.

	Signals danger due to electrical shock and indicates the time (5 minutes) to allow after the equipment has been turned off and disconnected to ensure safety.
	Refer to the user manual.
	Product can be recycled.
	Forbidden to break under load
	High voltage inside
	No activation without fire alarm
	No blocking
	No smoking
	No sparks flames

	Fire will cause toxic fumes
	Warning arc flash hazard wear category III PPE
	Warning electric shock

Change History

Changes between document issues are cumulative. The latest document issue contains all the changes made in earlier issues.

Issue 01 (2026-07-08)

This issue is used for first application

1 Safety Precautions

1.1 Statement

- Before transporting, storing, installing, operating, using, and/or maintaining the equipment, read this document, strictly follow the instructions provided herein, and follow all the safety instructions on the equipment and in this document. In this document, "equipment" refers to the products, software, components, spare parts, and/or services related to this document; "the Company" refers to the manufacturer (producer), seller, and/or service provider of the equipment; "you" refers to the entity that transports, stores, installs, operates, uses, and/or maintains the equipment.
- The Danger, Warning, Caution, and Notice statements described in this document do not cover all the safety precautions. You also need to comply with relevant international, national, or regional standards and industry practices. The Company shall not be liable for any consequences that may arise due to violations of safety requirements or safety standards concerning the design, production, and usage of the equipment.
- The equipment shall be used in an environment that meets the design specifications. Otherwise, the equipment may be faulty, malfunctioning, or damaged, which is not covered under the warranty. The Company shall not be liable for any property loss, personal injury, or even death caused thereby.
- Comply with applicable laws, regulations, standards, and specifications during transportation, storage, installation, operation, use, and maintenance.
- Do not perform reverse engineering, decompilation, disassembly, adaptation, implantation, or other derivative operations on the equipment software. Do not study the internal implementation logic of the equipment, obtain the source code of the equipment software, violate intellectual property rights, or disclose any of the performance test results of the equipment software.

The Company shall not be liable for any of the following circumstances or their consequences:

- The equipment is damaged due to force majeure such as earthquakes, floods, volcanic eruptions, debris flows, lightning strikes, fires, wars, armed conflicts, typhoons, hurricanes, tornadoes, and other extreme weather conditions.
- The equipment is operated beyond the conditions specified in this document.
- The equipment is installed or used in environments that do not comply with international, national, or regional standards.
- The equipment is installed or used by unqualified personnel.
- Fail to follow the operation instructions and safety precautions on the product and in the document.
- Remove or modify the product or modify the software code without authorization.
- You or a third party authorized by you cause the equipment damage during transportation.
- The equipment is damaged due to storage conditions that do not meet the requirements specified in the product document.
- You fail to prepare materials and tools that comply with local laws, regulations, and related standards.
- The equipment is damaged due to your or a third party's negligence, intentional breach, gross negligence, or improper operations, or other reasons not related to the Company.

1.1.1 Personal Safety



Ensure that power is off during installation. Do not install or remove a cable with power on. Transient contact between the core of the cable and the conductor will cause electric arcs, sparks, fire, or explosion, which may result in personal injury.

Non-standard and improper operations on the energized equipment may cause fire, electric shocks, or explosion, resulting in property damage, personal injury, or even death.

Before operations, remove conductive objects such as watches, bracelets, bangles, rings, and necklaces to prevent electric shocks.

During operations, use dedicated insulated tools to prevent electric shocks or short circuits. The dielectric withstanding voltage level must comply with local laws, regulations, standards, and specifications.


WARNING!

When operating the system, appropriate personal protective equipment (PPE) compliant with local standards should be worn, such as protective clothing, insulated shoes, goggles, a safety helmet, and insulated gloves.

1.1.2 General Requirements

- Do not stop protective devices. Pay attention to the warnings, cautions, and related precautionary measures in this document and on the equipment.
- If there is a likelihood of personal injury or equipment damage during operations, immediately stop, report the case to the supervisor, and take feasible protective measures.
- Do not power on the equipment before it is installed or confirmed by professionals.
- Do not touch the power supply equipment directly or with conductors such as damp objects. Before touching any conductor surface or terminal, measure the voltage at the contact point to ensure that there is no risk of electric shock.
- Do not touch operating equipment because the enclosure is hot.
- Do not touch a running fan with your hands, components, screws, tools, or boards. Otherwise, personal injury or equipment damage may occur.
- In the case of a fire, immediately leave the building or the equipment area and activate the fire alarm or call emergency services. Do not enter the affected building or equipment area under any circumstances.

1.1.3 Personnel Requirements

- Only professionals and trained personnel are allowed to operate the equipment.
 - Professionals: personnel who are familiar with the working principles and structure of the equipment, trained or experienced in equipment operations and are clear of the sources and degree of various potential hazards in equipment installation, operation, maintenance.
 - Trained personnel: personnel who are trained in technology and safety, have required experience, are aware of possible hazards on themselves in certain operations, and are able to take protective measures to minimize the hazards on themselves and other people.
- Personnel who plan to install or maintain the equipment must receive adequate training, be able to correctly perform all operations, and understand all necessary safety precautions and local relevant standards.

- Only qualified professionals or trained personnel are allowed to install, operate, and maintain the equipment.
- Only qualified professionals are allowed to remove safety facilities and inspect the equipment.
- Personnel who will perform special tasks such as electrical operations, working at heights, and operations of special equipment must possess the required local qualifications.
- Only certified high-voltage electricians are allowed to operate medium voltage equipment.
- Only authorized professionals are allowed to replace the equipment or components (including software).
- Only personnel who need to work on the equipment are allowed to access the equipment.

1.2 Electrical Safety


	Before connecting cables, ensure that the equipment is intact. Otherwise, electric shocks or fire may occur. Non-standard and improper operations may result in fire or electric shocks. Prevent foreign matter from entering the equipment during operations. Otherwise, equipment short-circuits or damage, load power derating, power failure, or personal injury may occur.
	For the equipment that needs to be grounded, install the ground cable first when installing the equipment and remove the ground cable last when removing the equipment.
	Do not route cables near the air intake or exhaust vents of the equipment.

1.2.1 General Requirements

- Follow the procedures described in the document for installation, operation, and maintenance. Do not reconstruct or alter the equipment, add components, or change the installation sequence without permission.

- Obtain approval from the national or local electric utility company before connecting the equipment to the grid.
- Observe the power plant safety regulations, such as the operation and work ticket mechanisms.
- Install temporary fences or warning ropes and hang "No Entry" signs around the operation area to keep unauthorized personnel away from the area.
- Before installing or removing power cables, turn off the switches of the equipment and its upstream and downstream switches.
- If there is any electrolyte or coolant leakage inside the equipment, disconnect the power supply immediately and do not use the equipment.
- Before performing operations on the equipment, check that all tools meet the requirements and record the tools. After the operations are complete, collect all of the tools to prevent them from being left inside the equipment.
- Before installing the power cables, check that the cable labels are correct and that the cable terminals are securely connected.
- When installing the equipment, use a torque tool of a proper measurement range to tighten the screws. When using a wrench to tighten the screws, ensure that the wrench does not tilt and the torque error does not exceed 10% of the specified value.
- Ensure that bolts are tightened with a torque tool and marked in red and blue after double-check. Installation personnel mark tightened bolts in blue. Quality inspection personnel confirm that the bolts are tightened and then mark them in red, as shown in the figure below. (The marks must cross the edges of the bolts.)

Figure 1-1 Bolts Tightening Marks



- After the installation is complete, ensure that protective cases, insulation tubes, and other necessary items for all electrical components are in position to avoid electric shocks.
- If the equipment has multiple inputs, disconnect all the inputs before operating the equipment.
- Before maintaining a downstream electrical or power distribution device, turn off the output switch on the power supply equipment.
- During equipment maintenance, attach "Do not switch on" labels near the upstream and downstream switches or circuit breakers as well as warning

signs to prevent accidental connection. The equipment can be powered on only after troubleshooting is complete.

- If fault diagnosis and troubleshooting need to be performed after power-off, take the following safety measures: Disconnect the power supply. Check whether the equipment is live. Install a ground cable. Hang warning signs and set up fences.
- Check equipment connections periodically, ensuring that all screws are securely tightened.
- Only qualified professionals can replace a damaged cable.
- Do not scrawl, damage, or block any labels or nameplates on the equipment. Promptly replace labels that have worn out.
- Do not use solvents such as water, alcohol, or oil to clean electrical components inside or outside of the equipment.

1.2.2 Grounding Requirements

- Ensure that the grounding impedance of the equipment complies with local electrical standards.
- Ensure that the equipment is connected permanently to the protective ground. Before operating the equipment, check its electrical connection to ensure that it is reliably grounded.
- Do not work on the equipment in the absence of a properly installed ground conductor.
- Do not damage the ground conductor.
- If high touch current may occur on the equipment, ground the protective ground terminal on the equipment enclosure before connecting the power supply; otherwise, electric shock as a result of touch current may occur.

1.2.3 Cabling Requirements

- When selecting, installing, and routing cables, follow local safety regulations and rules.
- When routing power cables, ensure that there is no coiling or twisting. Do not join or weld power cables. If necessary, use a longer cable.
- Ensure that all cables are properly connected and insulated, and meet specifications.
- Ensure that the slots and holes for routing cables are free from sharp edges, and that the positions where cables are routed through pipes or cable holes

are equipped with cushion materials to prevent the cables from being damaged by sharp edges or burrs.

- If a cable is routed into the cabinet from the top, bend the cable in a U shape outside the cabinet and then route it into the cabinet.
- Ensure that cables of the same type are bound together neatly and straight and that the cable sheath is intact. When routing cables of different types, ensure that they are at least 30 mm away from each other.
- When cable connection is completed or paused for a short period of time, seal the cable holes with sealing putty immediately to prevent small animals or moisture from entering.
- Secure buried cables using cable supports and cable clips. Ensure that the cables in the backfill area are in close contact with the ground to prevent cable deformation or damage during backfilling.
- If the external conditions (such as the cable layout or ambient temperature) change, verify the cable usage in accordance with the IEC-60364-5-52 or local laws and regulations. For example, check that the current-carrying capacity meets requirements.
- When routing cables, reserve at least 30 mm clearance between the cables and heat-generating components or areas. This prevents deterioration or damage to the cable insulation layer.
- When the temperature is low, violent impact or vibration may damage the plastic cable sheathing. To ensure safety, comply with the following requirements:
 - Cables can be laid or installed only when the temperature is higher than 0°C. Handle cables with caution, especially at a low temperature.
 - Cables stored at below 0°C must be stored at room temperature for more than 24 hours before they are laid out.
- It is forbidden to directly push the cable from the car and other non-standard operations, to avoid the damage of the cable performance decline, affecting the current load and temperature rise.

1.3 Environment Requirements



Do not expose the equipment to flammable or explosive gas or smoke. Do not perform any operation on the equipment in such environments.

Do not store any flammable or explosive materials in the equipment area.

Do not place the equipment near heat sources or fire sources, such as smoke, candles, heaters, or other heating devices.

 WARNING!	Overheat may damage the equipment or cause a fire. Install the equipment in an area far away from liquids. Do not install it under areas prone to condensation, such as under water pipes and air exhaust vents, or areas prone to water leakage, such as air conditioner vents, ventilation vents, or feeder windows of the equipment room. Ensure that no liquid enters the equipment to prevent faults or short circuits. To prevent damage or fire due to high temperature, ensure that the ventilation vents or heat dissipation systems are not obstructed or covered by other objects while the equipment is running.
--	---

1.3.1 General Requirements

- Ensure that the equipment is stored in a clean, dry, and well-ventilated area with proper temperature and humidity and is protected from dust and condensation.
- Keep the installation and operating environments of the equipment within the allowed ranges. Otherwise, its performance and safety will be compromised.
- Do not install, use, or operate outdoor equipment and cables (including but not limited to moving equipment, operating equipment and cables, inserting connectors to or removing connectors from signal ports connected to outdoor facilities, working at heights, performing outdoor installation, and opening doors) in harsh weather conditions such as lightning, rain, snow, and level 6 or stronger wind.
- Do not install the equipment in an environment with conductive metal or magnetic dust.
- Do not install the equipment in an area conducive to the growth of microorganisms such as fungus or mildew.
- Do not install the equipment in an area with strong vibration, noise, or electromagnetic interference.
- Ensure that the site complies with local laws, regulations, and related standards.
- Ensure that the ground in the installation environment is solid, free from spongy or soft soil, and not prone to subsidence. The site must not be located in a low-lying land prone to water or snow accumulation, and the horizontal level of the site must be above the highest water level of that area in history.
- Do not install the equipment in a position that may be submerged in water.

- If the equipment is installed in a place with abundant vegetation, in addition to routine weeding, harden the ground underneath the equipment using cement or gravel.
- Before opening doors during the installation, operation, and maintenance of the equipment, clean up any water, ice, snow, or other foreign objects on the top of the equipment to prevent foreign objects from falling into the equipment.
- When installing the equipment, ensure that the installation surface is solid enough to bear the weight of the equipment.
- All cable holes must be sealed. Seal the used cable holes with sealing putty. Seal the unused cable holes with the caps delivered with the equipment.
- After installing the equipment, remove the packing materials such as cartons, foam, plastics, and cable ties from the equipment area.

1.4 Mechanical Safety

 DANGER!	When working at heights, wear a safety helmet and safety harness or waist belt and fasten it to a solid structure. Do not mount it on an insecure moveable object or metal object with sharp edges. Make sure that the hooks will not slide off.
 WARNING!	Ensure that all necessary tools are ready and inspected by a professional organization. Do not use tools that have signs of scratches or fail to pass the inspection or whose inspection validity period has expired. Ensure that the tools are secure and not overloaded. Before installing equipment in a cabinet, ensure that the cabinet is securely fastened with a balanced centre of gravity. Otherwise, tipping or falling cabinets may cause bodily injury and equipment damage. When pulling equipment out of a cabinet, be aware of unstable or heavy objects in the cabinet to prevent injury. Do not drill holes into the equipment. Doing so may affect the sealing performance and electromagnetic containment of the equipment and damage components or cables inside. Metal shavings from drilling may short-circuit boards inside the equipment.


1.4.1 General Requirements

- Repaint any paint scratches caused during equipment transportation or installation in a timely manner. Equipment with scratches must not be exposed for an extended period of time.
- Do not perform operations such as arc welding and cutting on the equipment without evaluation by the Company.
- Do not install other devices on the top of the equipment without evaluation by the Company.
- When performing operations over the top of the equipment, take measures to protect the equipment against damage.
- Use correct tools and operate them in the correct way.

1.4.2 Moving Heavy Objects Safety

- Be cautious to prevent injury when moving heavy objects, follow instructions in the figure below.

Figure 1-2 Moving Heavy Objects Instructions

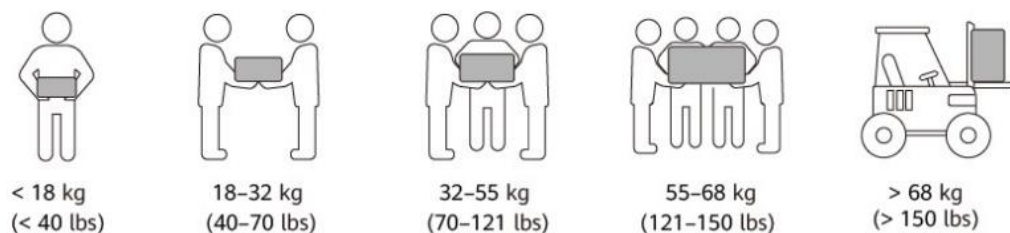

- If multiple persons need to move a heavy object together, determine the manpower and work division with consideration of height and other conditions to ensure that the weight is equally distributed.
- If two persons or more move a heavy object together, ensure that the object is lifted and landed simultaneously and moved at a uniform pace under the supervision of one person.
- Wear personal protective gears such as protective gloves and shoes when manually moving the equipment.
- To move an object by hand, approach to the object, squat down, and then lift the object gently and stably by the force of the legs instead of your back. Do not lift it suddenly or turn your body around.
- Move or lift the equipment by holding its handles or lower edges. Do not hold the handles of modules that are installed in the equipment.

- Do not quickly lift a heavy object above your waist. Place the object on a workbench that is half-waist high or any other appropriate place, adjust the positions of your palms, and then lift it.
- Move a heavy object stably with balanced force at an even and low speed. Put down the object stably and slowly to prevent any collision or drop from scratching the surface of the equipment or damaging the components and cables.
- When moving a heavy object, be aware of the workbench, slope, staircase, and slippery places. When moving a heavy object through a door, ensure that the door is wide enough to move the object and avoid bumping or injury.
- When transferring a heavy object, move your feet instead of turning your waist around. When lifting and transferring a heavy object, ensure that your feet point to the target direction of movement.
- When transporting the equipment using a pallet truck or forklift, ensure that the tynes are properly positioned so that the equipment does not topple. Before moving the equipment, secure it to the pallet truck or forklift using ropes. When moving the equipment, assign dedicated personnel to take care of it.
- Choose sea or roads in good conditions for transportation. Do not transport the equipment by railway or air. Avoid tilt or jolt during transportation.
- When moving and transporting an air conditioner, keep it upright and do not place it horizontally or upside down. If the package of the air conditioner is damaged or the tilt indicator on the package changes color, contact Dunext's service engineers.

1.4.3 Work-at-height Safety

- Any operations performed 2m or higher above the ground shall be supervised properly.
- Only trained and qualified personnel are allowed to work at heights.
- Do not work at heights when steel pipes are wet or other risky situations exist. After the preceding conditions no longer exist, the safety owner and relevant technical personnel need to check the involved equipment. Operators can begin working only after safety is confirmed.
- Set a restricted area and prominent signs for working at heights to warn away irrelevant personnel.
- Set guard rails and warning signs at the edges and openings of the area involving working at heights to prevent falls.

- Do not pile up scaffolding, springboards, or other objects on the ground under the area involving working at heights. Do not allow people to stay or pass under the area involving working at heights.
- Carry operation machines and tools properly to prevent equipment damage or personal injury caused by falling objects.
- Personnel involving working at heights are not allowed to throw objects from the height to the ground, or vice versa. Objects shall be transported by slings, hanging baskets, aerial work platforms, or cranes.
- Do not perform operations on the upper and lower layers at the same time. If unavoidable, install a dedicated protective shelter between the upper and lower layers or take other protective measures. Do not pile up tools or materials on the upper layer.
- Dismantle the scaffolding from top down after finishing the job. Do not dismantle the upper and lower layers at the same time. When removing a part, ensure that other parts will not collapse.
- Ensure that personnel working at heights strictly comply with the safety regulations. The Company is not responsible for any accident caused by violation of the safety regulations on working at heights.
- Behave cautiously when working at heights. Do not rest at heights.

1.4.4 Ladder Use Safety

- Use wooden or insulated ladders when you need to perform live-line working at heights.
- Platform ladders with protective rails are preferred. Do not use single ladders.
- Before using a ladder, check that it is intact and confirm its load bearing capacity. Do not overload it.
- Ensure that the ladder is securely positioned and held firm, as shown in the figure below.

Figure 1-3 Ladder Holding Example



- When climbing up the ladder, keep your body stable and your center of gravity between the side rails, and do not overreach to the sides.
- When a step ladder is used, ensure that the pull ropes are secured.

1.4.5 Hoisting Safety

- Only trained and qualified personnel are allowed to perform hoisting operations.
- The hoisting area is to be isolated by erecting temporary warning signs or fences.
- Ensure that the foundation where hoisting is performed on meets the load bearing requirements.
- Before hoisting objects, ensure that hoisting tools are firmly secured onto a fixed object or wall that meets the load-bearing requirements.
- During hoisting, it is strictly prohibited to stand or walk under the crane or hoisted object.
- Do not drag steel ropes and hoisting tools or bump the hoisted objects against hard objects during hoisting.

1.4.6 Drilling Safety

- Obtain consent from the client and contractor before drilling.
- Wear protective equipment such as safety goggles and protective gloves when drilling holes.
- To avoid short circuits or other risks, do not drill holes into buried pipes or cables.
- When drilling holes, the equipment should be shielded and protected to prevent debris from falling into the equipment, and debris should be cleaned up in time after drilling.

1.5 Product Safety

1.5.1 ESS Safety



- Do not open the cabinet door when the system is running.
- When the energy storage system is faulty, DO NOT stand at the cabinet door (including the open range of the cabinet door).

	● The energy storage system is an enclosed system and will not release any gases under normal operations. If the energy storage system is improperly treated, for example, burnt, struck by lightning, overcharged, or subject to other adverse conditions that may cause battery thermal runaway, the system may be damaged or an abnormal chemical reaction may occur inside the battery, resulting in electrolyte leakage or production of gases such as CO and H₂. To prevent fire or device corrosion, ensure that flammable gas is properly exhausted.
 WARNING!	● Before unpacking, storage, and transportation, ensure that the packing cases are intact and the energy storage system are correctly placed according to the labels on the packing cases. ● Install the energy storage system in a dry area. Do not install it under areas prone to water leakage, such as air conditioner vents, ventilation vents, feeder windows of the equipment room, or water pipes. Ensure that no liquid enters the equipment to prevent faults or short circuits. ● Before installing and commissioning the energy storage system, prepare firefighting facilities, such as fire sand and carbon dioxide fire extinguishers, according to construction standards and regulations. Before putting into operation, ensure that firefighting facilities that comply with local laws and regulations are installed. ● Tighten the screws on copper bars or cables to the torque specified in this document. Periodically confirm whether the screws are tightened, check for rust, corrosion, or other foreign objects, and clean them up if any. Loose screw connections will result in excessive voltage drops and batteries may catch fire when the current is high. ● After the energy storage system is discharged, the system should be charged in time, otherwise the battery inside the system may be damaged due to over discharge.
 CAUTION!	Once the buzzer is triggered, evacuate from the site immediately.
NOTICE NOTICE!	Take protection and isolation measures for the energy storage system, such as installing fences, walls, and safety warning signs to prevent personal injury or property damage caused by unauthorized access during operations.

- When installing the energy storage system, comply with the fire separation distance or fire wall requirements specified in local standards, including but not limited to NFPA 855 Standard for the Installation of Stationary Energy Storage Systems.
- When inspecting the system with power on, pay attention to the hazard warning signs on the equipment and DO NOT stand at the cabinet door.
- It is recommended that you prepare camera devices to record the detailed process of installation, operation and maintenance of the equipment.

1.5.2 Battery Safety



- Do not connect the positive and negative poles of a battery together. Otherwise, the battery may be short-circuited. Battery short circuits can generate high instantaneous current and releases a large amount of energy, which may cause battery leakage, smoke, flammable gas release, thermal runaway, fire, or explosion. To avoid battery short circuits, do not maintain batteries with power on.
- Do not expose batteries at high temperatures or around heat sources, such as fire sources, transformers, and heaters. Battery overheating may cause leakage, smoke, flammable gas release, thermal runaway, fire, or explosion.
- The battery is strictly prohibited from fall, collision, hard object puncture and pressure impact, otherwise it may lead to battery damage or fire.
- To avoid leakage, smoke, flammable gas release, thermal runaway, fire, or explosion, do not disassemble, alter, or damage batteries, for example, insert foreign objects into batteries, squeeze batteries, or immerse batteries in water or other liquids.
- It is strictly prohibited to touch the battery terminals with other metal objects, which may cause heat generation or electrolyte leakage.
- There is a risk of fire or explosion if the model of the battery in use or used for replacement is incorrect. Use a battery of the model recommended by the manufacturer.
- Battery electrolyte is toxic and volatile. Do not get contact with leaked liquids or inhale gases in the case of battery leakage or odor. In such cases, stay away from the battery and contact professionals immediately. Professionals must wear safety goggles, rubber gloves, gas masks, and protective clothing, power off the equipment, remove the battery, and contact

	technical engineers. ● Gases from burning batteries can irritate eyes, skin and throat. Take protective measures promptly.
--	---

1.5.2.1 Statement

The Company shall not be liable for any battery damage, personal injury, death, property loss, and/or other consequences caused by the following reasons:

- Force majeure such as earthquakes, floods, volcanic eruptions, debris flows, lightning strikes, fires, wars, armed conflicts, typhoons, hurricanes, tornadoes, and other extreme weather conditions
- The battery warranty period has expired. You are advised not to use a battery whose warranty period has expired, as this poses safety risks.
- Actions that do not follow instructions in the user manual or direct advice from the Company, including but not limited to the following scenarios:

The onsite equipment operating environment or external power parameters do not meet the environment requirements for normal operation, for example, the actual operating temperature of batteries is too high or too low, or the power grid is unstable and experiences outages frequently.

- Batteries are dropped or incorrectly operated or connected.
- Batteries are over discharged due to delayed acceptance or power-on after battery installation.
- Battery running parameters are incorrectly set.
- Different types of batteries, for example, batteries of different brands or rated capacities, are used together without prior approval from the Company.
- Batteries are frequently overdischarged due to improper battery maintenance or operation.
- Battery use scenarios are changed without prior approval from the Company.
- Battery maintenance is not performed according to the instructions in the user manual, for example, failing to check battery terminals regularly.
- Batteries are not transported, stored, or charged according to the instructions in the user manual.
- Instructions from the Company are not followed during battery relocation or reinstallation.

1.5.2.2 General Requirements

NOTICE

NOTICE!

To ensure battery safety and battery management accuracy, use batteries provided by the Company. The Company is not responsible for any faults of batteries not provided by it.

- Before installing, operating, and maintaining batteries, read the battery manufacturer's instructions and comply with their requirements. The safety precautions specified in this document are highly important and require special attention. For additional safety precautions, see the instructions provided by the battery manufacturer.
- Do not use a damaged battery (such as damage caused when a battery is dropped, bumped, bulged, or dented on the enclosure), because the damage may cause electrolyte leakage or flammable gas release. In the case of electrolyte leakage or structural deformation, contact the installer or professional O&M personnel immediately to remove or replace the battery. Do not store the damaged battery near other devices or flammable materials and keep it away from non-professionals.
- Before battery operation, make sure there are no irritating, burning or other scorched smell around the battery.
- It is strictly prohibited to place installation tools, metal parts and sundries on the battery during installation. After the installation is completed, clean up the items on and around the battery in a timely manner.
- Prohibit the installation of the battery pack in rain, snow, fog and other weather to avoid the battery pack being eroded by moisture and rain.
- If the battery is accidentally drenched in water, it is prohibited to continue installation. Transport it to a safe isolation point and promptly scrap it for disposal.
- Check whether the positive and negative battery terminals are grounded unexpectedly. If so, disconnect the battery terminals from the ground.
- Do not perform welding or grinding work around batteries to prevent fire caused by electric sparks or arcs.
- If batteries are left unused for a long period of time, store and charge them according to the battery requirements.
- Prohibit the use of equipment for charging and discharging that does not meet the requirements of local laws, regulations and codes.
- Keep the battery circuit disconnected during installation and maintenance.
- Monitor damaged batteries during storage for signs of smoke, flame, electrolyte leakage, or heat.
- If a battery is faulty, its surface temperature may be high. Do not touch the battery to avoid scalds.

- Do not stand on, lean on, or sit on the top of the equipment.
- In backup power scenarios, do not use the batteries for the following situations:
 - Medical devices substantially important to human life
 - Control equipment such as trains and elevators, as this may cause personal injury
 - Computer systems of social and public importance
 - Locations near medical devices
 - Other devices similar to those described above

1.5.2.3 Short Circuit Protection

- When installing and maintaining the battery, you need to wrap the exposed cable terminals on the battery with insulation tape.
- Avoid foreign bodies (such as conductive objects, screws, liquids, etc.) from entering the battery and causing a short circuit.

1.5.2.4 Leakage Handling

NOTICE 	Electrolyte leakage may damage the equipment. It will corrode metal parts and boards, and ultimately damage the boards.
--	---

The electrolyte is corrosive and can cause skin irritation and chemical burns. If you come into direct contact with the battery electrolyte, take the following measures:

- Inhalation: Evacuate from contaminated areas, get fresh air immediately, and seek immediate medical attention.
- Eye contact: Immediately flush eyes with plenty of water for at least 15 minutes, do not rub, and seek immediate medical help.
- Skin contact: Wash the affected areas immediately with soap and water and seek immediate medical attention.
- Intake: Seek immediate medical help.

1.5.2.5 Recycling

- Please dispose of used batteries in accordance with local laws and regulations, and do not dispose of batteries as household waste. Improper disposal of batteries may lead to environmental pollution or explosion.
- If a battery leaks or is damaged, contact technical support or a battery recycling company for disposal.

- When the batteries are out of service life, contact a battery recycling company for disposal.
- Avoid exposing waste batteries to high temperatures or direct sunlight.
- Avoid exposing waste batteries to high humidity or corrosive environments.
- Do not use faulty batteries and must be reported to a battery recycling company for disposal as soon as possible to avoid environmental pollution.


2 Product Introduction

2.1 Overview

PowerHill-P125-261kWh is an integrated outdoor battery energy storage cabinet including battery, BMS, PCS, auxiliary power system, fire suppression system, liquid cooling system and grounding system.

2.2 Appearance

Figure 2-1 Appearance and Dimensions

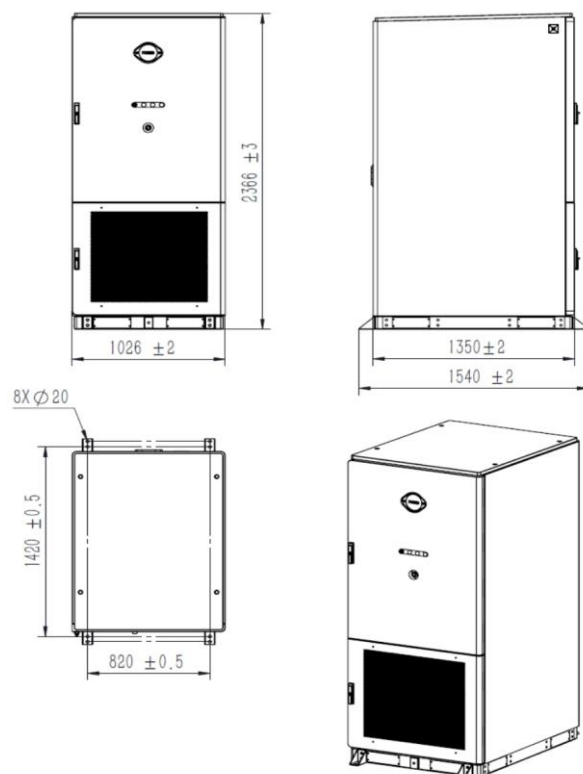

2.3 Components

Figure 2-2 Components (Door Closed)

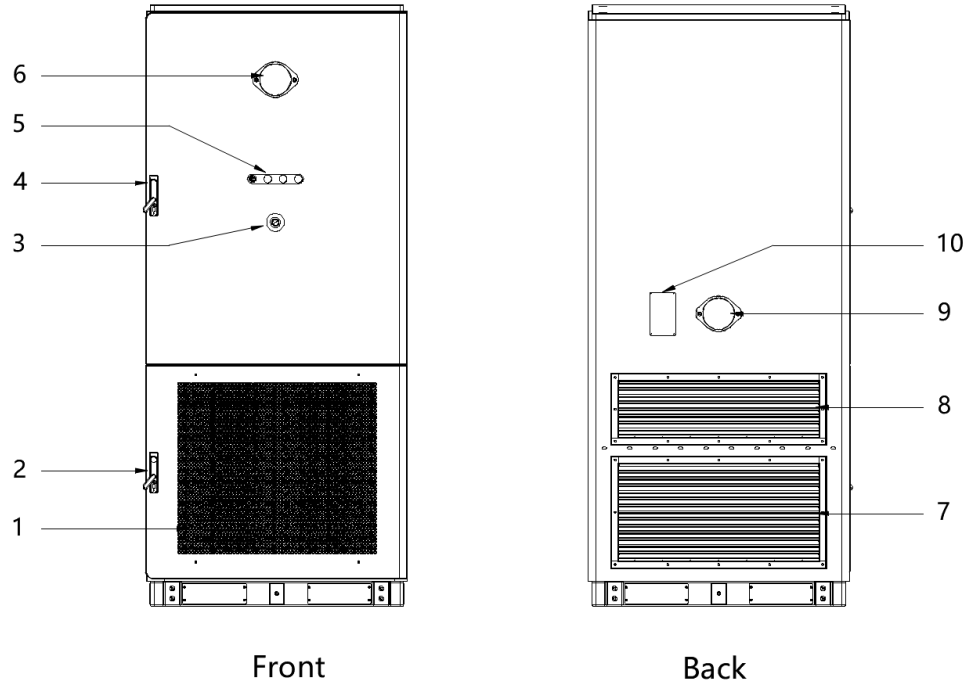
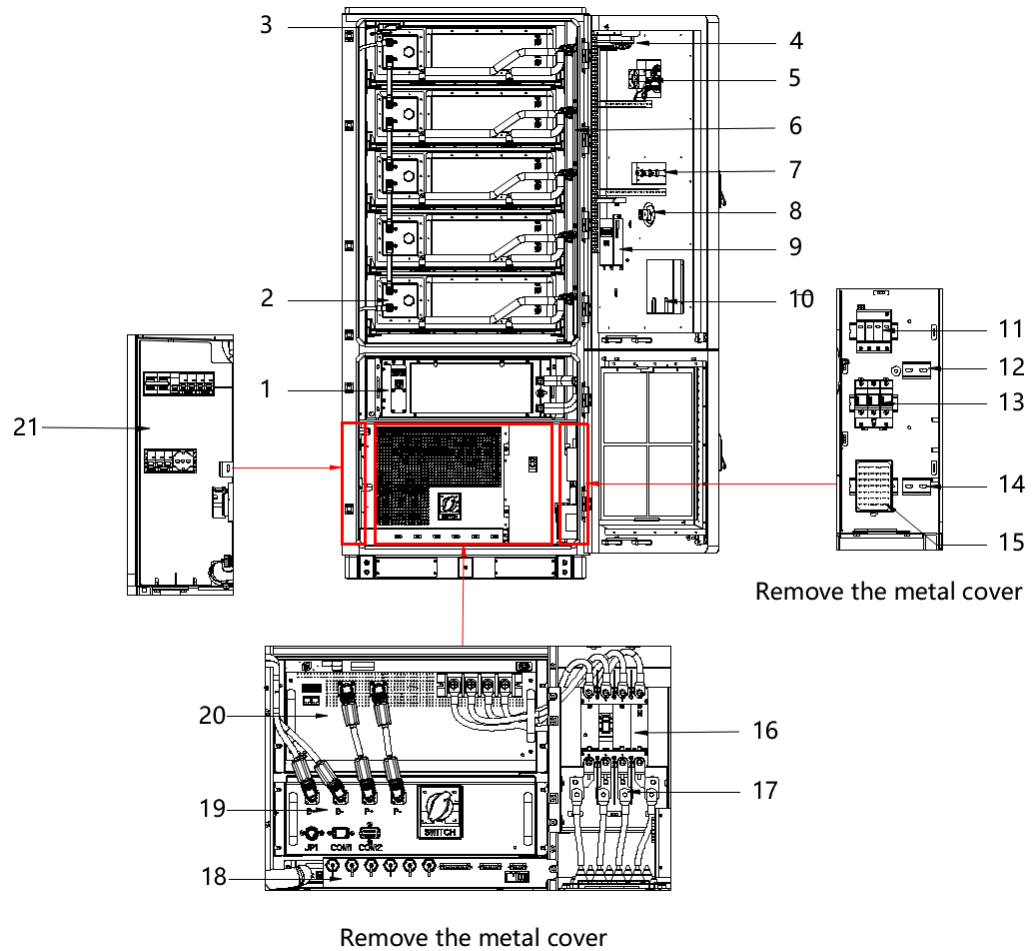


Table 2-1 Component (Door Closed)

No.	Item	Description
1	Air intake louver (Electrical cabin)	Used for air intake and heat dissipation of electrical components such as PCS, liquid cooling units, and high-voltage box.
2	Door lock for electrical cabin	Door lock for electrical cabin
3	Emergency stop switch	For system emergency stops
4	Door lock for battery cabin	Door lock for battery cabin, with a padlockable design
5	Buzzer and indicator light	Indicate system alarm status
6	Exhaust device for battery cabin	Exhaust combustible gases from the battery cabin
7	Air exhaust louver (PCS cabin)	Used for exhaust and heat dissipation of electrical components such as PCS and high-voltage boxes.
8	Air exhaust louver (Liquid cooling units)	Used for exhaust and heat dissipation of liquid cooling units.
9	Air intake device for battery cabin	Helps expel flammable gases from the battery cabin.
10	Nameplate	Displays system information of the energy storage cabinet

Figure 2-3 Components (Door Opened)

Table 2-2 Components (Door Opened)

No.	Item	Description
1	Liquid cooling unit	Heats or cools the battery cell
2	Battery pack	1P52S/314Ah-0.5P
3	Door limit switch	Monitors the battery cabin door status
4	Smoke detector, temperature sensor	Smoke detector: Detects the current concentration of smoke in the environment Temperature sensor: Detects the current ambient temperature
5	Exhaust device for battery cabin	Exhaust combustible gases from the battery cabin
6	Liquid cooling pipes	Serves as the circulation medium for liquid cooling
7	Buzzer and indicator light	Indicate system alarm status
8	Emergency stop switch	For system emergency stops
9	Dehumidifier	Reduces the environmental humidity in the cabinet
10	Document holder	Used for storing energy storage cabinet documentation
11	AC surge protection device	Surge protection for AC side

No.	Item	Description
12	Switch installation rail 1	Standard mounting position for the switch inside the cabinet
13	SPD fuse	Protects the surge protection device and its circuits
14	Reserved installation rail 2	Reserved installation location for switch and I/O module
15	Water sensor	Monitors water level inside the cabinet
16	AC side circuit breaker	Used to trip or close the AC circuits
17	Grid input busbar	Used for grid connection
18	Reserved ports	Reserved ports for on-site wiring and commissioning
19	High-voltage boxes	Monitors battery status and controls battery circuits
20	PCS	Used for bidirectional AC/DC conversion
21	Auxiliary distribution module	Used for the switch control of power components for AC220V and DC24V

2.3.1 Battery Pack

Figure 2-4 Battery Pack (Front View)

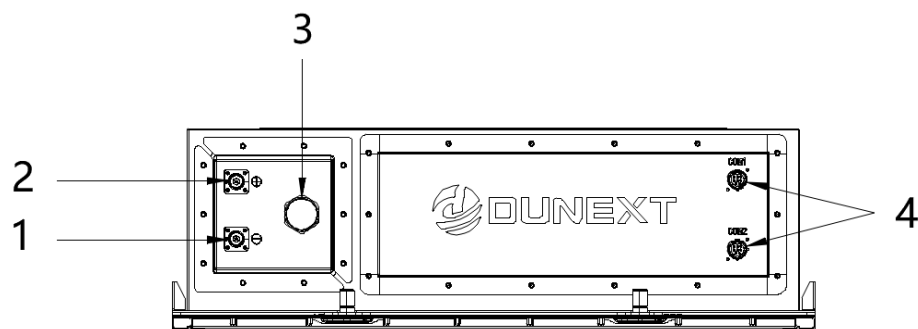


Table 2-3 Battery Pack (Front View)

No.	Item	Description
1	Negative connectors	Used for high-voltage connections between battery packs
2	Positive connectors	Used for high-voltage connections between battery packs
3	Explosion-proof valve	Used to relieve internal pressure from the battery pack
4	Communication ports	Used for communication between PACKs

Table 2-4 Battery Pack Parameters

Item	Battery Pack
Rated voltage	166.4V
Rated capacity	314Ah
Configuration	1P52S
Standard charging current	157A

Item	Battery Pack
Standard discharging current	157A
End of charge voltage	187.2V
End of discharge voltage	143V
Dimensions (W*D*H)	790*246*1145mm
Weight	347kg

2.3.2 High-voltage Box

Figure 2-5 High-voltage Box (Front View)

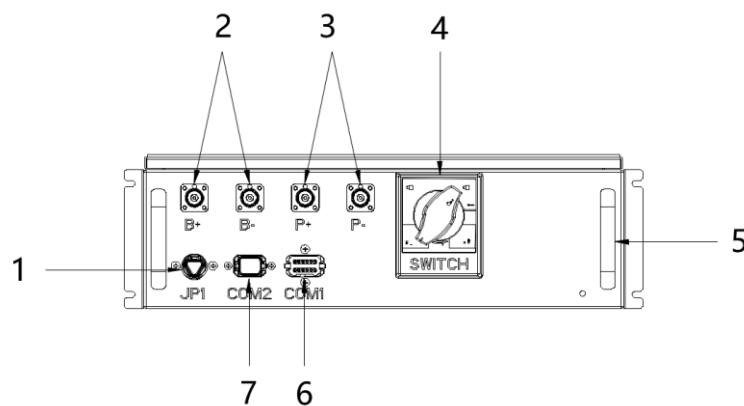


Table 2-5 High-voltage Box (Front View)

No.	Item	Description
1	JP1	AC 220V input
2	B+ / B- connectors	Connects to the total positive and total negative terminals of the battery cluster
3	P+ / P- connectors	Connects to the DC side of the PCS
4	Battery circuit switch	Used for opening/closing the DC circuit
5	Handle	High-voltage handle, used to pull out the control box during maintenance
6	COM2	24V power cable, BMS communication cable (EMS communication) and emergency stop dry contact
7	COM1	24V power cable, BMS communication cable (battery pack communication), and BMS commissioning cable

Table 2-6 High-voltage Box Parameters

Item	High-voltage Box
Operating voltage range	715~936V
Rated current	157A
Rated power	125kW
Dimensions (W*D*H)	562*167*918mm

Item	High-voltage Box
Weight	35kg

2.3.3 Power Conversion Module

The PCS (Power Conversion System) can control the charging and discharging processes of lithium batteries, enabling bidirectional AC/DC conversion.

Figure 2-6 PCS (Front View)

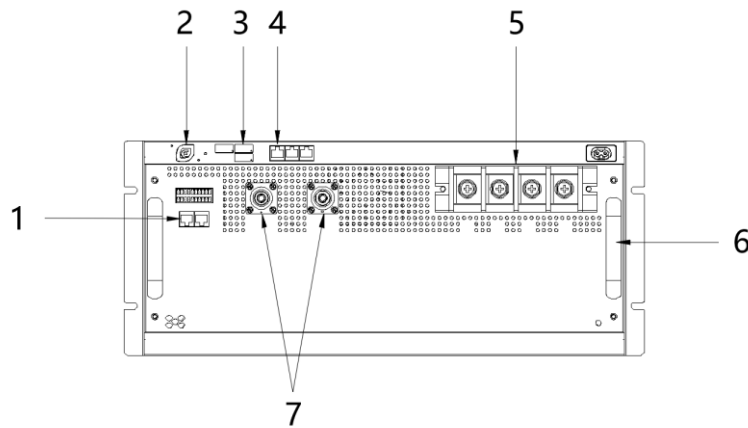


Table 2-7 PCS Description

No.	Description
1	Used for parallel operation of PCS or communication between PCS and STS
2	Displays the operating status of the PCS
3	Dial switch for module address
4	Communication interface with the EMS
5	Power connection port on the AC side
6	PCS handle, convenient for pulling out the unit during maintenance
7	Power connection port on the DC side

Table 2-8 PCS Parameters

Model		EPCS125-AM(-F)
DC Side	Operating DC voltage range	650~950V
	Maximum DC current	203A
AC Side	Rated operating AC voltage	230/400V
	Rated operating AC frequency	50/60Hz
	Rated operating AC current	200A
	Rated AC power	125kW
General	Dimensions (W*H*D)	520*232*785mm
	Weight	74.5kg

2.3.4 Liquid Cooling Unit

It is a refrigeration product developed specifically for applications such as heat dissipation of energy storage batteries. It is suitable for scenarios where the batteries inside the energy storage cabinet generate significant heat and the internal devices are sensitive to ambient temperature.

Figure 2-7 Liquid Cooling Unit (Front View)

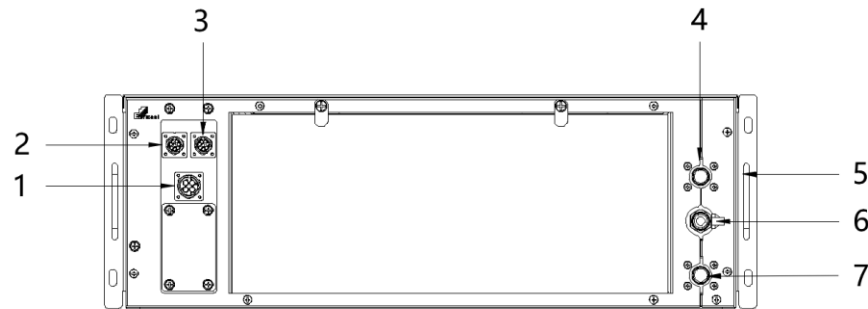


Table 2-9 Liquid Cooling Unit (Front View)

No.	Item	Description
1	Power port	For connection to the power supply
2	Commissioning port	For system commissioning of the liquid cooling unit
3	Communication port	For communication with the EMS
4	Coolant inlet	For connection to the coolant inlet port
5	Handle	Convenient for pulling out the unit during maintenance
6	Filling port	For connection to the coolant refill port
7	Coolant outlet	For connection to the coolant outlet port

Table 2-10 Liquid Cooling Unit Parameters

Item	Liquid Cooling Unit
Refrigerant	R513a
Refrigerating medium	50% ethylene glycol aqueous solution
Maximum power consumption	3.6kW
Rated operating voltage	220V
Dimensions (W*D*H)	700*245*900mm
Weight	75

2.3.5 Fire Suppression System

Figure 2-8 Position of the Fire Suppression System

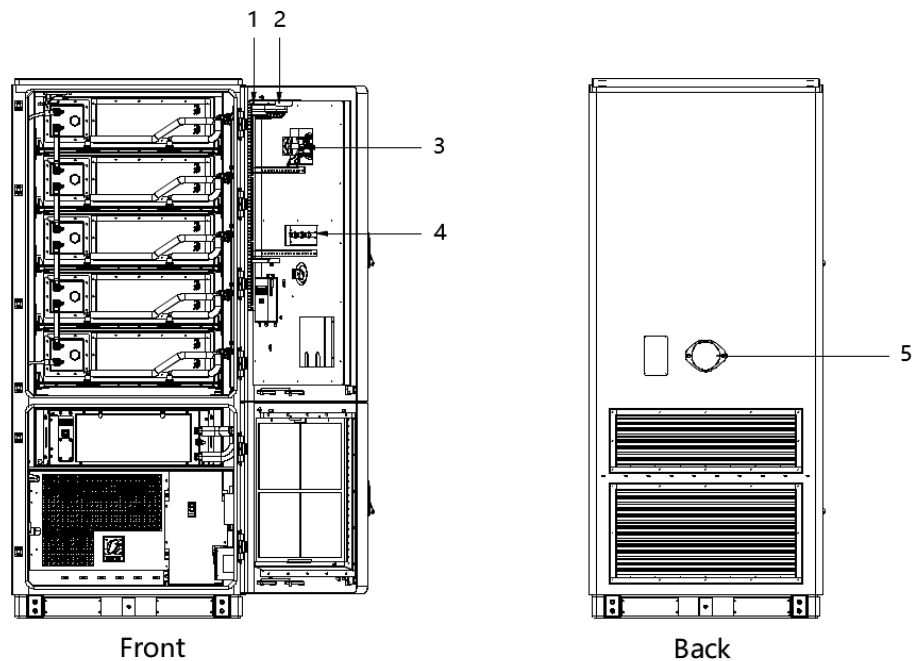


Table 2-11 Position of the Fire Suppression System

No.	Item	Description
1	Smoke detector	Detects the current concentration of smoke in the environment
2	Temperature sensor	Detects the current ambient temperature
3	Exhaust device for battery cabin	Exhaust combustible gases from the battery cabin
4	Buzzer	Indicates system alarm status
5	Air intake device for battery cabin	Helps expel flammable gases from the battery cabin.

2.3.6 EMS

The Energy Management System (EMS) serves as the central control hub of the energy storage system. It is responsible for real-time monitoring of equipment operating status, coordinating multi-energy collaborative operations, and optimizing energy distribution through intelligent strategies.

Its core capabilities include:

- Real-time acquisition of key parameters such as voltage, current, and State of Charge (SOC) of energy storage devices
- Dynamic management of the charging and discharging process to extend battery life
- Balancing load demand and energy supply

- Seamless integration with external systems via standardized communication protocols, enabling remote control and comprehensive data visualization

The EMS can be used in commercial and industrial energy storage scenarios such as peak-load shifting, self-consumption, dynamic capacity expansion, emergency backup power, and integrated PV-storage systems.


Table 2-12 EMS Description

No.	Item	Description
1	Control functions	Peak-load shifting, self-consumption, dynamic capacity expansion, emergency backup power
2	Communication ports	● 6 Ethernet ports (2 WAN, 4 LAN) ● 8 RS485 ports ● 2 CAN ports ● 16 digital inputs (DI) ● 8 digital outputs (DO)
3	Communication protocols supported	Modbus TCP, IEC 104, MQTT, etc.
4	Dimensions (W*D*H)	(210±2) * (165±2) * (44.5±2)
5	Weight	2

2.4 Working Principles

2.4.1 Circuit Diagram

Figure 2-9 Power Circuit and Auxiliary Power Circuit Electrical Diagram

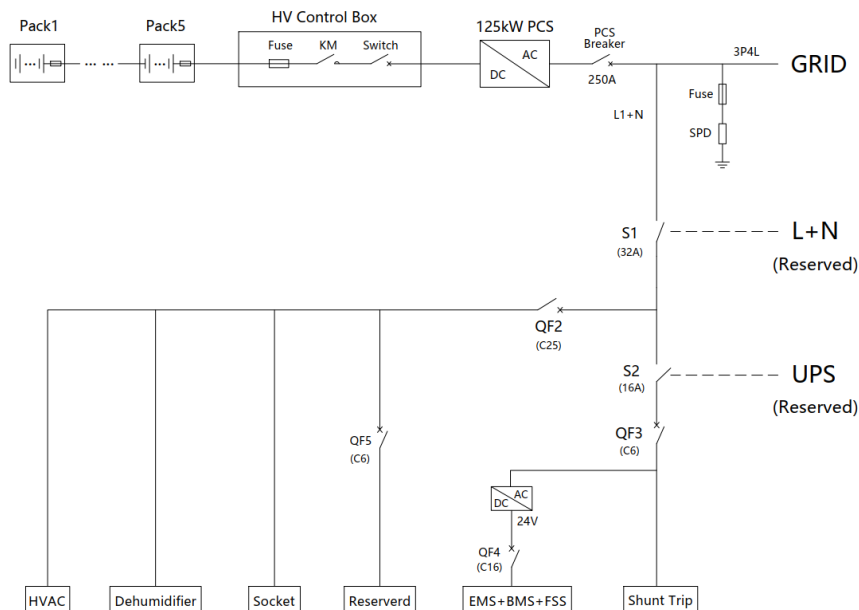

2.4.2 ESS Status

PowerHill-P125-261kWh has three operating states: Running, Alarm, and Fault.

Table 2-13 Operating States

State	Description
Running	The power circuit is operating normally for charge/discharge
Alarm	A general device alarm has been detected; normal operation can resume after the alarm is cleared
Fault	A critical fault related to safety has been detected; the system is shut down


2.5 Networking Applications

Distribution cabinets and external connection cables/ crimp terminals are provided by the customer.

2.5.1 On-grid Scenarios


The simplified electrical diagram for a single on-grid energy storage cabinet is shown below. For pure storage projects, ignore the PV section in the diagram.

Figure 2-10 Single BESS On-grid Electrical Diagram

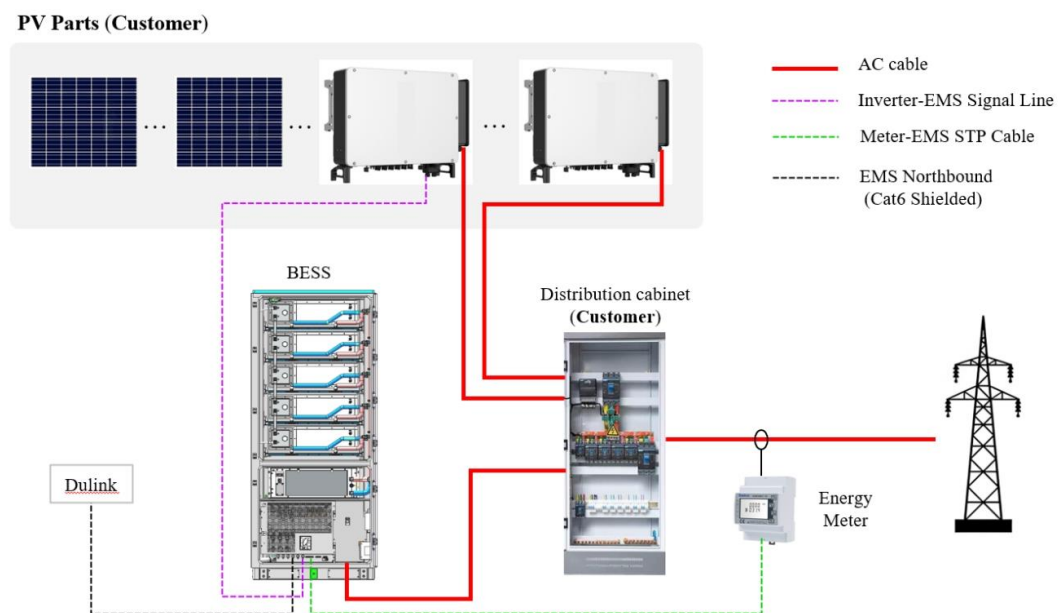

The simplified electrical diagram for multiple on-grid energy storage cabinets is shown below. For pure storage projects, ignore the PV section in the diagram.

Figure 2-11 Multiple BESS On-grid Electrical Diagram

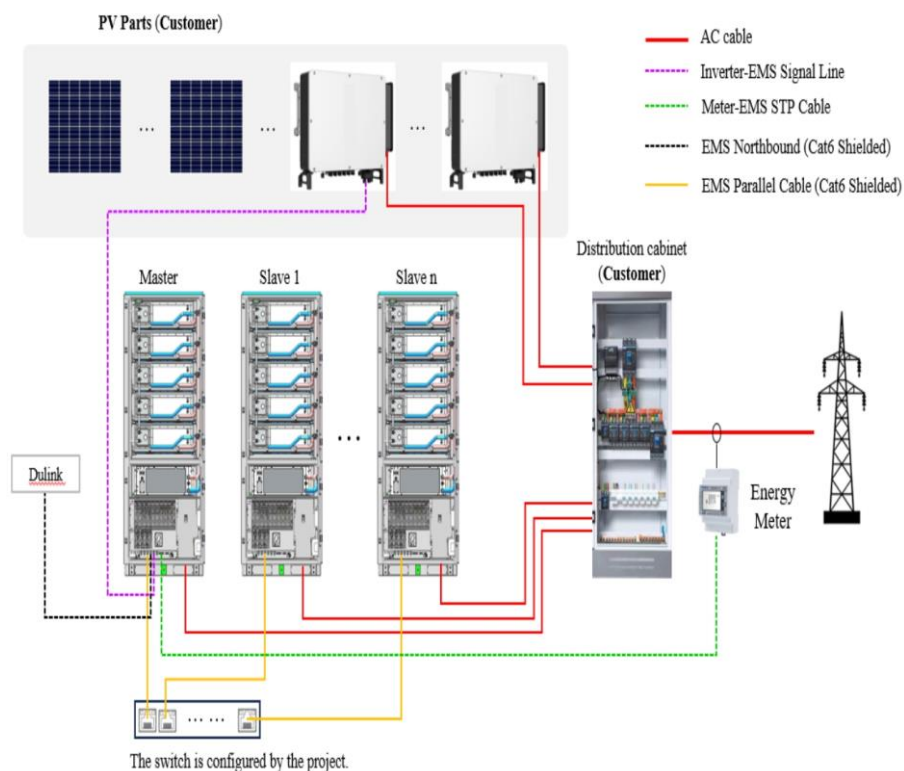

3

Storage Requirements

3.1 ESS Storage and Charging

If the energy storage cabinet is not installed immediately after successful delivery and commissioning, it shall be properly stored as described in this section.

1. Short-Term Storage Requirements

- To prevent condensation inside the energy storage cabinet or water immersion of the cabinet base during rainy seasons, the cabinet shall be stored indoors, such as in a large warehouse or workshop.
- If outdoor storage is unavoidable due to site constraints, the cabinet base must be raised. The specific lifting height shall be determined based on site-specific geological and meteorological conditions. Additionally, when the ambient temperature is too low, heating shall be provided for the internal components of the energy storage cabinet.
- Storage ambient temperature: -30°C to $+50^{\circ}\text{C}$; Storage ambient relative humidity: 0% to 95%, non-condensing.
- The cabinet shall be stored on a dry, level, solid ground with sufficient load-bearing capacity and free of any vegetation. The storage ground must be flat, free from standing water, and without any unevenness or undulation.
- During storage, the cabinet doors shall remain securely locked.
- Effective measures must be taken to prevent rain, dust, and other contaminants from entering the cabinet. At a minimum, the air intake and exhaust outlets of the cabinet shall be properly protected.
- Regular inspections shall be conducted. Inspections shall be carried out at least once every half month to check whether the cabinet and all internal components are intact and free from damage.

2. Long-Term Storage (≥ 3 months) Requirements

Environmental Upgrade

A constant temperature and humidity storage environment is recommended, with a stable temperature of 20°C to 30°C and a relative humidity of 40% to 60%. Large fluctuations in temperature and humidity are strictly prohibited.

Storage State of Charge (SOC) Threshold

The SOC of the battery during storage directly affects its lifespan.

For long-term storage, the SOC shall be maintained at $50\% \pm 5\%$. Both overcharging (SOC > 80%) and over-discharging (SOC < 15%) shall be avoided.

Periodic Maintenance Mechanism

A supplemental charge shall be performed every three months to maintain the SOC at $50\% \pm 5\%$.

Periodic Inspection Items

- Appearance: Check for deformation, leakage, and corrosion.
- Voltage Consistency: For multiple battery packs connected in series, the cell voltage difference shall be $\leq 8\text{mV}$ (to prevent the "bucket effect").
- BMS Status: Verify that the Battery Management System has no alarms and that communication is normal.

3.2 Charging Operation Instructions

Please refer to chapter 8.2 for details.

4 Site Requirements

4.1 Site Selection Requirements

NOTICE

NOTICE!

The ESS site selection and fire safety must comply with local laws and regulations.

4.1.1 General Requirements

- The installation level should be above the highest historical water level in the area and at least 300mm above ground level, and the installation location should not be in a low-lying area.
- The energy storage system or energy storage power station must be set up in an environment with no risk of ignition or explosion.
- The site has convenient transportation conditions and reliable fire suppression system equipment.



NOTE!

- The installation, commissioning and operation phases of the energy storage system should satisfy the principle of fire-fighting first: the number of gaseous fire extinguishers configured near each unit should be ≥ 2 , such as Heptafluoropropane, Perfluorohexanone and Carbon Dioxide.
- Meet the necessary site area in the near future, and should leave room for expansion according to the needs of the whole life cycle.
- The energy storage system should be installed at a

	location greater than 30m from third-party wireless communication facilities. ● Select a well-ventilated site. ● Site location should avoid scenarios that are not recommended by industry standards and regulations, including but not limited to the following lots, areas, and places: ➤ Areas with strong vibration, strong noise sources and strong electromagnetic field interference. ➤ Sites that produce or have dust, fumes, noxious gases, corrosive gases, etc. ➤ Places where corrosive, flammable and explosive substances are produced or stored. ➤ Places with existing underground facilities. ➤ Places with poor geology such as rubberized soil, weak soil, etc., and ground that is prone to water accumulation and subsidence. ➤ Underneath cisterns, water features, and water intake houses. ● If it is unavoidable to set up in a place where water may accumulate, water-blocking and drainage facilities or measures to raise the ground level should be installed. ● Cable trenches should not be used as drainage paths, and cable routing openings (e.g., holes where cables run through partition walls and floor slabs) should be sealed with fire-resistant blocking. ● Earthquake faults and seismic zones with an intensity of defense higher than 9 degrees. ● Lots with mudslides, landslides, quicksand, caves and other direct hazards. ● Within the boundary of mining trap (misalignment) area. ● Within the blasting hazard areas. ● Areas that may be flooded if a dam or dike breaks. ● Important sanitary protection areas for water supply sources. ● Historical relics and monuments protection zones. ● Personnel-intensive places, high-rise buildings, and underground buildings. ● Intersections of urban arterial roads and busy traffic sections.
--	--

4.1.2 Flood Prevention and Flood Control Requirements

- Large electrochemical energy storage system (power $\geq 100\text{MW}$) station area site design elevation should be higher than the flood water level with a frequency of 1% or the highest historical waterlogging level.
- The design elevation of the station area for small and medium-sized electrochemical energy storage systems (power $< 100\text{MW}$) shall be higher than the flood level with a frequency of 2% or the highest historical flood level.
- When the site design elevation of the station area cannot meet the above requirements, another site should be selected, or different flood prevention and flood control measures should be taken for different situations.
- For energy storage stations along rivers, streams, lakes and seas that are affected by wind and waves, the elevation of the flood prevention facilities should take into account a wind and wave height with a frequency of 2% and a safety over-height of 0.5m.
- When there is a large catchment of water at the periphery of the base that converges into or crosses the base, it is appropriate to set up side ditches or drainage (interception) ditches to carry out surface drainage in an organized manner.

4.1.3 Outdoor Requirements

General requirements for the siting of outdoor energy storage systems are as follows:

- The energy storage system or energy storage plant installation site and the surrounding 3m area shall be free of vegetation and flammable plants to prevent wildfires caused by high summer temperatures from causing fires in the energy storage system. (Exemption: single specimens of trees, shrubs, or cultivated ground cover that do not readily constitute a passing fire, such as green grass, ivy, succulents, or similar plants used as ground cover, shall be exempt.)
- The safe distance between the energy storage system and the building shall comply with local fire codes or standards.

Energy storage systems located outdoors shall be separated from boundaries, public roads, buildings, flammable materials, hazardous materials, high stockpiles, parking spaces, and other hazards not related to the grid infrastructure by a minimum of 10 feet (3.048m).

The distance between the energy storage system and the production building can be reduced to 0.914m when one of the following conditions is met, while space requirements for equipment transportation, installation, and maintenance need to be considered.

The energy storage system has a 1h fire-resistant independent firewall, and the length and height of the firewall should exceed the outer contour of the energy storage system by 1.5m each.

The walls in the vicinity of the energy storage system are provided with non-combustible exterior walls with no openings or combustible exterior finishes, and the exterior walls have a 2h fire resistance rating in accordance with ASTM E119 or UL 263.

The distance between the exhaust of the energy storage system and heating, ventilation, and air conditioning intakes, windows, doors, loading platforms, and sources of ignition of other buildings or facilities should be >4.6m.

The energy storage system will be corroded if it is installed in salt-affected or polluted areas, do not install the energy storage system in salt-affected or polluted areas. The energy storage system can be used in the following or better environments:

Outdoor environments greater than 10km from the coast. The use of the energy storage system is not recommended when the distance from the coast is 2km to 10km (if it is necessary to use it, please confirm with your dealer or our engineers). Outdoor deployment is not allowed when the distance from the coast is less than 2km, and indoor deployment should be performed according to indoor requirements.

Distance from heavy pollution sources such as smelters, coal mines, thermal power plants, etc. is more than 5000m.

Distance to medium pollution sources such as chemical, rubber, electroplating, etc. is greater than 3000m.


NOTE!

When the safety spacing of the selected site cannot meet the requirements of the relevant standards, it is recommended to select a new site.

Anti-trespassing fence:

It is recommended that the area of energy storage equipment be isolated and protected by solid walls or fences with door locks, and the height of the fences should be >2.2 meters, and the firewall can replace part or all of the fence, which can be considered by the designer.

4.2 Space Requirements


NOTE!

For all access and maintenance aisles shown in the figures below, forklift clearance should be considered, with dimensions adjustable to site requirements.

Figure 4-1 Space Requirements for 1 ESS

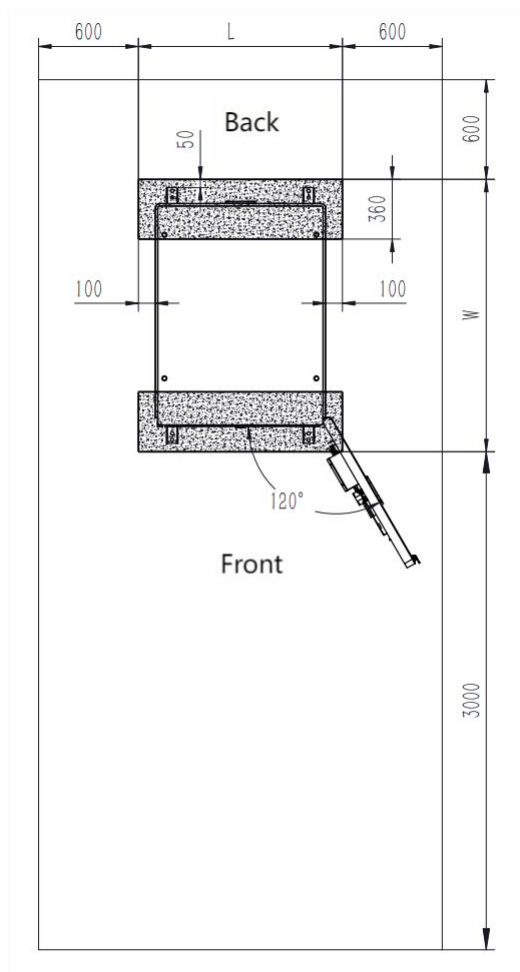


Table 4-1 Minimum Hardening Area for 1 ESS

Category	Parameter
Minimum Hardening Area	$L \geq 1226\text{mm}$, $W \geq 1640\text{mm}$

Figure 4-2 Space Requirements for 2 ESS

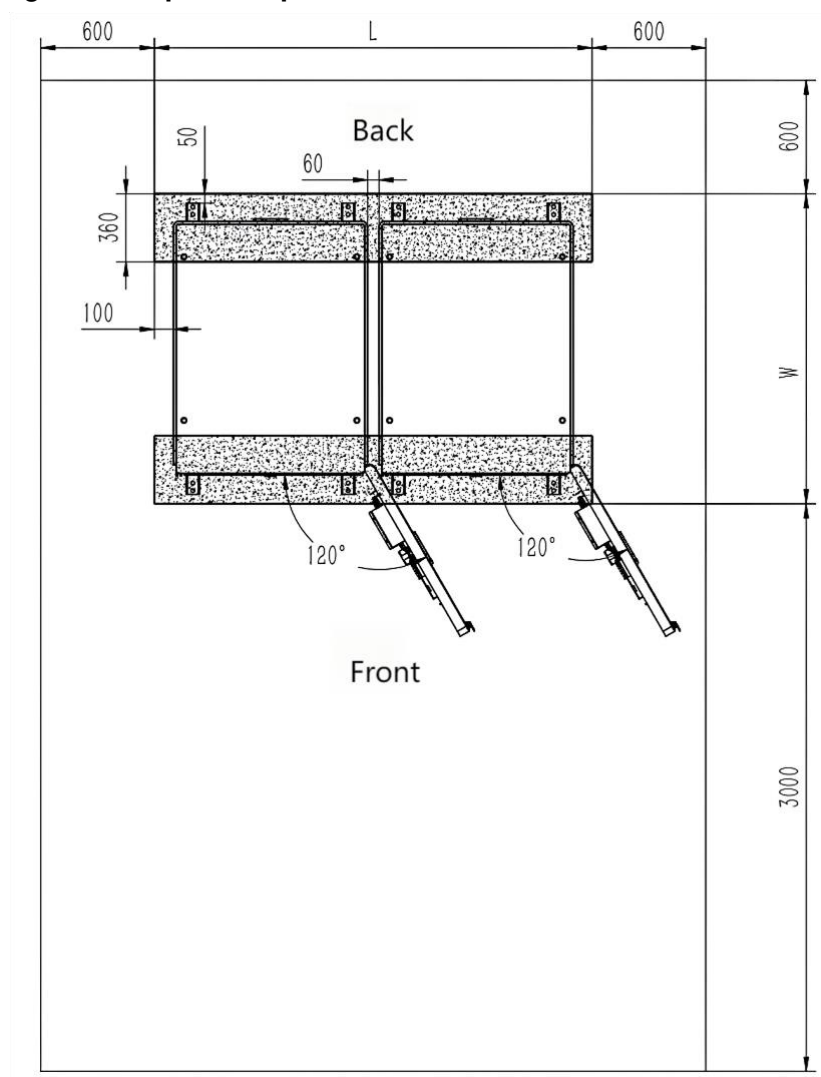


Table 4-2 Minimum Hardening Area for 2 ESS

Category	Parameter
Minimum Hardening Area	$L \geq 2312\text{mm}$, $W \geq 1640\text{mm}$

Figure 4-3 Space Requirements for 2 ESS (Back-to-back Installation)

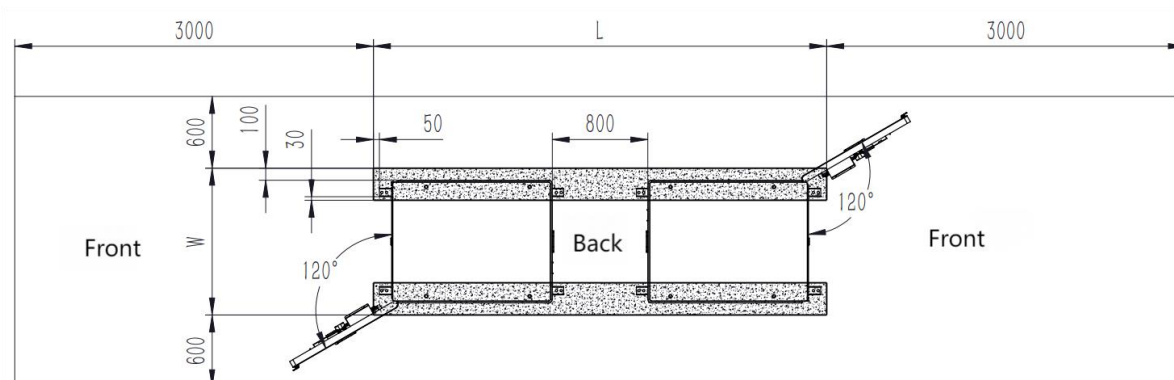


Table 4-3 Minimum Hardening Area for 2 ESS (Back-to-back Installation)

Category	Parameter
Minimum Hardening Area	$L \geq 3790\text{mm}$, $W \geq 1226\text{mm}$

Figure 4-4 Space Requirements for 3 ESS

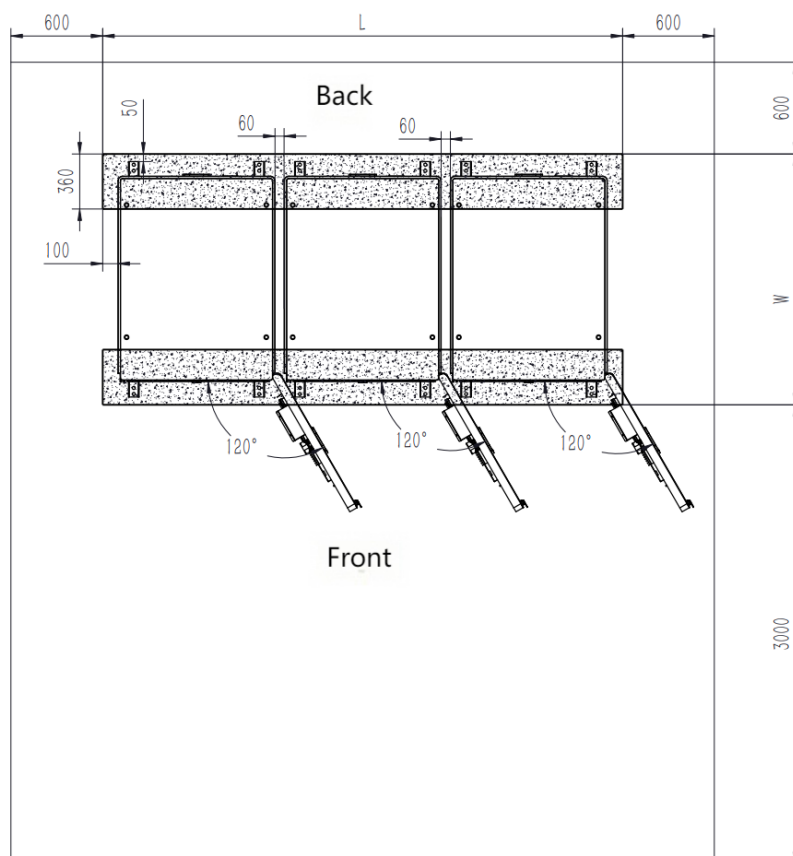
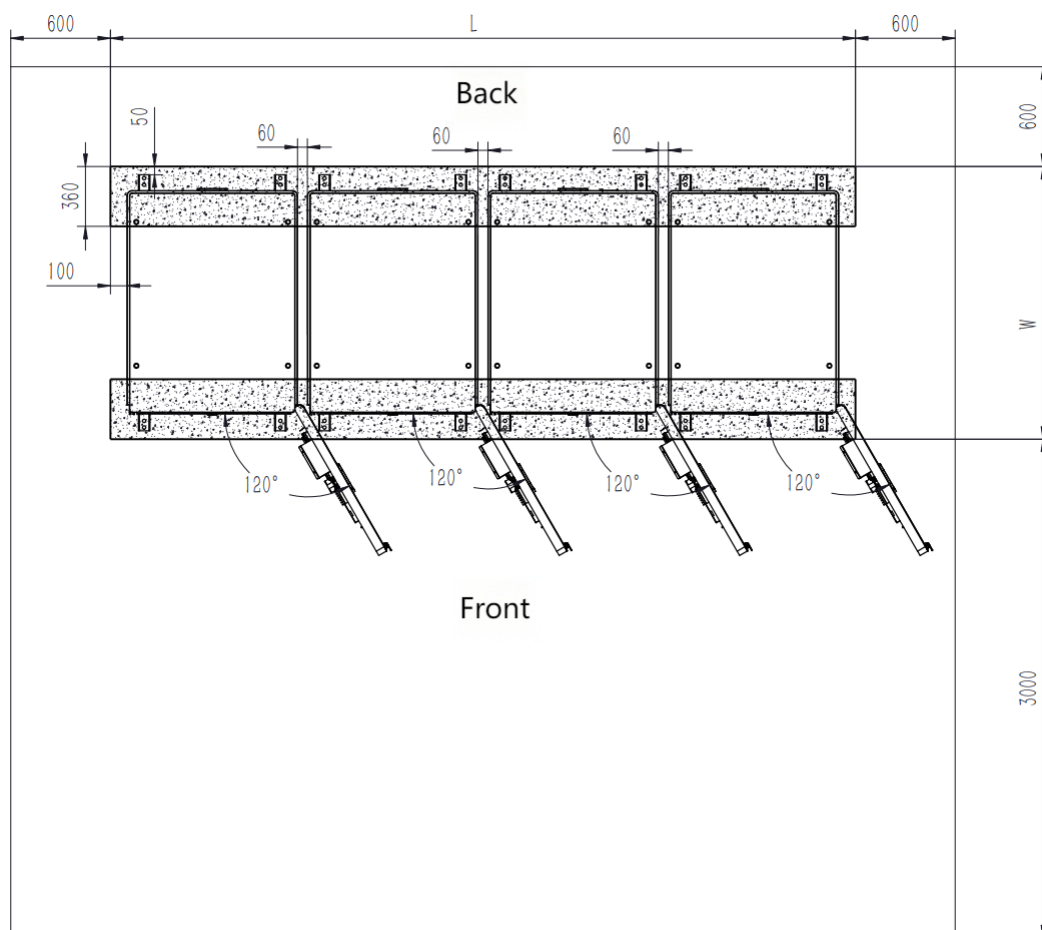
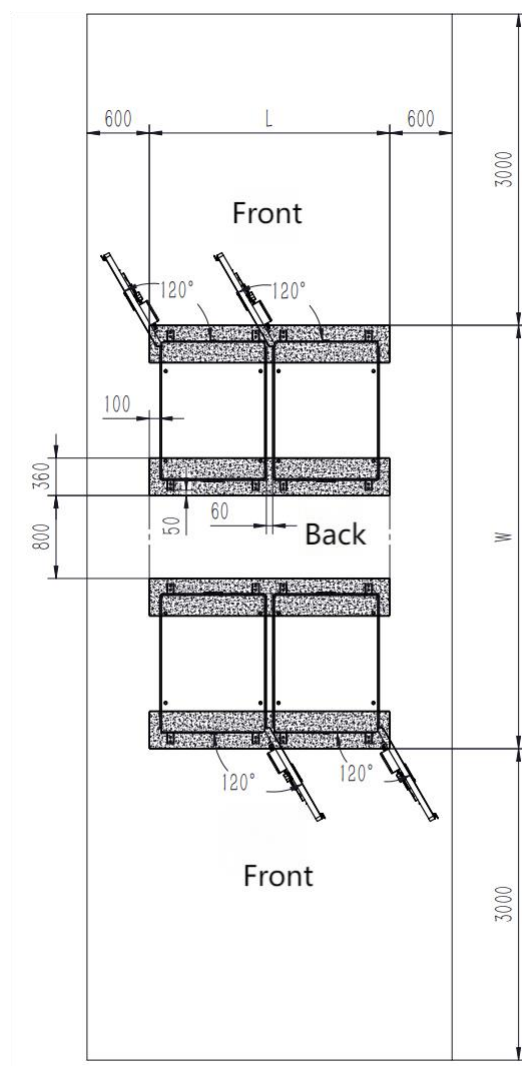


Table 4-4 Minimum Hardening Area for 3 ESS

Category	Parameter
Minimum Hardening Area	$L \geq 3398\text{mm}$, $W \geq 1640\text{mm}$

Figure 4-5 Space Requirements for 4 ESS

Table 4-5 Minimum Hardening Area for 4 ESS

Category	Parameter
Minimum Hardening Area	$L \geq 4484\text{mm}$, $W \geq 1640\text{mm}$




Category	Parameter
Minimum Hardening Area	L≥1640mm, W≥4080mm

- The energy storage system must be installed on concrete or other non-combustible surfaces, and must ensure that the installation plane is level, firm, and flat, with sufficient bearing capacity, and depressions or tilts are prohibited.

- Equipment foundations are configured according to the total weight of the equipment, and need to be reviewed when the load-bearing capacity of the foundation is not satisfied.
- The bottom of the pit of the equipment foundation must be compacted and filled.
- Equipment foundations should not be disturbed by soaking water after excavation, and should continue to be excavated and refilled if disturbed by soaking water.
- The leveling error of the contact surface between the equipment foundation and the cabinet is $\leq 3\text{mm}$.
- The foundation must be higher than the highest water level in local history and at least 100mm above the horizontal ground.
- Drainage facilities shall be constructed in accordance with the local geology and municipal drainage requirements to ensure that no water accumulates at the foundation of the equipment.
- The foundation should be constructed to meet the local historical maximum rainfall drainage requirements, and the discharged water should be disposed of in accordance with local laws and regulations.
- When constructing the equipment foundation, consider the cable outlet of the energy storage system, and reserve a trench or a hole for the cable.
- The holes reserved for the equipment foundation and the inlet holes at the bottom of the equipment should be blocked.
- The foundation drawing cannot be regarded as the final construction drawing and is for reference only, please contact our product manager for details. Users should review the foundation design parameters of the energy storage system according to the installation environment, ground bearing capacity, geological conditions and seismic requirements of the project site.

Figure 4-7 Foundation Diagram

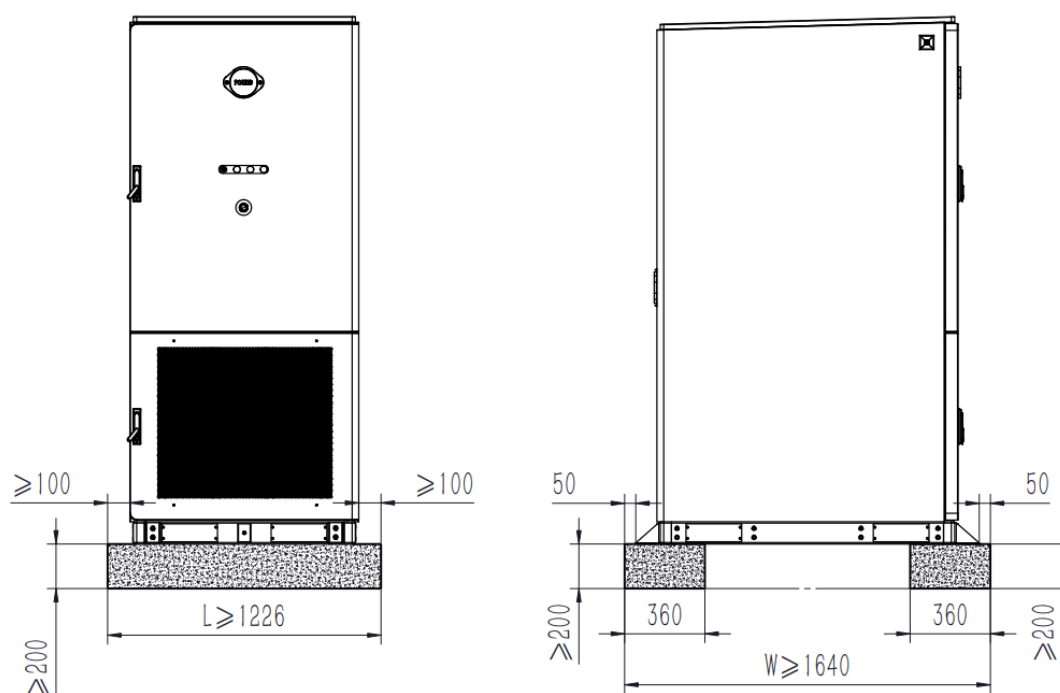

NOTE!

L indicates the width of the mounting surface of a single cabinet, W indicates the depth of the mounting surface of a single cabinet, the site can be prepared in advance of the steel shims, the cabinet mounting base levelling.

Table 4-7 Foundation Diagram

Category	Parameter
Minimum Hardening Area	$L \geq 1226 \text{ mm}$, $W \geq 1640 \text{ mm}$
Installation Foundation Height	$H \geq 200 \text{ mm}$ (above the highest historical flood level)
Install Foundation Loading Capacity	Loading Capacity $> 3 \text{ T} / \text{m}^2$
Service Life of the Foundation	$\geq 20 \text{ years}$
Leveling of the Foundation	3 mm/m^2

5 Unpacking and Acceptance

Precautions & Inspection Items

The integrated energy storage system has been thoroughly inspected and securely packaged by our staff prior to shipment. However, collisions or damage may still occur during transportation. Upon receipt of the equipment, it is essential to inspect the integrity and condition of the shipment. At a minimum, the following items should be carefully verified:

- Check all delivered components against the "Scope of Supply" to ensure completeness.
- Confirm that the received integrated energy storage system and internal devices match the model and specifications of your original order.
- Carefully inspect the system and its internal devices for any damage that may have occurred during transportation.

If any issues are found or if you have any concerns during the inspection, please contact the carrier or Dunext immediately.



WARNING!

Only integrated energy storage systems that are complete and undamaged may be installed and put into trial operation!

Before beginning installation, please ensure the following:

The energy storage system itself is intact and free of any damage.

All internal devices within the system is in good condition and undamaged.

6 Product Installation

6.1 Preparation Before Installation



6.1.1 Preparing Tools










The tools shown in the picture are for reference only, please refer to the physical object.

Due to the different site conditions, this tool list cannot completely list a few tools that may be used, site installers and users please prepare the unlisted tools according to the actual situation.

Table 6-1 Installation Tools

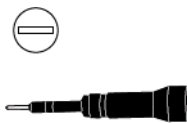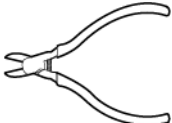 Phillips Insulated Torque Screwdriver	 Insulated Torque Socket Wrench (Including extension bar) ● Socket specifications: 7mm~19mm ● Socket depth ≥ 32mm ● Sleeve interface and torque ● Matching with torque wrench ● Torque range: 1.2N-m~45N-m	 Slotted Insulated Torque Screwdriver	 Diagonal Nose Pliers
--	--	--	---

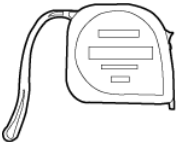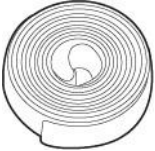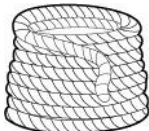 Wire Strippers Pliers	 Wire Cutting Pliers	 Rubber Hammer	 Knife
 Crystal Head Crimping Pliers	 Hydraulic Pliers	 Multi-meter DC Voltage Range $\geq 1500V$ DC	 Marking Pen
 Steel Tape Measure	 Horizontal Ruler	 Vacuum Cleaner	 Impact Drill
 Impact Drill $\Phi 16mm$	 Heat Shrink Tubing	 Hot Air Gun	 Wire Tie
 Insulation Ladder	 Crane	 Lanyard Rope Rope length $\geq 1,845mm \times 4$	 Electric Forklift

 Manual Forklift	-	-	-
--	---	---	---

Table 6-2 Personal Protection Tools

 Insulated Gloves	 Protective Gloves	 Goggles	 Dust Mask
 Insulated Shoes	 Reflective Undershirt	 Safety Helmet	 Safety Belt

6.1.2 Inspection Before Installation

Package Inspection

Before unpacking the outer packaging of PowerHill-P125-261kWh, check the package for visible damage such as holes, cracks, or other signs of possible internal damage, and verify the product model number. If there are any package anomalies or if the product model number does not match, do not unpack it and contact your dealer as soon as possible.


NOTE!

It is recommended to remove the outer packaging within 24 hours prior to equipment installation.


WARNING!

When removing the outer packaging, please take precautions for overhead operation.

Delivery Parts Inspection

After unpacking the device, please check that the delivery parts are complete and that there is no visible external damage. If any items are missing or there is any damage, please contact your dealer.


NOTE!

For the number of delivery parts dispatched with the box, please refer to the Packing List inside the package. Please keep the key properly after use. After opening the package, please check the delivery parts and quantity of the package according to the Packing List, if there are any missing parts, please contact your dealer as soon as possible.

6.2 ESS Installation

Transportation Requirements

All devices inside the outdoor ESS are pre-installed and securely fastened before delivery. The ESS should be transported as a whole using lifting equipment.


WARNING!

During the entire loading, unloading, and transportation process, local outdoor cabinet safety regulations must be followed.

All machinery used for handling the cabinet must be well-maintained.

All personnel involved in loading, unloading, and securing must be properly trained, especially in safety protocols.


CAUTION!

Keep the mechanical parameters of the outdoor battery cabinet in mind throughout transportation.

Conditions for Moving the Cabinet:

All cabinet doors must be locked.

Choose an appropriate crane or lifting equipment according to the site conditions. Ensure it has sufficient load-bearing capacity, boom length, and swing radius.

Additional traction equipment may be required if moving on slopes.

Remove all actual or potential obstacles in the transport path, such as trees or cables.

	Preferably conduct transport operations in good weather. Warning signs or barriers must be installed to prevent unauthorized personnel from entering the lifting area.
--	--

Forklift Transport

If the installation site is flat, a forklift can be used. The cabinet base has fork holes for this purpose. Remove the protective plates covering the fork holes before use. Reinstall them after installation is complete.

Forklift Transport Requirements:

- The forklift should have a load capacity of at least 4 t.
- Forks should be at least 1500 mm long and inserted into the designated fork holes on the cabinet base (see figure below for red-circled locations).
- Transport and placement should be slow and stable. Test runs are recommended.
- The cabinet must only be placed on a stable, level surface that is well-drained and obstacle-free.
- The cabinet should be secured using the four corner mounting brackets.

Figure 6-1 Fork Holes

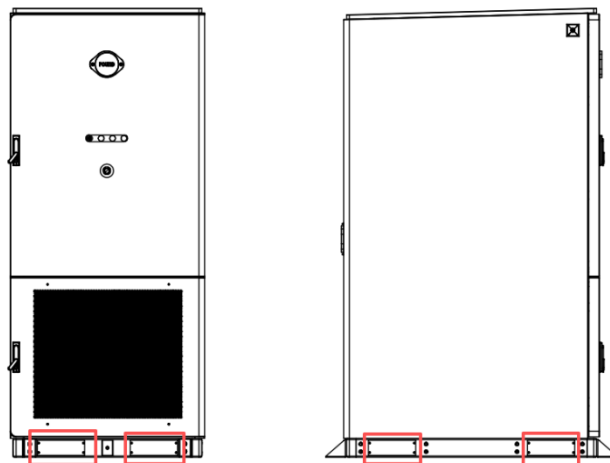


Figure 6-2 Forklift Requirements


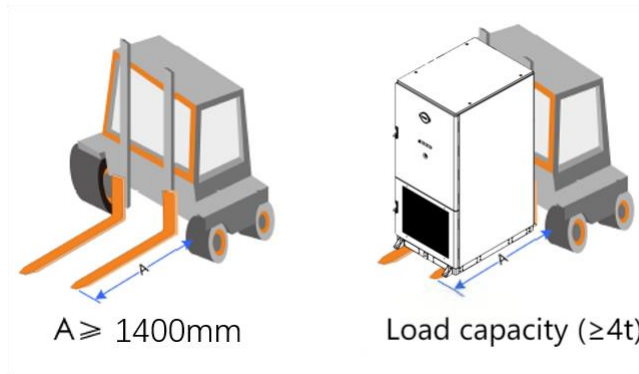


Figure 6-3 Forklift Transport Requirements

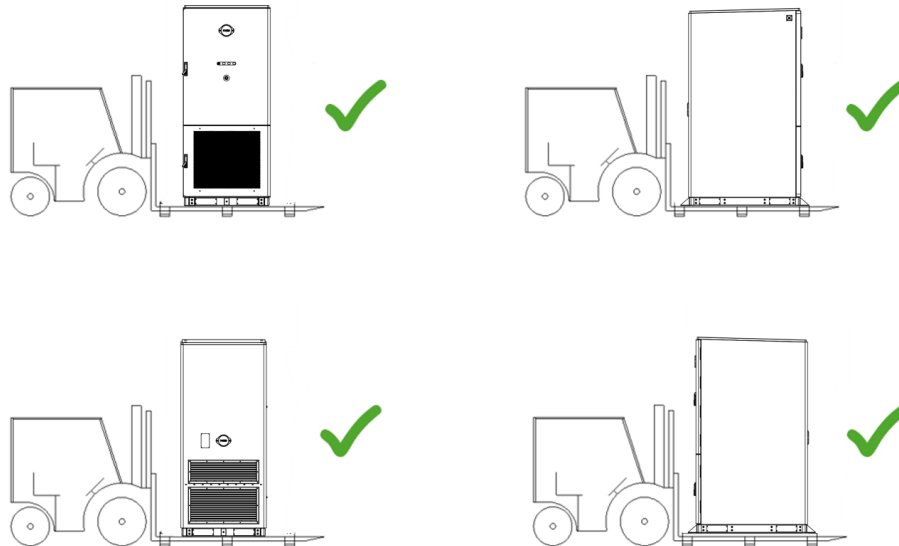

Note: the figure above is for reference only.

Crane Transport

Lifting Precautions



WARNING!

Operate the crane strictly in accordance with its safety operation manual.

No personnel are allowed within a 5-10 m radius of the operating area, especially under the boom or lifted equipment.


Lifting must stop in extreme weather such as heavy rain, fog, or strong winds.

Lifting Requirements:

- Ensure on-site safety during the entire lifting process.
- A professional must supervise the entire lifting and installation process.
- The lifting straps must be strong enough to support the cabinet weight.
- Ensure all strap connections are secure and that all segments are of equal length.
- Adjust strap lengths as necessary according to site conditions.
- The cabinet must be lifted smoothly and without tilting.
- Use all four lifting eyes on the cabinet.
- Take all necessary auxiliary measures to ensure safe and smooth lifting.

The figure below illustrates the crane's working range. The inner dashed circle indicates the crane's operation area; no personnel should be inside the outer solid circle during operation.

Figure 6-4 Crane Working Range

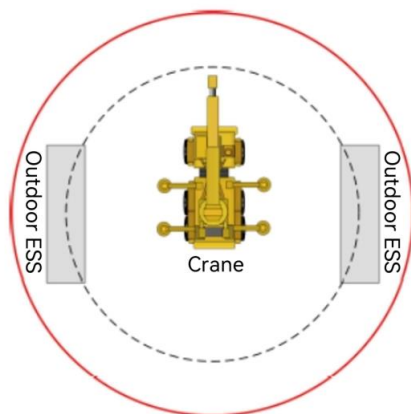

Fasten the Lifting Eyes


Top Lifting Eye Installation: The lifting eyes are shipped as accessories and must be installed before lifting.

Installation Requirements:

- Check the lifting eye specifications: M24, Grade 12.9 carbon steel, free of cracks, deformation, or thread damage. The installation hole must be perpendicular to the surface and deep enough for the entire thread.
- Recommended tightening torque: 1100 N·m (tighten in steps: initial 550 N·m → second 880 N·m → final 1100 N·m), with 5-minute intervals to release stress. Mark the bolt and contact surface after final tightening.
- Use a calibrated torque wrench ($\pm 3\%$ accuracy) and record torque values.
- Apply thread-locking adhesive to the thread before installation to prevent loosening.

- The lifting eye should be perpendicular to the lifting direction to avoid side forces (see figure below).

Figure 6-5 Lifting Eye Direction

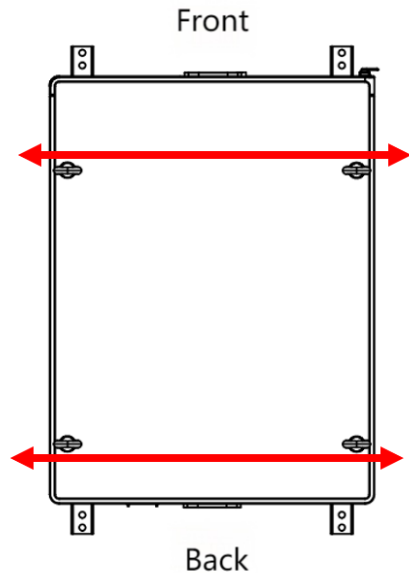

- Post-installation Inspection: Ensure there are no cracks, deformation, or thread damage, and that the anti-loosening marks align.

Lifting straps with hooks or U-hooks can be used.

The lifting device must be correctly connected to the cabinet.

Table 6-3 Lifting Position and Precautions

Lifting Position	Lifting Eye	U-type Lifting Eye
Image		
Remarks	Hooks must be placed from inside to outside (not vice versa)	Horizontal pins must be tightened.



WARNING!

Never lift the cabinet from the fork holes.

Always comply with the safety standards and regulations of the destination country/region.


The company assumes no responsibility for personal injury or property loss resulting from violations of these requirements or other safety standards.

Lifting Procedure:

- Always lift the cabinet vertically. Dragging on the ground or across other cabinets is strictly prohibited.
- After lifting the cabinet 300 mm off the ground, pause and inspect the connections before proceeding.
- Place the cabinet down gently and ensure it lands stably. Do not swing the straps to position the cabinet outside the vertical drop area.
- The cabinet should be placed on a solid, flat, well-drained surface free from obstructions or protrusions. Secure the cabinet using its four corner brackets.

If vertical lifting is not possible due to site limitations, lift from the four lifting eyes using angled force as required.

Figure 6-6 Lifting Angle

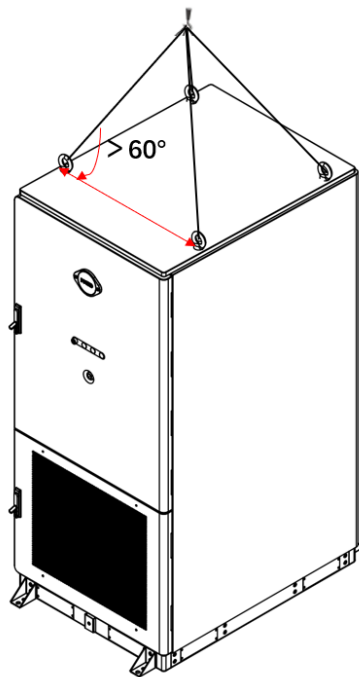


Note: The figure above is for reference only; please refer to the actual delivered equipment.

Fixed Installation

After confirming that the foundation meets requirements and is dry, solid, and level, lift and place the cabinet in the designated position.


Use anchor bolts to fasten the L-shaped steel brackets at the cabinet base to the foundation. Refer to the figure below for the bracket locations.

Figure 6-7 L-shaped Steel Bracket Location (Top View)

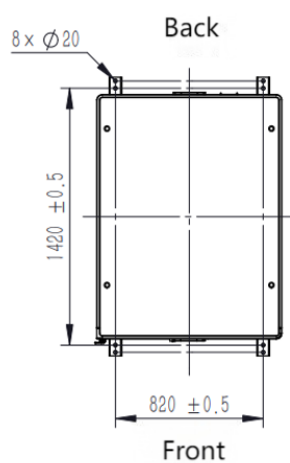

Each L-shaped steel bracket has two oblong holes (diameter: 20 mm). Use M16 bolts.

Figure 6-8 L-shaped Steel Bracket Fastening

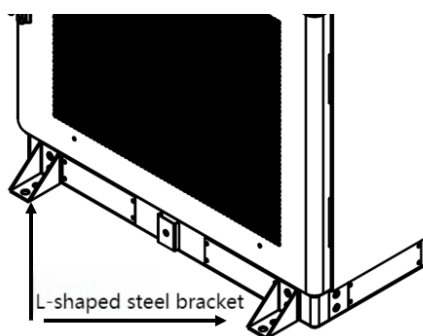

After fastening, apply rust protection (e.g., rustproof paint) to the brackets.

7

Cables Installation

7.1 Cable Preparation

Product Model	Rated Current (A)	Cable Type	Cable Material	Cross-section Area (mm ²)	Terminal	Remarks
PowerHill-P125-261k Wh	181A	L1, L2, L3	Copper	70	SC 70-8	Supports cable entry for cables up to 95 mm ² .
			Aluminum	95	SC 95-8	
		Neutral	Copper	35	SC 35-8	If there are big single-phase loads, and the three-phase load imbalance are huge, it is recommended that the cross-section area of the Neutral Cable be the same as that of L1, L2, L3.
			Aluminum	50	SC 50-8	
		Ground	Copper	35	SC 35-6	/
			Aluminum	50	SC 50-6	
	/	PCS-STP Parallel Communication Cable	Shielded CAT6 Cable	/	Shielded RJ45 Connector	/
		RS485	Shielded Twisted Pair Cable	≥1.0	/	Characteristic Impedance: 120Ω
		Network Cable	Shielded CAT6 Cable	/	Shielded RJ45 Connector	Internal resistance ≤ 1.5Ω/10m

Product Model	Rated Current (A)	Cable Type	Cable Material	Cross-section Area (mm ²)	Terminal	Remarks
		UPS Power Cable	Copper	≥1.5	/	

Cable selection shall comply with local cable standards. Factors affecting cable selection include: current-carrying capacity, cable type, installation method, ambient temperature, and maximum allowable line losses. Copper busbars are reserved inside the cabinet. If aluminium cables are used, ensure proper copper-to-aluminium transition connections.

Routing Recommendation:

- Cables should enter the cabinet from the bottom via cable trenches.
- The cabinet base is equipped with removable panels for easy cable threading during installation.
- It is recommended that low-voltage signal cables, communication cables, and AC power cables be routed separately.
- The accessory box includes various types of cable entry panels and cable glands, which can be replaced according to on-site requirements.

Figure 7-1 Cable Position

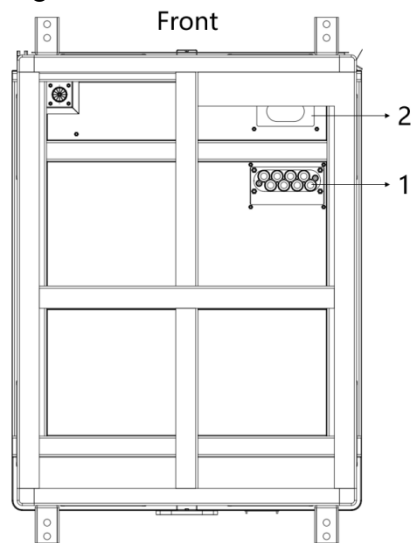


Table 7-1 Cable Position


No.	Cable	Remarks
1	AC Cable (Grid)	Upon completion of cable installation, fill and seal the hole with fireproof putty for fire containment, and to prevent the ingress of snakes, insects, rodents and pests.
2	PCS-STP Parallel Communication Cable (if applicable)	
	EMS Parallel Cable	
	External 230 V power supply cable (if applicable)	

No.	Cable	Remarks
	485 Communication Cable	

7.2 Grounding Cable Installation

System Connection Method: 3W+N+PE

Figure 7-2 Grounding Point Location

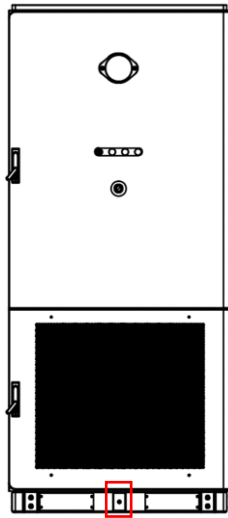

Grounding Points: Designed on the front and rear of the system chassis near the leveling feet.

BESS Grounding: A repeated grounding connection is required for the BESS in the power distribution network, with a grounding impedance $\leq 4\Omega$.

7.3 Reserved Port Wiring

The pin definitions and cable requirements for the ESS's reserved ports are listed in the table below. Refer to the port silkscreen labels and wiring figure for details.


Table 7-2 Reserved Port Description

Port	Terminal	Recommended Cable	Function	Wiring Scenario
RJ45 Port	Para1	Shielded CAT6 Cable	When PCC cabinet is configured: During multi-cabinet parallel operation, communication between the PCS in this cabinet and the PCS in the previous cabinet, or communication between the PCS in this cabinet	When PCC cabinet is configured

Port	Terminal	Recommended Cable	Function	Wiring Scenario
			and the STS in the PCC cabinet.	
	Para2	Shielded CAT6 Cable	When PCC cabinet is configured: During multi-cabinet parallel operation, communication between the PCS in this cabinet and the PCS in the next cabinet.	When PCC cabinet is configured
	LAN2	Shielded CAT6 Cable	For information exchange between EMS systems during multi-cabinet parallel operation	When multiple cabinets are operating in parallel
	LAN3	Shielded CAT6 Cable	Reserved third-party dispatching interface	ALL
	LAN4	Shielded CAT6 Cable	EMS connection to the external network for DuLink access	/
-06-X31	1, 2	Conductor cross-section $\geq 1.5 \text{ mm}^2$	Reserved 230Vac power supply	/
	3, 4	Conductor cross-section $\geq 1.5 \text{ mm}^2$	Reserved external UPS 230Vac power supply input	/
-06-X41	1, 2	One pair of twisted wires, conductor cross-section $\geq 0.5 \text{ mm}^2$	External fire alarm dry contact signal input to EMS	/
	3, 4	One pair of twisted wires, conductor cross-section $\geq 0.5 \text{ mm}^2$	Fire alarm output from the energy storage cabinet	/
	5, 6	CAN: Shielded twisted pair	Reserved BMS debug port	For debug only
-06-X42	1, 2	RS485: Shielded twisted pair, cable size based on distance	Reserved PV-EMS 485 port	/
	3, 4	RS485: Shielded twisted pair, cable size based on distance	Reserved grid meter-EMS 485 port	/
	5, 6	RS485: Shielded twisted pair, cable size based on distance	Reserved EMS 485 port	/

Port	Terminal	Recommended Cable	Function	Wiring Scenario
	7, 8	RS485: Shielded twisted pair, cable size based on distance	Reserved EMS 485 port	/
	9, 10	Conductor cross-section $\geq 0.5 \text{ mm}^2$, External device power $\leq 30\text{W}$	Reserved 24Vdc power supply port	/
	11, 12	One twisted pair, conductor cross-section $\geq 0.5 \text{ mm}^2$	Reserved D08	/


Figure 7-3 Reserved Port Silkscreen and Wiring

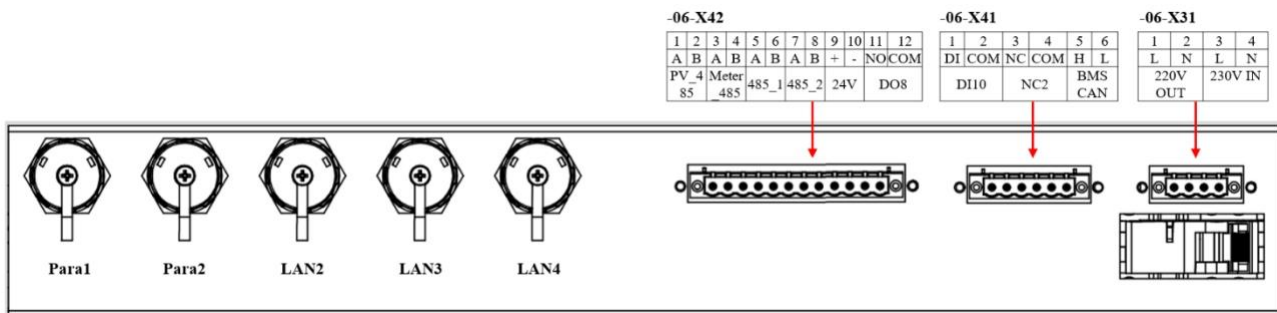

7.3.1 Parallel Wiring of Multiple PCS

For parallel operation of multiple C&I BESS units with a PCC cabinet, connect the PCS and STS communication cables as shown below. Ensure that the distance from the PCC cabinet to the farthest C&I energy storage cabinet is $\leq 10 \text{ m}$.

Figure 7-4 PCS and STS Communication Wiring for C&I BESS + PCC Application

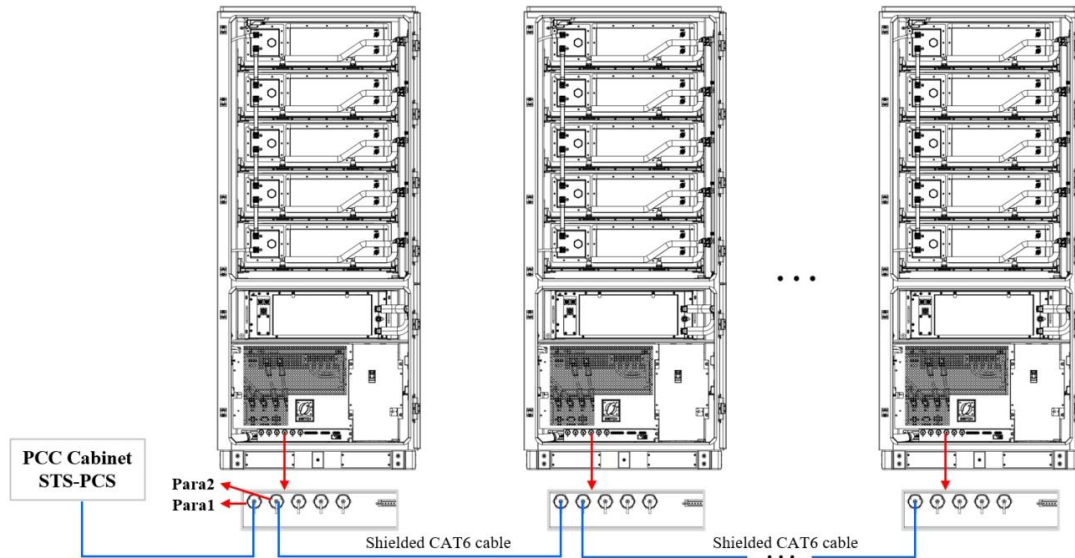

7.3.2 EMS Wiring

When a single cabinet is operating, LAN4 can be used as the EMS Internet access interface. When more than two C&I energy storage cabinets are operating in parallel, LAN2 is used as the EMS parallel communication interface, and an additional switch must be installed to enable EMS parallel communication.

Note: A 5-port switch is provided as standard inside the C&I energy storage cabinet. It is only used for expanding access to southbound devices and for single-unit commissioning, and is not intended for parallel operation.

Figure 7-5 Northbound Communication Wiring for Single EMS


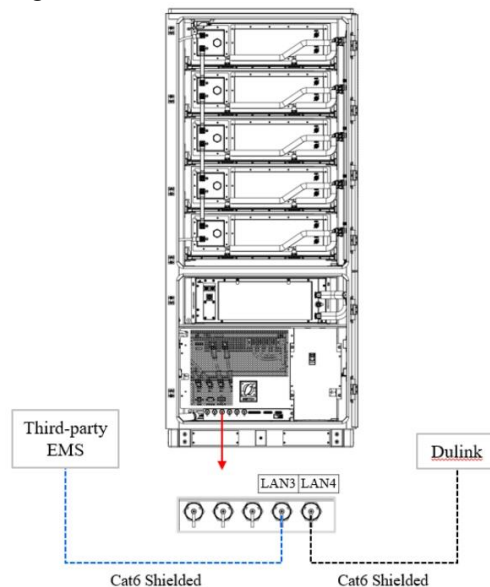


Figure 7-6 EMS Parallel Operation and Northbound Communication Wiring for Multiple ESS

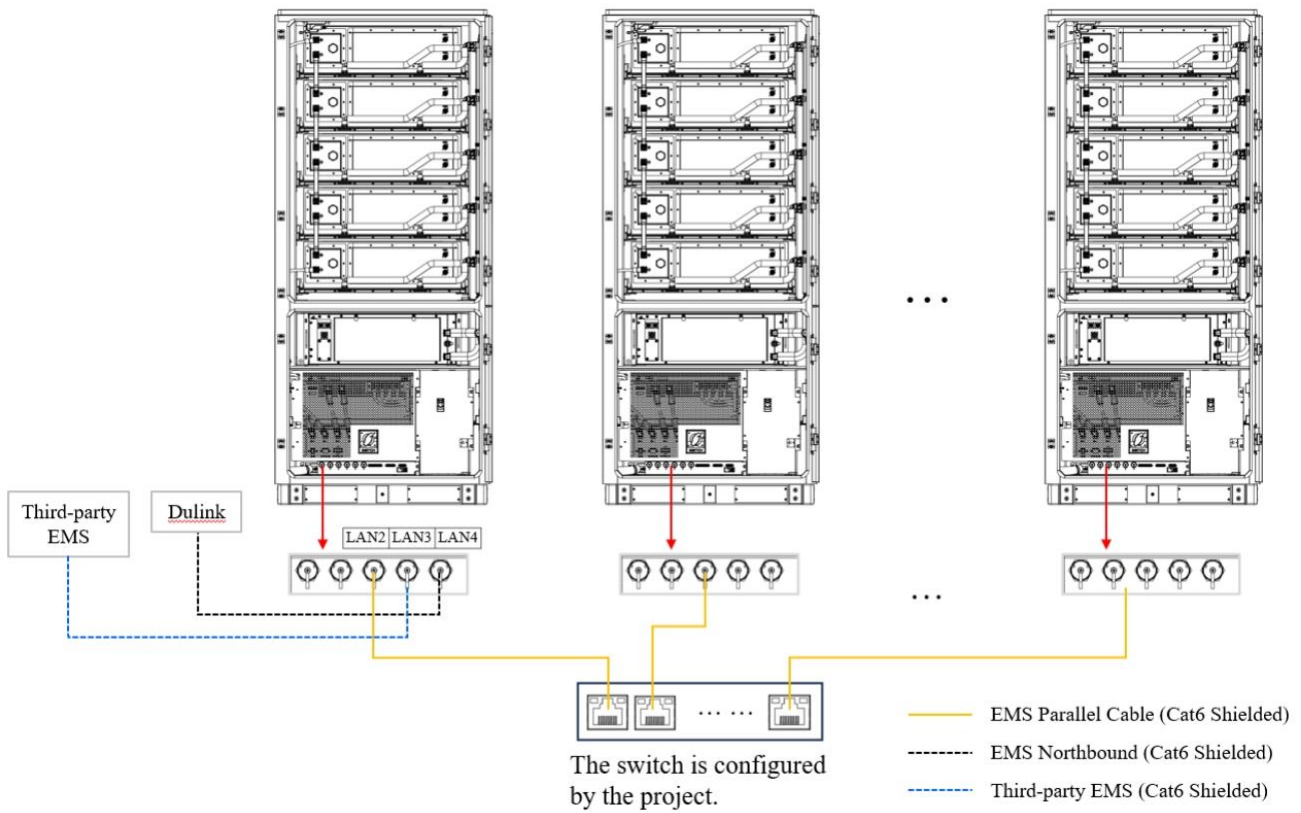

7.4 Power Cable Installation

7.4.1 AC Power Cable Installation

Step 1: Remove the front and bottom metal cover plates of the circuit breaker, and feed the cable into the cabinet.


Step 2: Cut open the rubber grommet on the cable entry plate and pass the cable through the grommet.

Step 3: Connect the AC power cable to the lower copper busbar of the circuit breaker.

Step 4: Perform torque inspection on the wiring connection.

Step 5: Reinstall the bottom and front cover plates of the circuit breaker.

Figure 7-7 AC Power Cable Connection Position and Phase Sequence

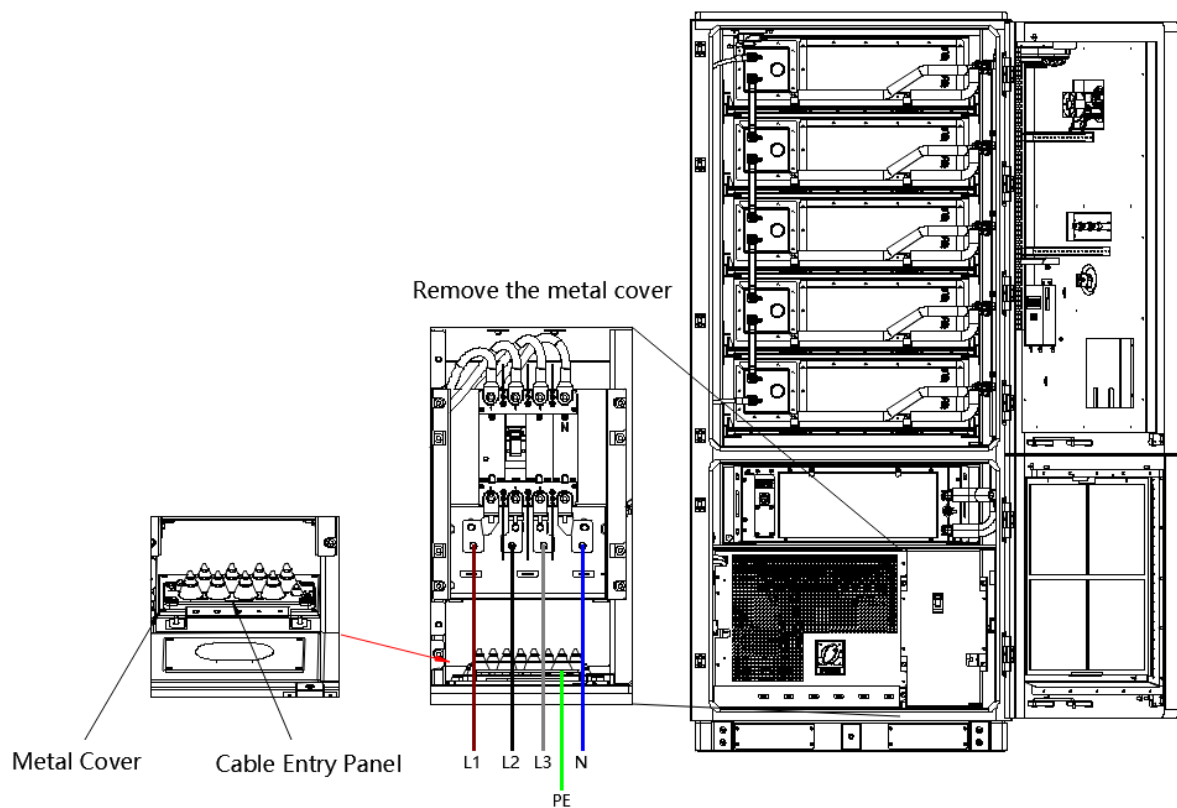

8

ESS Power-On and Power-Off

8.1 Check Before Power-On

8.1.1 General Check

No.	Check Items	Acceptance Criteria
1	ESS appearance	- The appearance of the ESS is intact and free from damage, rust and paint loss. If there is any paint falling off, please carry out the operation of replacing the paint. - The cabinet door should open and close smoothly, with sealing strips free from aging or damage, and should fit tightly when closed. - ESS labels are clearly visible, damaged labels should be replaced promptly.
2	Cable appearance	- The cable protection layer is well wrapped without visible damage. - Cable hoses are in good condition.
3	Cable connection	- The cable connection position is the same as the design. - The terminals are made in accordance with specifications, and the connections are firm and reliable. - The labels on both ends of each cable are clear and the labels are oriented in the same direction.
4	Cable wiring	- Alignment meets the principle of separation of strong and weak power. - The cables are neat and beautiful. - Cable joints should be neatly cut and no spikes should be exposed. - Leaving a margin at the turning point as required, and not pulling it tight. - Straight and smooth wiring, no crossover of cables in the cabinet.
5	Copper busbar for external harness	- No deformation of copper rows and no breakage of dip molding. - The busbars must be securely installed, and the threaded holes

No.	Check Items	Acceptance Criteria
	Connection	should be properly aligned and installed.
6	AC Switch	- The external AC switch of the power distribution cabinet is OFF. - The energy storage cabinet AC switch is OFF.

8.1.2 ESS Installation and Check

Cabinet

No.	Check Items	Acceptance Criteria
1	Installation	Ensure the cabinet is securely fixed to a level surface or base using bolts or brackets. It should be stable, with no shaking or tilting. Seismic reinforcement measures must comply with design requirements.
2	Surface	The cabinet surface should be free from visible deformation, scratches, rust, and the paint finish should be intact. The cabinet door should open and close smoothly; sealing strips must not be aged or damaged and should fit tightly when closed.
3	Cabinet Grounding	Each cabinet has at least two grounding points, and grounded firmly, lap resistance $\leq 0.1\Omega$.
4	Accessories	External accessories must be correctly specified and installed in the required quantity.
5	Identification	Correct, clear and complete identification.

Internal

No.	Check Items	Acceptance Criteria
1	Circuit Breaker	The circuit breaker is in the open position.
2	Copper Busbar	Busbars should be free from deformation, and the insulating coating (plastic dip) must be intact. Busbars must be firmly installed, and threaded holes for wiring connections must be properly positioned and functional.
3	Cables	Cable mounting bolts have been tightened, and there is no looseness in cable pulling.
4	Battery Pack	Battery modules must be securely installed, with no looseness or displacement. Quick connectors between modules should be firmly connected. Battery surfaces must be free from swelling, leakage, or signs of overheating such as discoloration, yellowing, or deformation of the casing.
5	Foreign Object	Remove all foreign objects inside the cabinet, such as tools, installation residual materials, etc.

No.	Check Items	Acceptance Criteria
6	Distribution Area Baffle and Other Cover/Panel	No cracks, dents, scratches, splits, or looseness in the appearance of the power distribution area baffle. Required silkscreen markings must be accurate, clear, and legible.
7	Surge Protector	Lightning protector status indication is green.
8	Subcomponent	All subcomponents should be free from external damage, and wiring should be properly connected.
9	Cabinet Grounding	The grounding conductor is reliably connected to the cabinet grounding terminal board or copper row.

8.2 Power-On and Power-Off Operations

Figure 8-1 Auxiliary Power Distribution Components

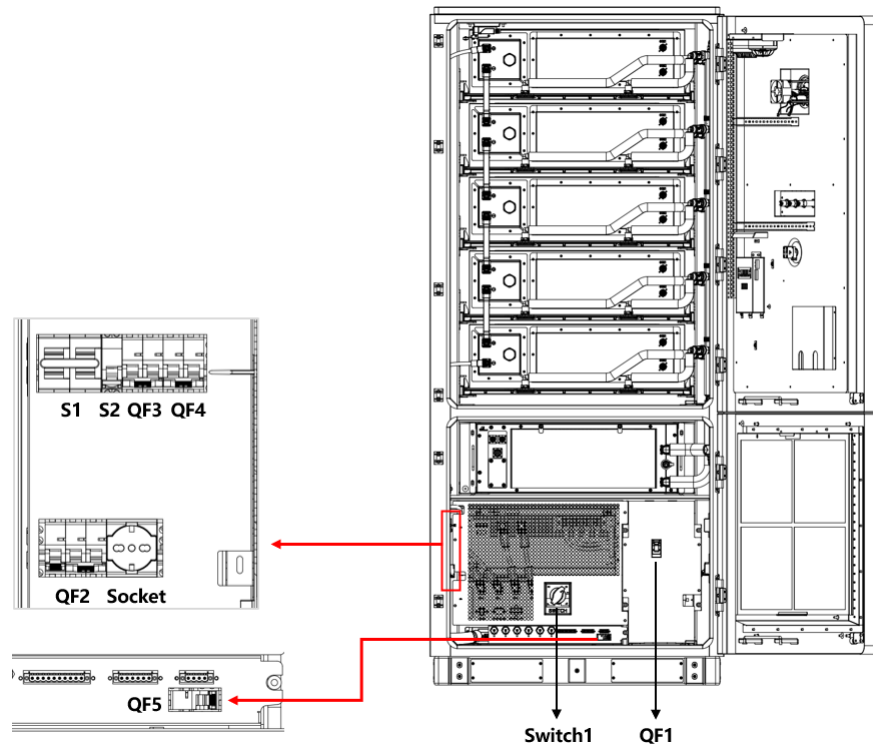


Table 8-1 Auxiliary Power Distribution Components

Item	Function
Switch1	Battery-side DC switch
QF1	PCS AC side circuit breaker
S1	Auxiliary power manual transfer switch
S2	Control system manual transfer switch
QF2	Circuit breaker for auxiliary power (control system excluded)
QF3	Circuit breaker for control system power supply

Item	Function
QF4	24V
QF5	Reserved 230V power supply switch. When the reserved 230V is not in use, keep QF5 open

Power-On Procedure and Precautions

Step 1: Set "S1" to position I (cabinet internal mains power supply). Close "QF2". The dehumidifier and liquid cooling unit will then be powered on.

Step 2: Set "S2" to the up position. Close "QF3" and "QF4". The EMS, BMS, and fire detectors will then be powered on.

Step 3: Close "Switch1". Operate the EMS to close the high-voltage box pre-charge circuit. The DC side of the PCS will be powered on, and the PCS indicator light will flash green.

Step 4: Close "QF1". The AC side of the PCS will be powered on. After verifying on the EMS that there are no alarms, set the PCS to power on and configure the charge/discharge power on the EMS. The PCS indicator light will then become steady green, and the system can start charging/discharging.

--- End of Procedure ---

After performing the above steps in order, charging/discharging can begin. If the BESS status is normal, the Run indicator will be lit, while the Fault and Alarm indicators will remain off.

Power-Off Procedure and Precautions

Before performing the power-off procedure, verify on the EMS that the PCS inside the energy storage cabinet is in a stopped or standby state. Do not disconnect power under load.

Step 1: Open "QF1".

Step 2: Open high-voltage box "Switch1".

Step 3: Open "QF4", "QF3", and "QF2" in sequence.

--- End of Procedure ---

After performing the above steps in order, the PowerHill will stop operating.

When performing equipment maintenance, the above switches must be opened. Wait five minutes after the equipment has stopped before carrying out any maintenance, inspection, or repair work.

9 System Commissioning

Prerequisites

- All the ESS at the site has completed the on-site commissioning.
- The system has been successfully powered on and the alarms have been eliminated.
- The site has the commissioning ESS that can be used for the opening.

9.1 Local Startup

The device is in the power-on state, check whether the alarm or fault indicator for device status, etc. is blinking, if not, continue the following operation; if the product has alarms or faults, enter the EMS interface, click on Alarm, take a picture of the fault information, and contact the distributor of the product to apply for after-sales service.

After there is no fault information, you can start the system directly through EMS, the specific operation of EMS can refer to the EMS user manual.

9.2 IP Address Settings

Procedure


Step 1: Click System > Network Port in the left panel

Step 2: Select LAN

Step 3: Configure the IP address, gateway address, mask address and type of LAN ports based on the dispatching EMS IP.

Step 4: Click Save in the bottom right corner.

Figure 9-1 Network Port LAN Interface

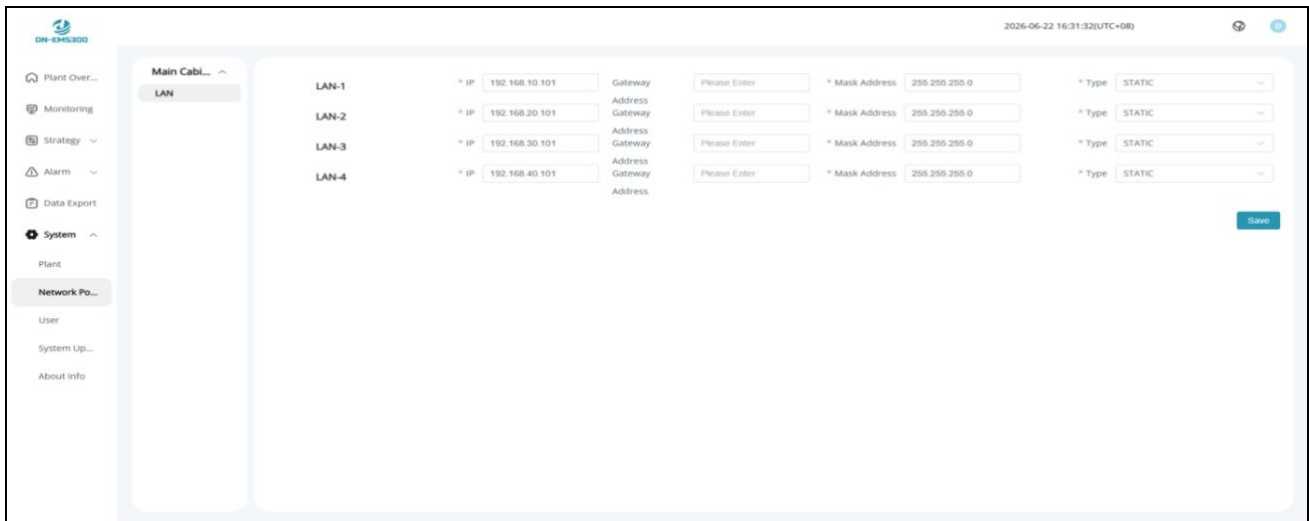

9.3 Scheduling Instructions

Data reading and scheduling according to the product protocol, the main functions are start, stop, charging, discharging, etc.; detailed scheduling protocol is provided separately.

- After the system start/stop command input exceeds the limit, the system will not execute any action or modify the wrong command.
- After the system power input exceeds the limit, the system will actively modify the command to the maximum charging and discharging power.
- System full and discharge stop is judged according to the voltage of a single battery, the maximum voltage of 3.6V is judged as full, and the minimum voltage of 2.75V is judged as discharge; when the system is full, continuing to issue the charging power will not be executed, and only the discharging power; when the system is discharged, continuing to issue the discharging power will not be executed, and only the charging power will be executed; the reversed power will make the change of the SOC after being full or discharged and it will Restriction is automatically restored.
- If the system level filling and emptying protection fails, the BMS level filling and emptying protection will be activated, and after the activation, it needs to be manually restored.
- The system SOC is a reference value, calculated according to the battery configuration and current value, but the battery capacity and current value have errors and are not accurate, so it is not recommended to use the SOC as a judgment condition for filling and emptying for system scheduling.

- Multiple TCP connections cannot exist at the same time, because the bottom is 485 communication, and multiple connections will lead to communication conflicts.
- Multiple threads cannot request data at the same time for a single TCP connection.
- The recommended interval time for each frame is 100ms or more.

10 Human-Computer Interaction

10.1 Function Overview

The Energy Management System (EMS) is an intelligent system for energy control and optimization. In an energy storage system, the EMS serves as the "brain," coordinating the efficient and synergistic operation of multiple energy sources such as photovoltaics (PV) and energy storage. It continuously monitors the generation, storage, and consumption status of each energy unit in real time, intelligently dispatches PV generation, and optimally manages the charging and discharging strategies of the energy storage system. Through precise energy management and optimized control, the EMS not only improves energy utilization efficiency but also reduces operational costs, achieving a win-win outcome of both environmental sustainability and economic benefits.

10.2 System Login

Preparation

- The energy storage system has been powered on.

Prerequisites

- Windows 7 or later operating systems are supported.
- Browser: Chrome 52, Firefox 58, IE 9, or later is recommended.

Procedure

Step 1: Connect the computer network port to the switch inside the cabinet using a network cable.

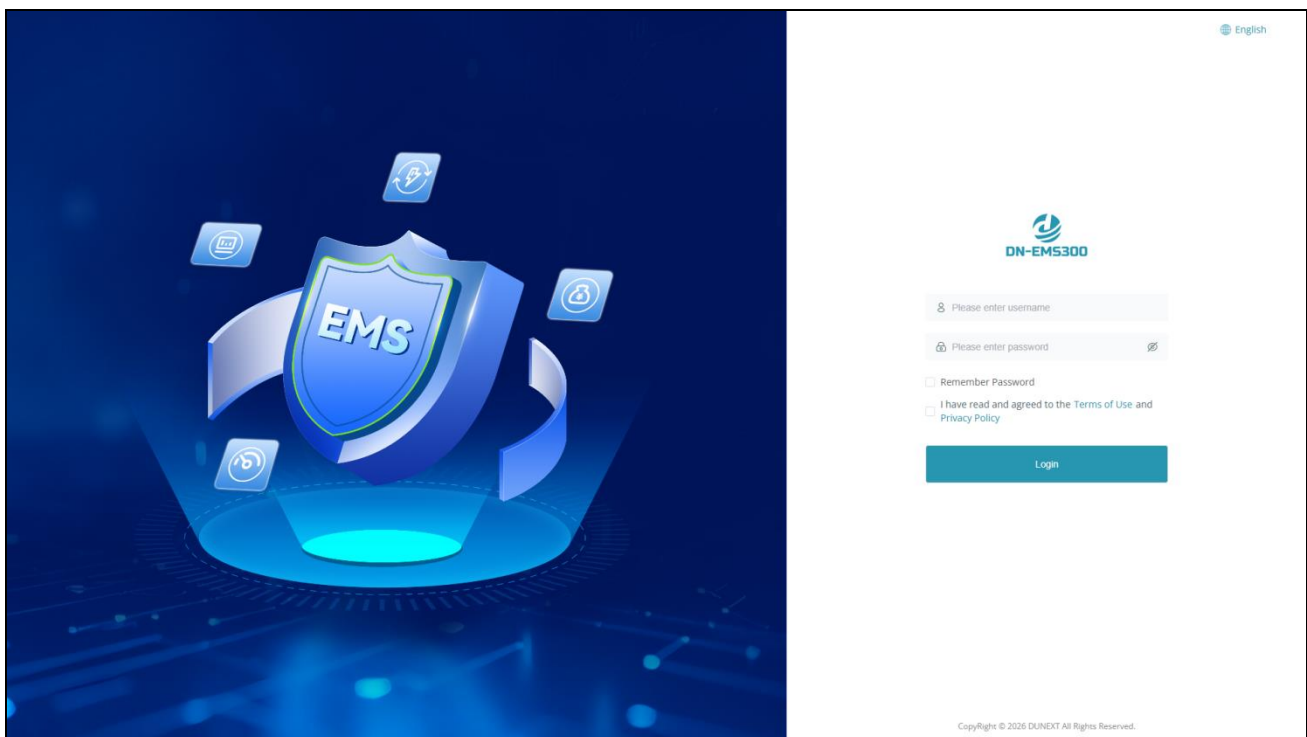
Step 2: Configure the IP addresses of the computer and the EMS LAN port to be in the same network segment.

Table 10-1 Port Settings

Port	EMS Default Value	Example Computer Settings
IP Address	192.168.2.2	192.168.2.11
Subnet Mask	255.255.255.0	255.255.255.0
Default Gateway	192.168.2.1	192.168.2.1

Step 3: Log in to the EMS web interface.

Enter "192.168.2.2" in the browser address bar and press Enter to open the login screen.

Figure 10-1 Login Screen


Step 4: Log in to the system

Enter the provided username and password, and click Login to enter the system.
Initial account: admin; password: admin@6789.

The permission list after login for administrators, O&M users, and general users is as follows:

Table 10-2 Role Permission List

Level-1 Menu	Level-2 Menu	Administrator	O&M User	General User
Plant Overview	/	√	√	√
Monitoring	/	√	√	√
Strategy	Operation	√	√	×

Level-1 Menu	Level-2 Menu	Administrator	O&M User	General User
Alarm	Protection	√	√	×
	Thermal Management	√	√	×
	Active Alarm	√	√	√
	History Alarm	√	√	√
Data Export	/	√	√	×
System	Plant	√	×	×
	Network Port Config	√	×	×
	User	√	×	×
	System Upgrade	√	×	×


Note: Administrators and O&M users should operate the system with caution after login. Modify parameters as needed.

10.3 Multilingual Function

The EMS supports Chinese and English and allows switching between languages. English is the default language.

1. Language switching is supported in the upper-right corner of the login screen, as shown below:

Figure 10-2 Language Switching on the Login Screen

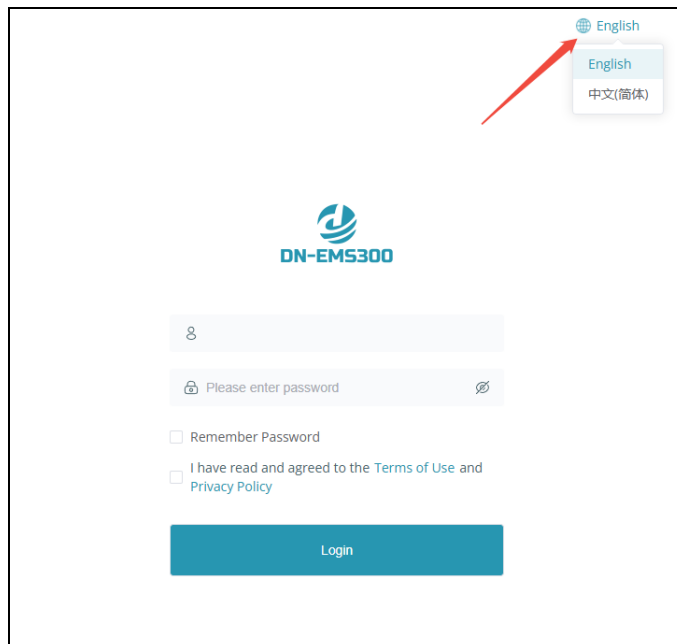


2. After entering the system, language switching is also supported in the upper-right corner, as shown below:

Figure 10-3 Language Switching after Login


10.4 Plant Overview


After entering the password on the login screen, the Plant Overview page is displayed. The menu bar of the EMS is shown on the left side.

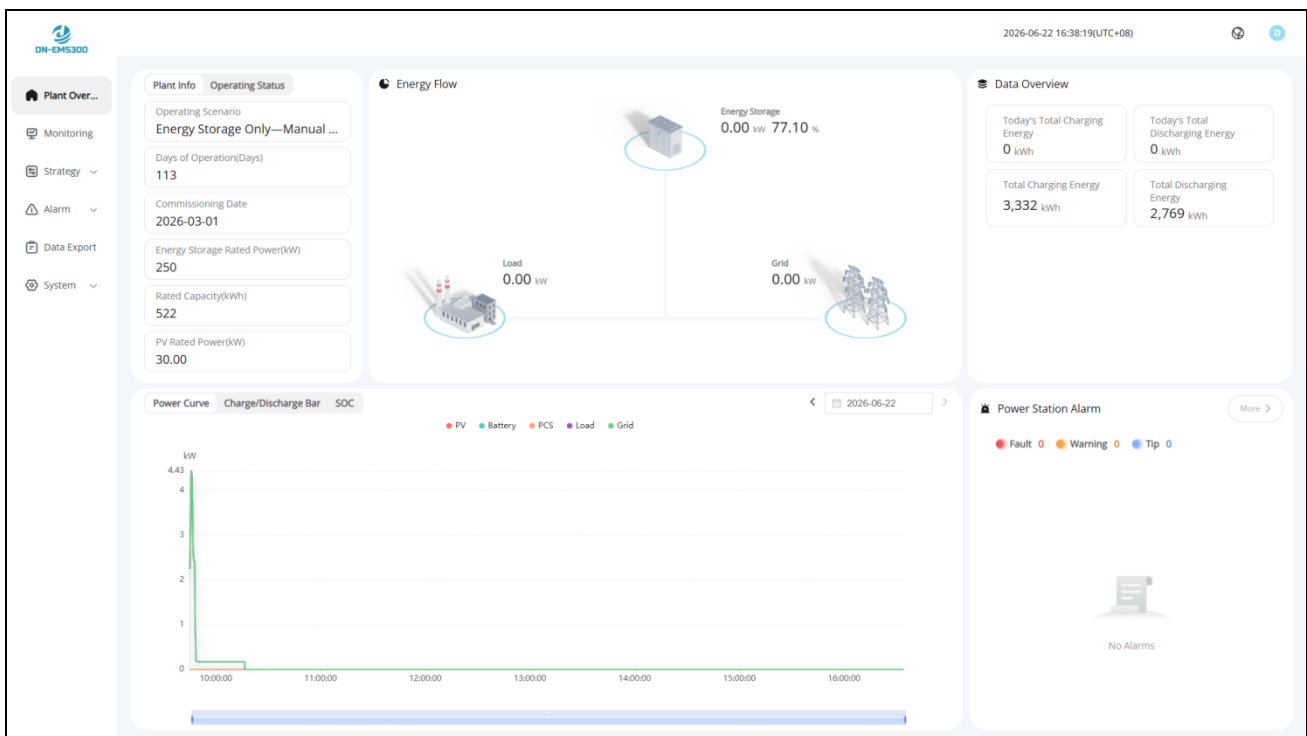Figure 10-4 Plant Overview Page


10.4.1 Plant Info

This area displays the current system operating scenario, days of operation, commissioning date, energy storage rated power, rated capacity, and PV rated power.

Figure 10-5 Plant Info

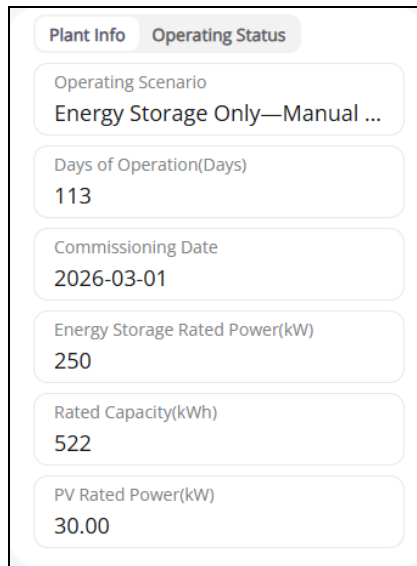


Plant Info	Operating Status
Operating Scenario	Energy Storage Only—Manual ...
Days of Operation(Days)	113
Commissioning Date	2026-03-01
Energy Storage Rated Power(kW)	250
Rated Capacity(kWh)	522
PV Rated Power(kW)	30.00

10.4.2 Operating Status

It displays the status of each cabinet in the plant. The five statuses are Offline, Failure, Warning, Notice, and Normal.

Figure 10-6 Operating Status

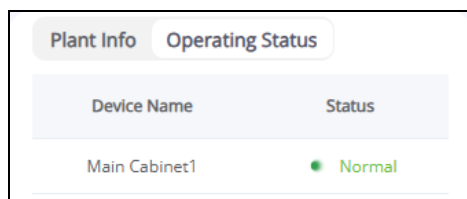

Plant Info	Operating Status
Device Name	Status
Main Cabinet1	● Normal

10.4.3 Energy Flow Diagram

It displays information such as the current ESS power and SOC, as well as the current direction of current flow, helping users monitor the latest status of the ESS in real time.


Figure 10-7 Energy Flow Diagram



10.4.4 Data Overview

It displays today's total charging/discharging energy and total charging/discharging energy of all energy storage cabinets.


Figure 10-8 Data Overview

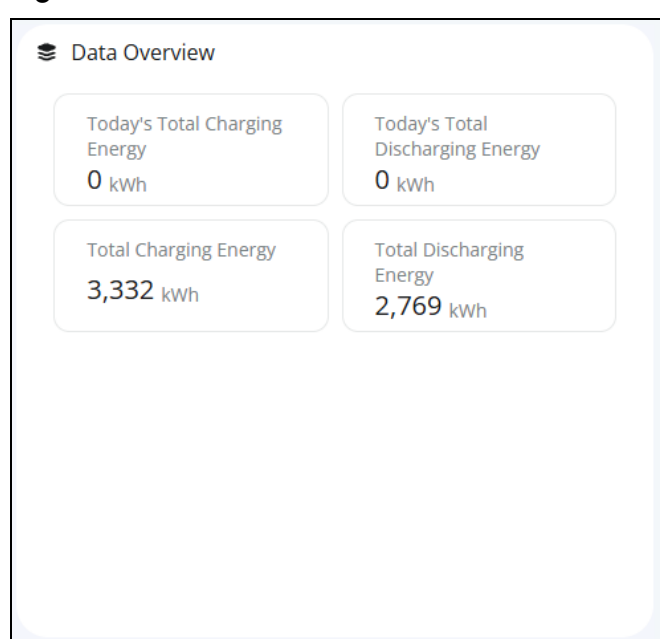

10.4.5 Power Curve

It displays the curves of total PV power, total battery power, total PCS power, total load power, and total grid meter power for the current day. Select a date to view historical curves.


Figure 10-9 Power Curve

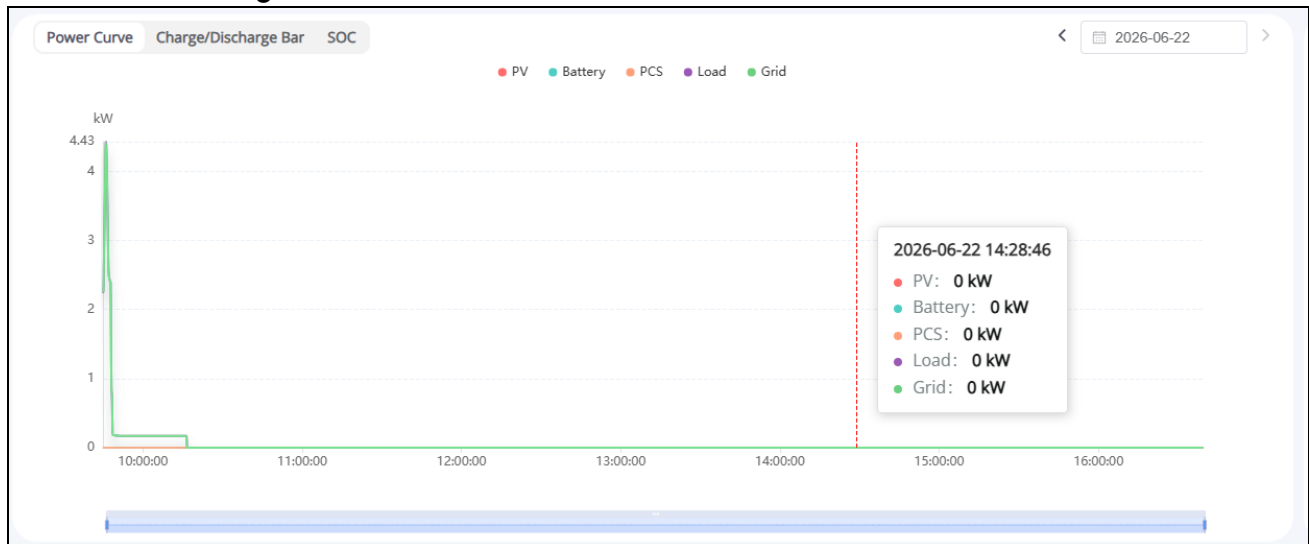

10.4.6 Charge/Discharge Bar Chart

It displays a bar chart of daily charge and discharge energy for the past 7 days.


Figure 10-10 Charge/Discharge Bar Chart

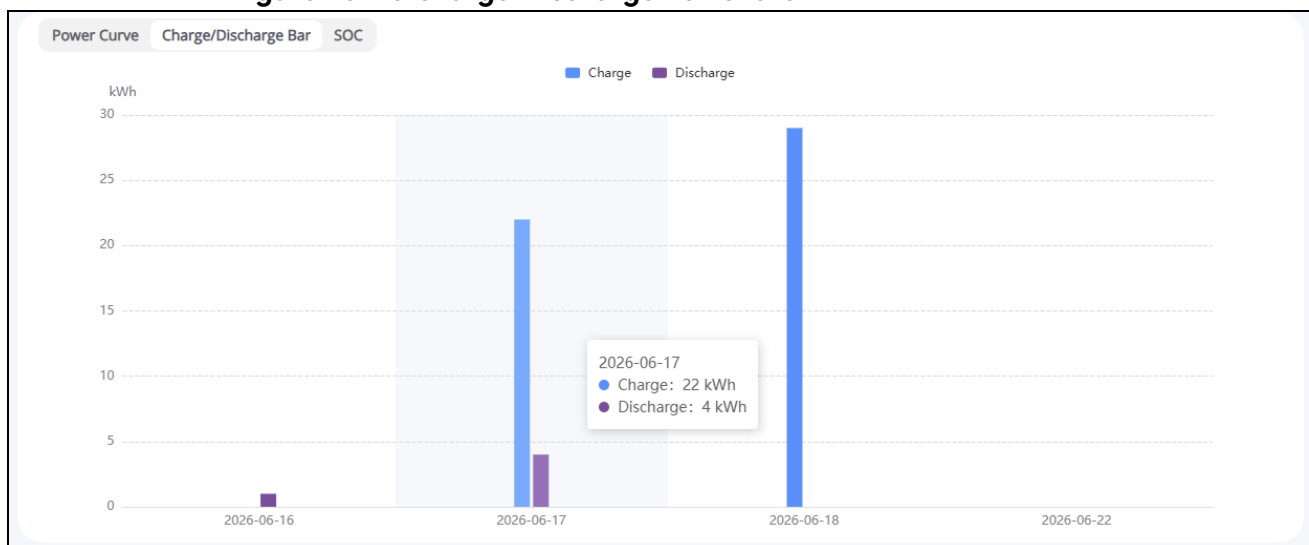

10.4.7 SOC Chart

It displays the real-time SOC value of each cabinet.


Figure 10-11 Real-Time SOC

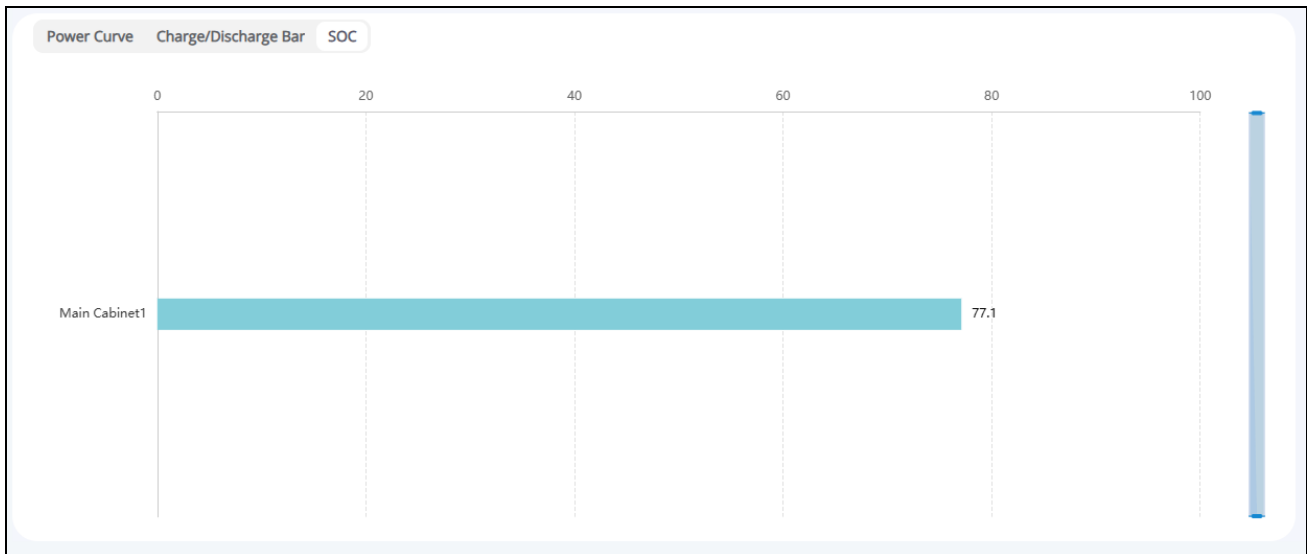

10.4.8 Power Station Alarm

It displays the current alarm information of the energy storage cabinet. Click the <More> button in the upper-right corner to jump to Alarm -> Active Alarm.

Figure 10-12 Real-Time Power Station Alarm

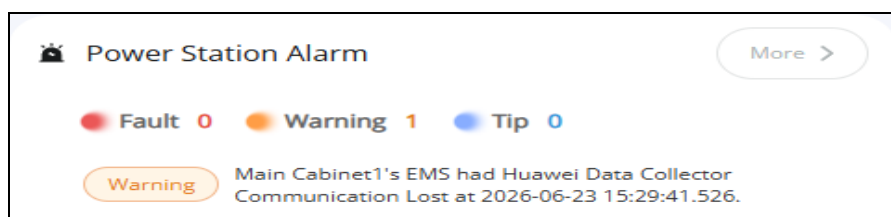


10.5 Monitoring

Click Monitoring on the left menu bar to view the real-time data of each device configured in the current system.

10.5.1 View PCS Data

Click PCS to view real-time PCS data. Click  in the upper-right corner to refresh the data.

Figure 10-13 PCS Data Display

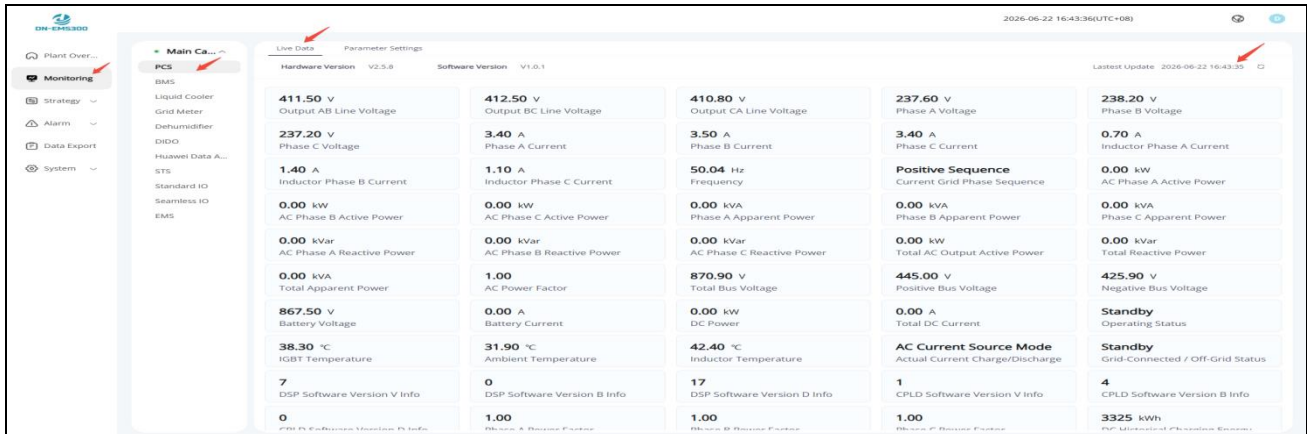


10.5.2 View BMS Data


Click BMS to view real-time BMS data. Click in the upper-right corner to refresh the data.

1. The BMS Overview page displays all real-time BMS data.

Figure 10-14 BMS Overview Page

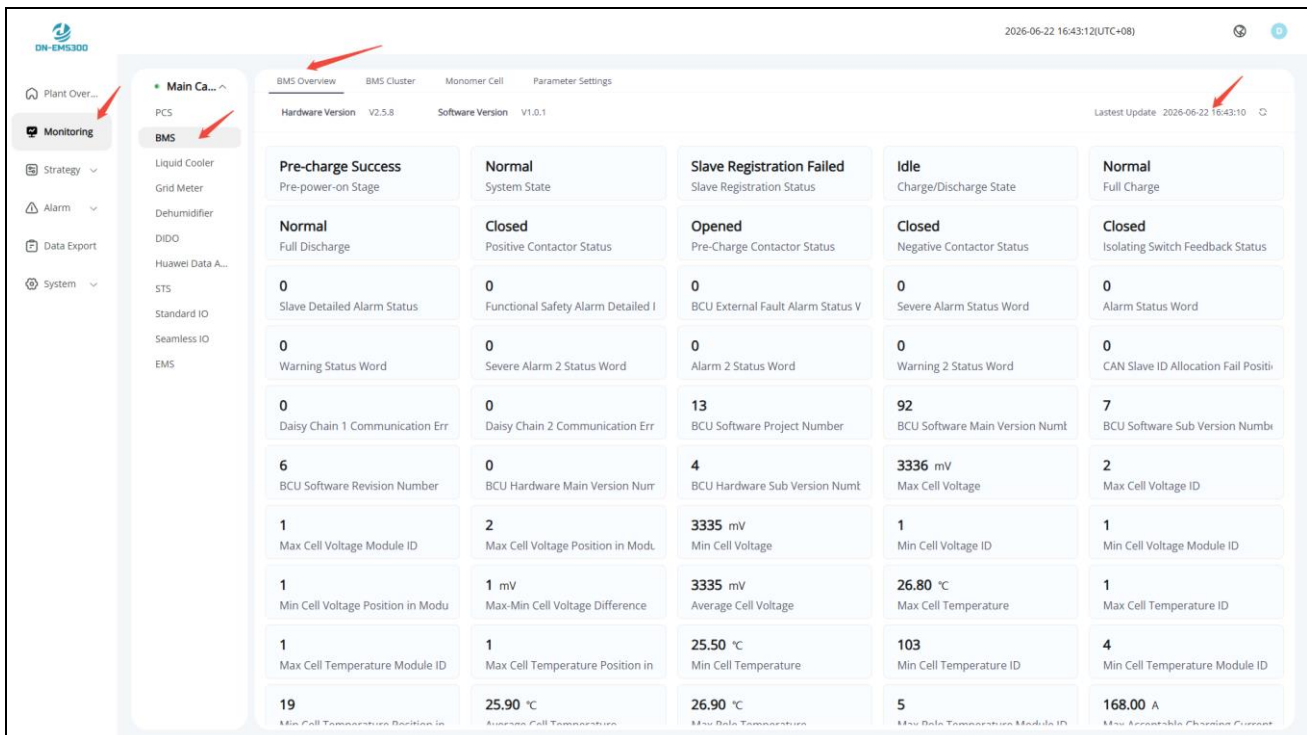

2. The BMS Cluster page displays the temperature and voltage ranges of each pack, as well as the temperature difference and voltage difference.

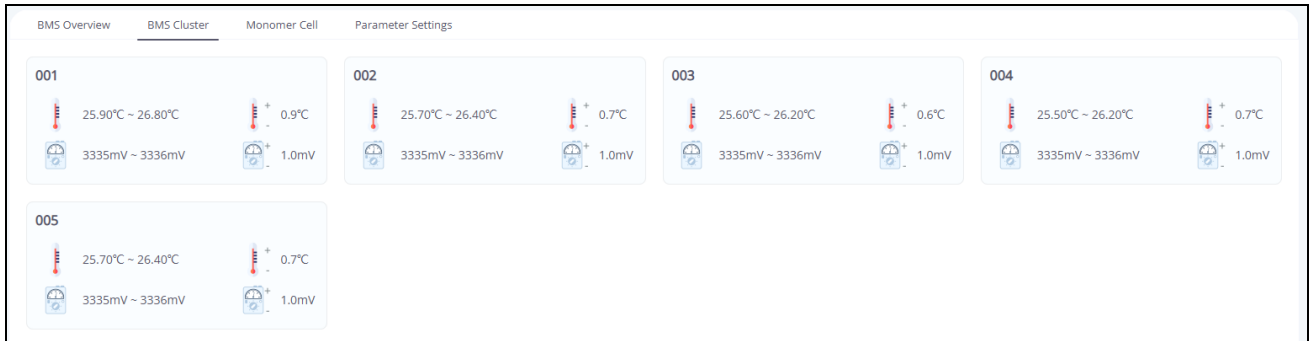Figure 10-15 BMS Cluster Page


- The Monomer Cell page displays the temperature and voltage of all cells in each pack, and allows viewing the bar chart and distribution chart.


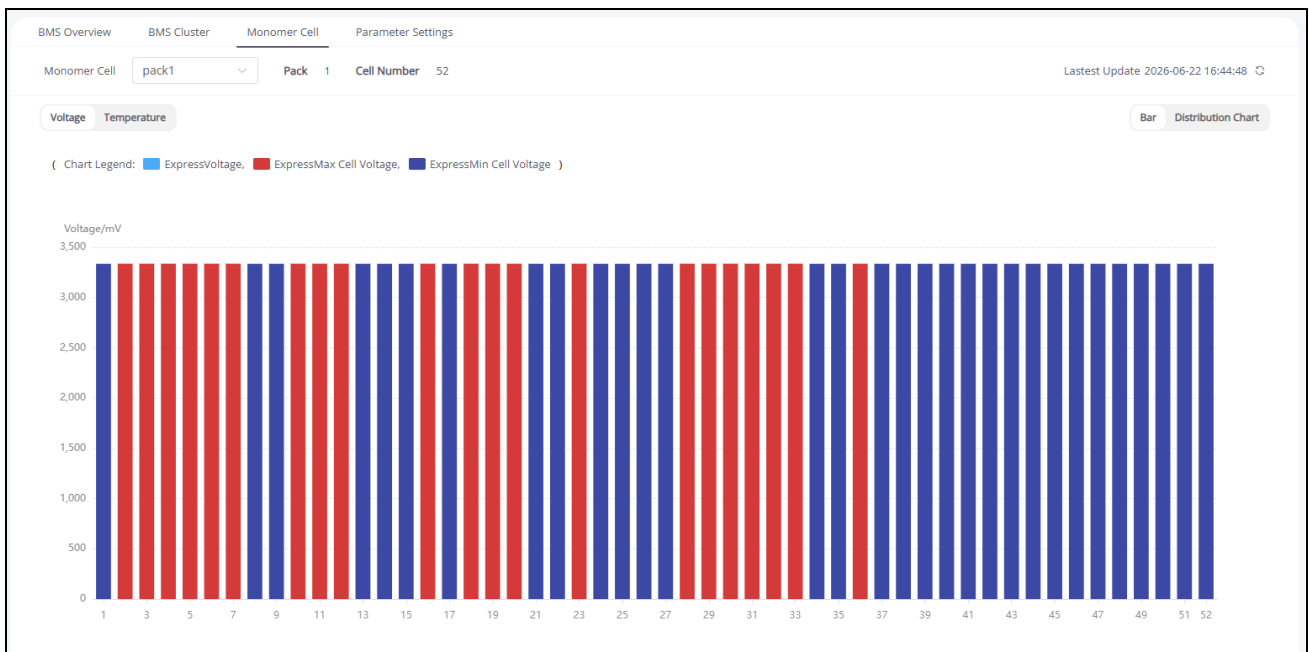
Figure 10-16 Monomer Cell Bar Chart Page


Figure 10-17 Monomer Cell Distribution Chart Page

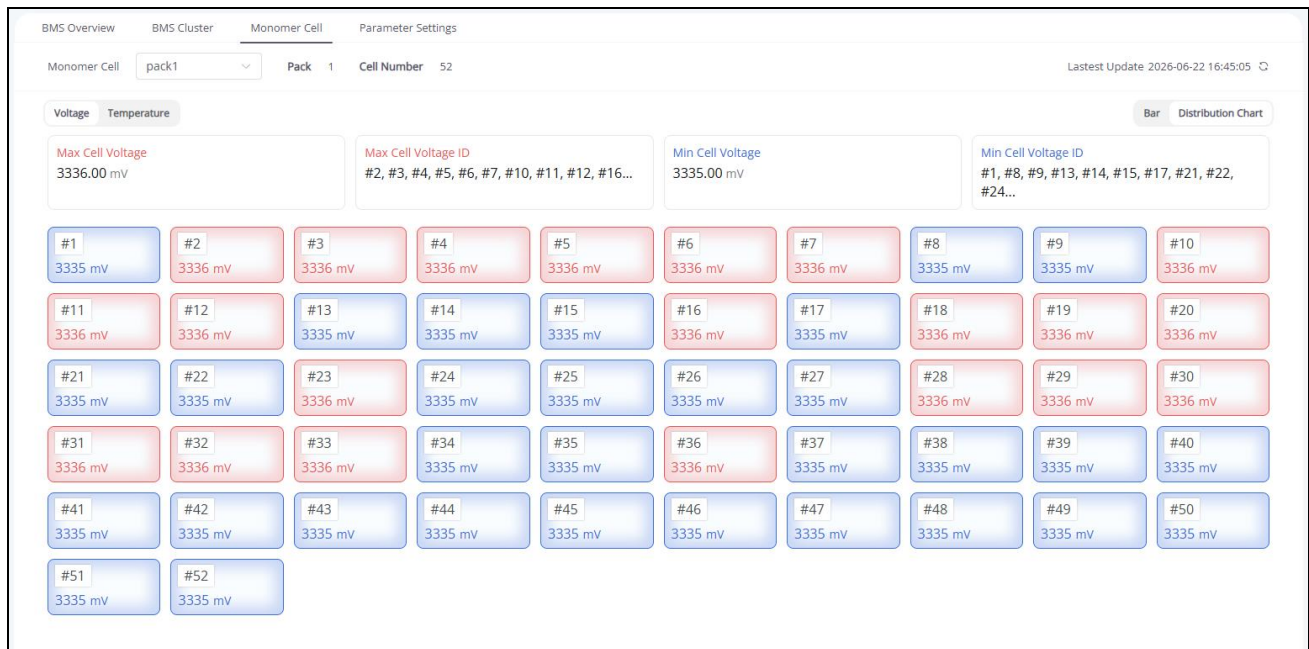


10.5.3 View Other Device Data

The real-time data of the liquid cooler, grid meter, dehumidifier, and DIDO can be viewed in the same way as the PCS data.

10.5.4 Parameter Settings


Click Parameter Settings on the tab bar to enter the password verification page, and enter the account login password.

Figure 10-18 Parameter Settings Password Verification

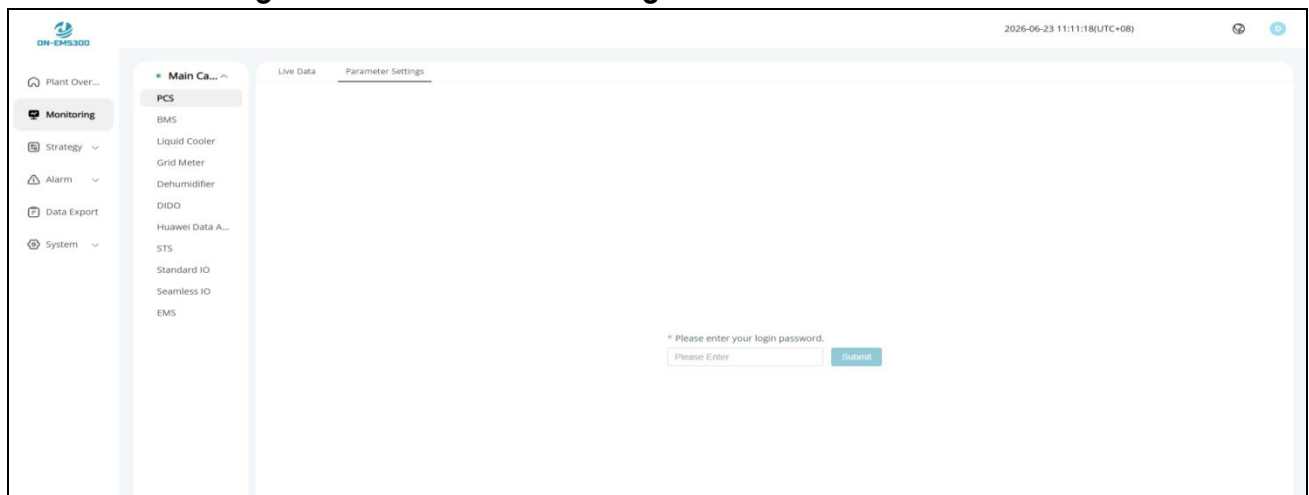


After the correct password is entered, the corresponding PCS parameters are displayed.

Figure 10-19 Device Parameter Page

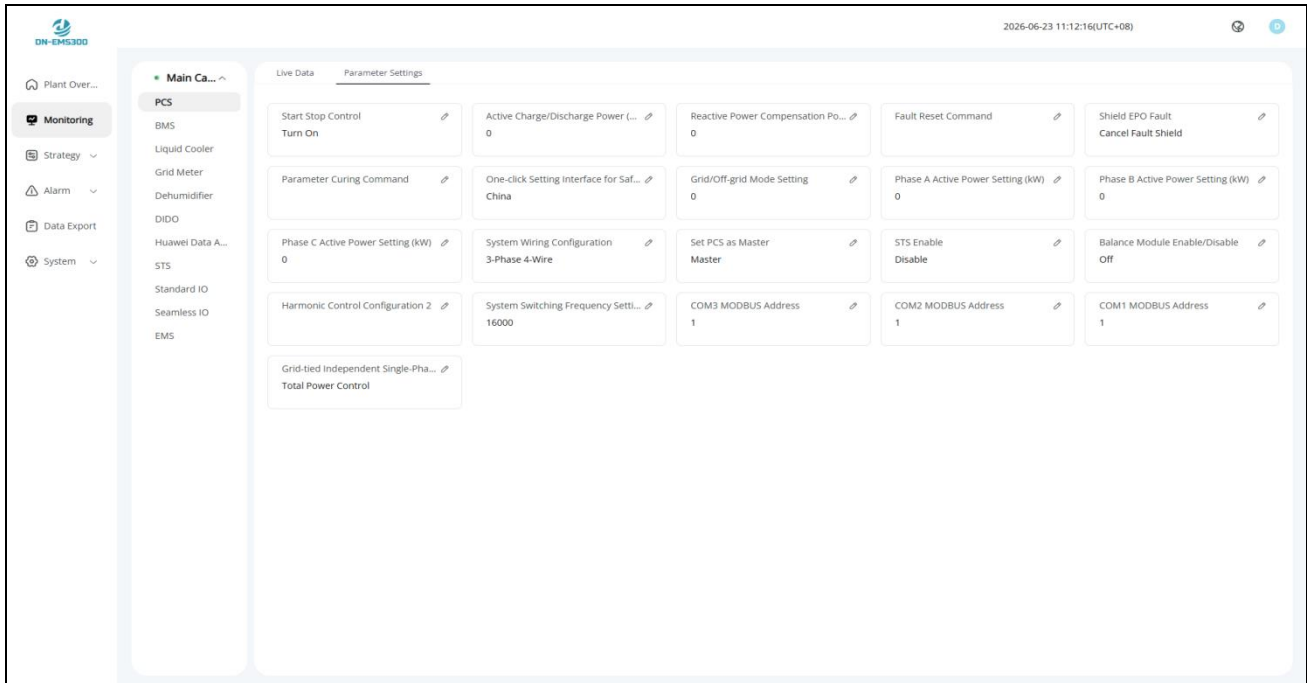

Click the edit icon in the upper-right corner of a parameter to display the setting items for the corresponding parameter. After editing or selecting the content, click the <Confirm> button to immediately issue the parameter settings.

Figure 10-20 Device Parameter Setting Page

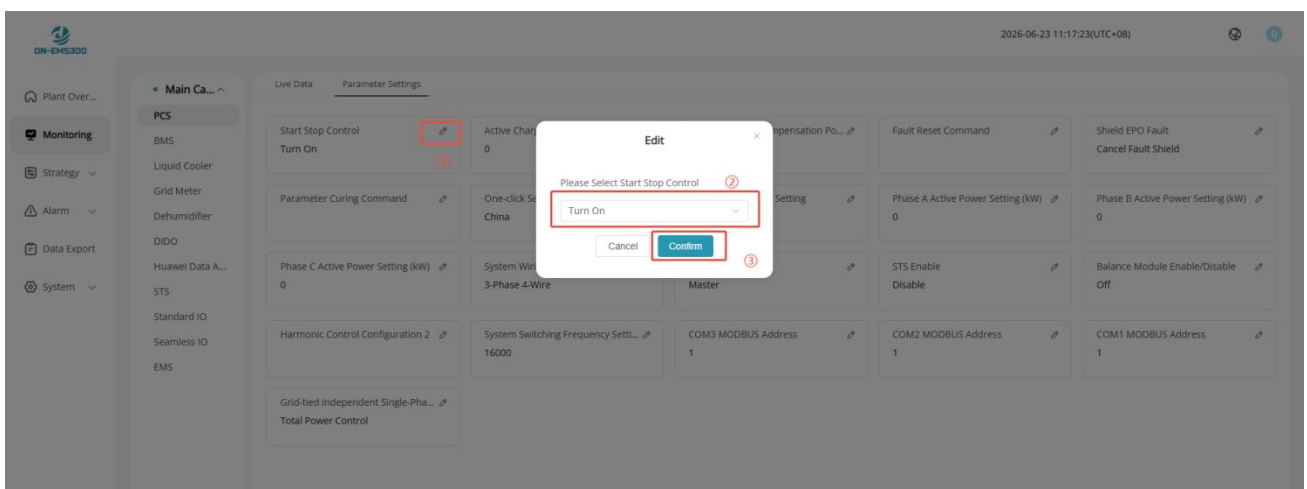

The parameter setting operations for the BMS, liquid cooler, grid meter, dehumidifier, and DIDO are the same as those for the PCS.

10.6 Strategy

Click Strategy on the left menu bar to view and configure information such as protection parameters, manual control, and peak shaving and valley filling for the energy storage system. Energy management is one of the important functions of the EMS. It can better balance energy supply and demand, precisely control charge/discharge strategies, and improve energy utilization efficiency and system performance.

10.6.1 Operation

Enter the account login password to access the Operation page.

Figure 10-21 Operation Strategy Password Verification



EMS work modes are divided into:

- Local Mode
- Remote Mode

Based on the northbound connection configuration on the Remote Mode page, the EMS connects to the DuLink Cloud Platform or a third-party management platform or software, and executes the energy strategy issued by the remote management platform.


Figure 10-22 Remote Mode



Local Mode is divided into:


- Standalone Energy Storage Scenario
 - Manual Control
 - Peak Shaving and Valley Filling

Figure 10-23 Control Strategy in Local Mode -> Standalone Energy Storage Scenario

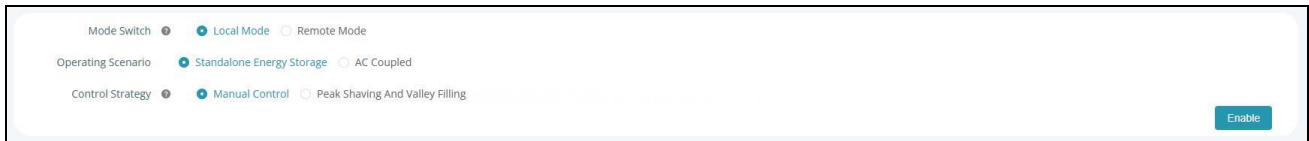

- AC Coupled Scenario
 - Manual Control

Figure 10-24 Control Strategy in Local Mode -> AC Coupled Scenario

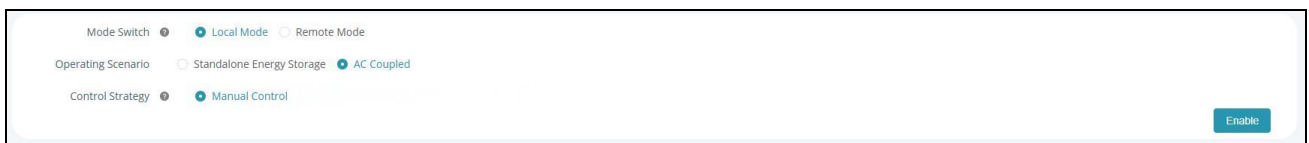

10.6.1.1 Manual Control

Procedure


1. Click Local Mode -> Standalone Energy Storage -> Manual Control;
2. Click the <Enable> button to switch to the Manual Control strategy;
3. Click the corresponding parameter module box to configure the parameters.



NOTE!

Parameters on the Manual Control page can be set only when Local Mode -> Standalone Energy Storage -> Manual Control is selected and <Enable> has been clicked and issued.

Figure 10-25 Manual Control Page

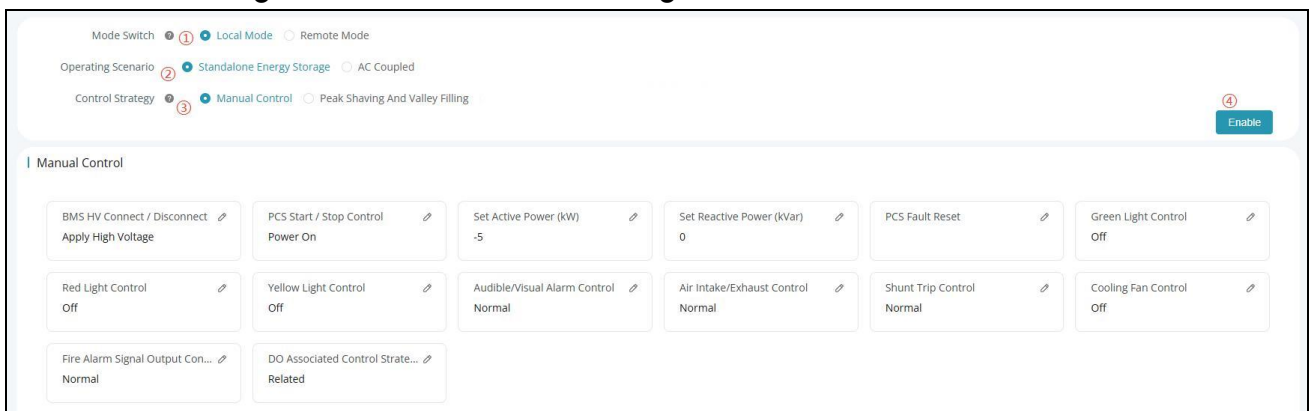


10.6.1.2 Peak Shaving and Valley Filling

Procedure


1. Click Local Mode -> Standalone Energy Storage -> Peak Shaving and Valley Filling.
2. Click the <Enable> button to switch to the Peak Shaving and Valley Filling strategy.

Figure 10-26 Switching to the Peak Shaving and Valley Filling Strategy

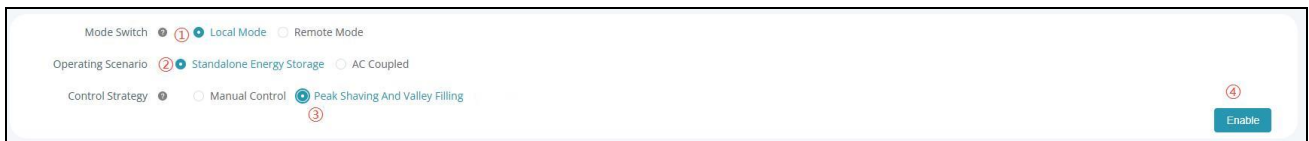

3. Create a template as needed, enter the template name, and click <Confirm>.

Figure 10-27 Create Template

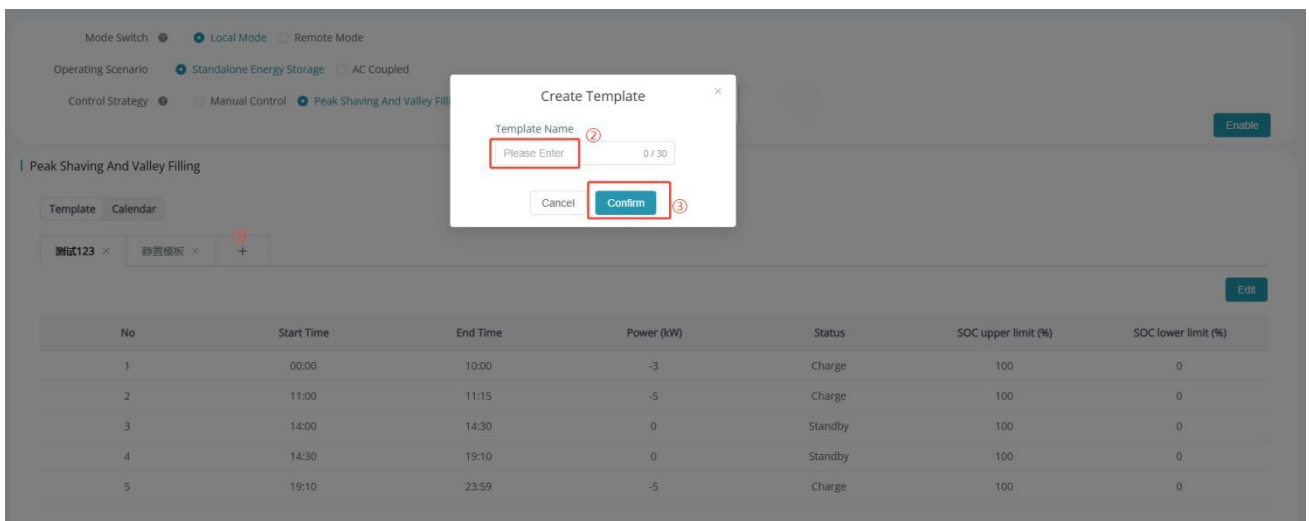

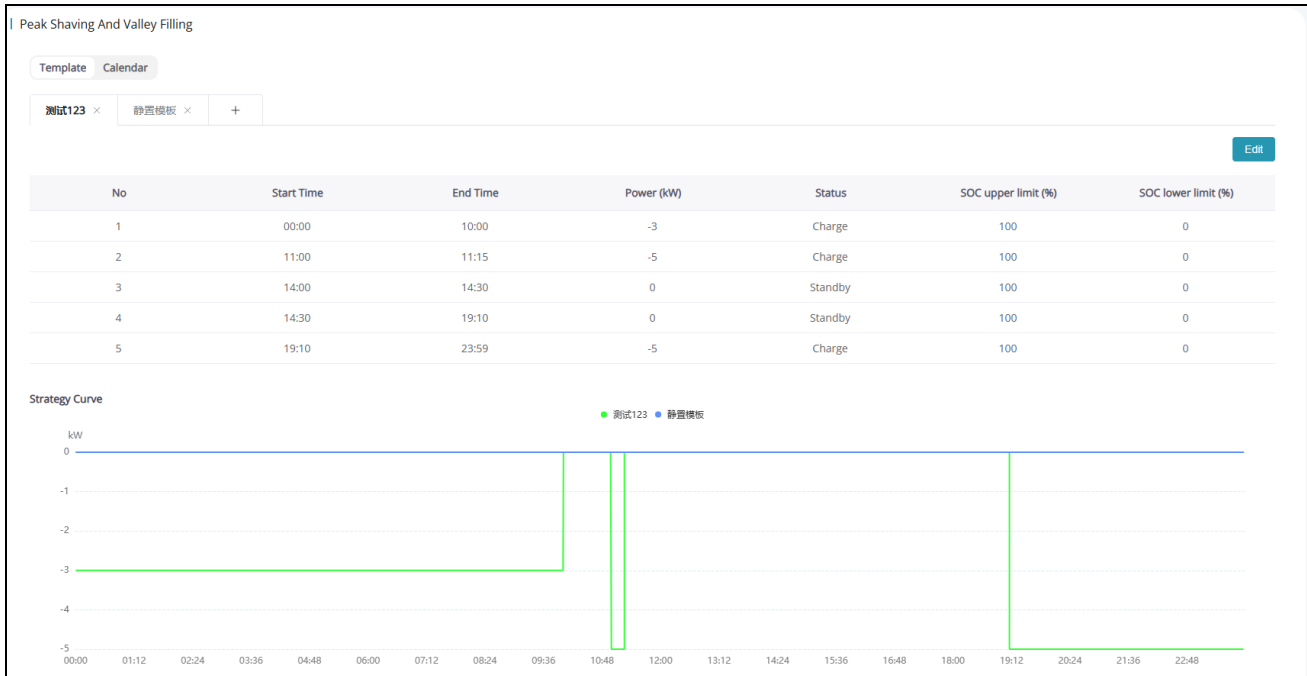
4. Enter the start time, end time, power, and other information as needed, and click <Add> to add multiple entries.

Figure 10-28 Template Time Period Settings

NOTE!

Users do not need to configure the status. The system automatically matches the control type based on the positive or negative value of the power parameter. A positive value indicates discharging, a negative value indicates charging, and 0 indicates standby.

- After the settings are complete, click <Save> to save them. If the settings are incorrect, select the template and click <Edit> to modify it.

Figure 10-29 Strategy Template and Strategy Curve


- Click the <Calendar> button to set a monthly template or yearly template. Click the <Edit> button, select the corresponding template for each day or year, and save it.

Figure 10-30 Monthly Template Settings

Peak Shaving And Valley Filling

Template Calendar

Month Year 2026-06

Edit

Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
	1	2	3	4	5	6
7	8	9	10	11 CloudStrategy	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30				

Figure 10-31 Yearly Template Settings

Peak Shaving And Valley Filling

Template Calendar

Month Year 2026

Edit

1	2	3	4	5	6
7	8	9	10	11	12

Figure 10-32 Monthly Template Editing

Peak Shaving And Valley Filling

Template Calendar

Month Year 2026-06

Exit Edit Save


Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
	1 Please Select	2 Please Select	3 Please Select	4 Please Select	5 Please Select	6 Please Select
7 Please Select	8 测试123 静音模板	9 Please Select	10 Please Select	11 CloudStrategy	12 Please Select	13 Please Select
14 Please Select	15 Please Select	16 Please Select	17 Please Select	18 Please Select	19 Please Select	20 Please Select
21 Please Select	22 Please Select	23 Please Select	24 Please Select	25 Please Select	26 Please Select	27 Please Select
28 Please Select	29 Please Select	30 Please Select				

10.6.1.3 Remote Mode

Users can select Remote Mode to enable the configured northbound interface, allowing the DuLink Cloud Platform, or a third-party management platform or software, to take control and manage the current ESS. Remote control from only one management platform can be accepted at any given time.

1. Click Remote Mode.
2. Click <Enable>.
3. Set the corresponding parameters as needed.
 - a. Edit the corresponding parameter;
 - b. Click the <Save> button;
 - c. Click the <Effective> button in the lower-right corner of the page.

Figure 10-33 Remote Mode Parameters

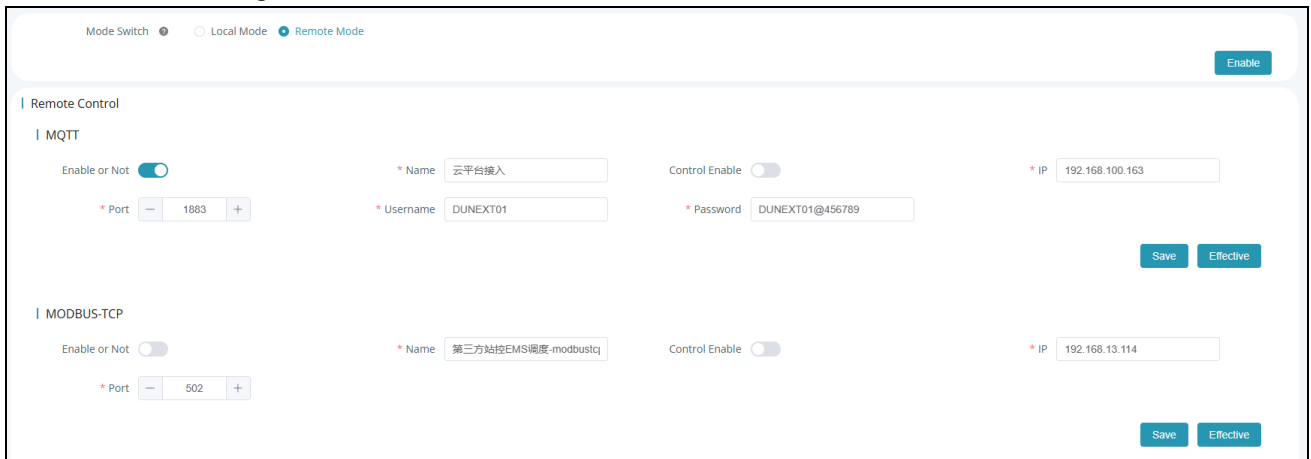

Mode Switch: ☒ Local Mode ☐ Remote Mode

Remote Control

MQTT

Enable or Not: ☒

* Name: 云平台接入

* Username: DUNEXT01

* Password: DUNEXT01@456789

* IP: 192.168.100.163

* Port: 1883

Control Enable: ☐

Save Effective

MODBUS-TCP

Enable or Not: ☐

* Name: 第三方站控EMS调度-modbusq

* IP: 192.168.13.114

* Port: 502

Control Enable: ☐

Save Effective

10.6.2 Protection

In Protection, users can view and configure related parameters such as anti-backflow setting, demand setting, SOC setting, system max charge/discharge power setting, and detection signal enable setting.

Figure 10-34 Protection Page

The screenshot displays the 'Protection' configuration page of the DN-EMS300 system. The interface includes a left sidebar with navigation options: Plant Overview, Monitoring, Strategy, Operation, Protection (highlighted with a red arrow), Thermal Management, Alarm, Data Export, and System. The main content area is divided into several sections, each with a title and a list of settings:

- Anti-backflow Setting:** Anti-Backflow Protection Enable (Enable), Anti-Backflow Margin (kW) (4).
- Demand Setting:** Demand Control (Enable), Max Demand (kW) (20).
- SOC Setting:** SOC Upper Limit (%) (100), SOC Upper Hysteresis (%) (5), SOC Lower Limit (%) (5), SOC Lower Hysteresis (%) (5).
- System Max Charge/Discharge Power Setting:** System Max Charge Power (kW) (250), System Max Discharge Power (kW) (250).
- Detection Signal Enable Setting:** Access Control Enable (Enable), Water Immersion Activation (Enable), External Fire Connection Enable (Disable).

Table 10-3 Protection Parameter Description

Parameter	Unit	Description	Value
SOC Upper Limit	%	Upper SOC threshold for ESS charging. When the battery cluster SOC is greater than or equal to this value, the EMS stops ESS charging and starts charge forbidden protection.	$SOC\ Lower\ Limit < X \leq 100$
SOC Upper Hysteresis	%	SOC upper limit hysteresis for the EMS to cancel charge forbidden protection. When the battery cluster SOC is less than the SOC upper limit minus the SOC upper hysteresis, the EMS clears the charge forbidden protection.	$0 \leq X \leq 100$
SOC Lower Limit	%	Lower SOC threshold for ESS discharging. When the battery cluster SOC is less than or equal to this value, the EMS stops ESS discharging and starts discharge forbidden protection.	$0 < X < SOC\ Upper\ Limit$
SOC Lower	%	SOC lower hysteresis for the EMS to	$0 \leq X \leq 100$

Parameter	Unit	Description	Value
Hysteresis		cancel discharge forbidden protection. When the battery cluster SOC is greater than the SOC lower limit plus the SOC lower hysteresis, the EMS clears the discharge forbidden protection.	
Access Control Enable		Access control function switch ● Enable: Function enabled ● Disable: Function disabled When the function is enabled, triggering access control issues 0 power to the PCS.	
Water Immersion Activation		Water immersion function switch ● Enable: Function enabled ● Disable: Function disabled When the function is enabled, water immersion triggering will cause shunt tripping.	
Anti-Backflow Protection Enable	-	Anti-backflow protection function switch ● Enable: Function enabled ● Disable: Function disabled	-
External Fire Connection Enable	-	External fire Connection function switch ● Enable: Function enabled ● Disable: Function disabled	-
Anti-Backflow Margin	kW	This parameter defines how the EMS determines whether backflow is about to occur. When the total active power of the grid meter is less than this parameter value, the EMS determines that backflow is about to occur and correspondingly reduces the ESS discharge power so that the total active power value of the grid meter always remains greater than this parameter value.	$X \geq 0$
Demand Control	-	Demand control function switch ● Enable: Function enabled ● Disable: Function disabled	-
Max Demand	kW	This parameter defines the maximum capacity of the transformer. When the total active power of the grid meter is greater than this parameter value, the EMS correspondingly	$X > 0$

Parameter	Unit	Description	Value
		reduces the ESS charging power so that the system power consumption remains below this parameter value.	
System Max Charge Power	kW	Sum of the rated power of all energy storage cabinets	X>0
System Max Discharge Power	kW	Sum of the rated power of all energy storage cabinets	X>0

10.6.3 Thermal Management

The EMS thermal management function controls devices such as fans, air conditioners, and liquid cooling units according to the maximum and minimum cell temperatures reported by the BMS, or according to system power.

Figure 10-35 Thermal Management Parameters

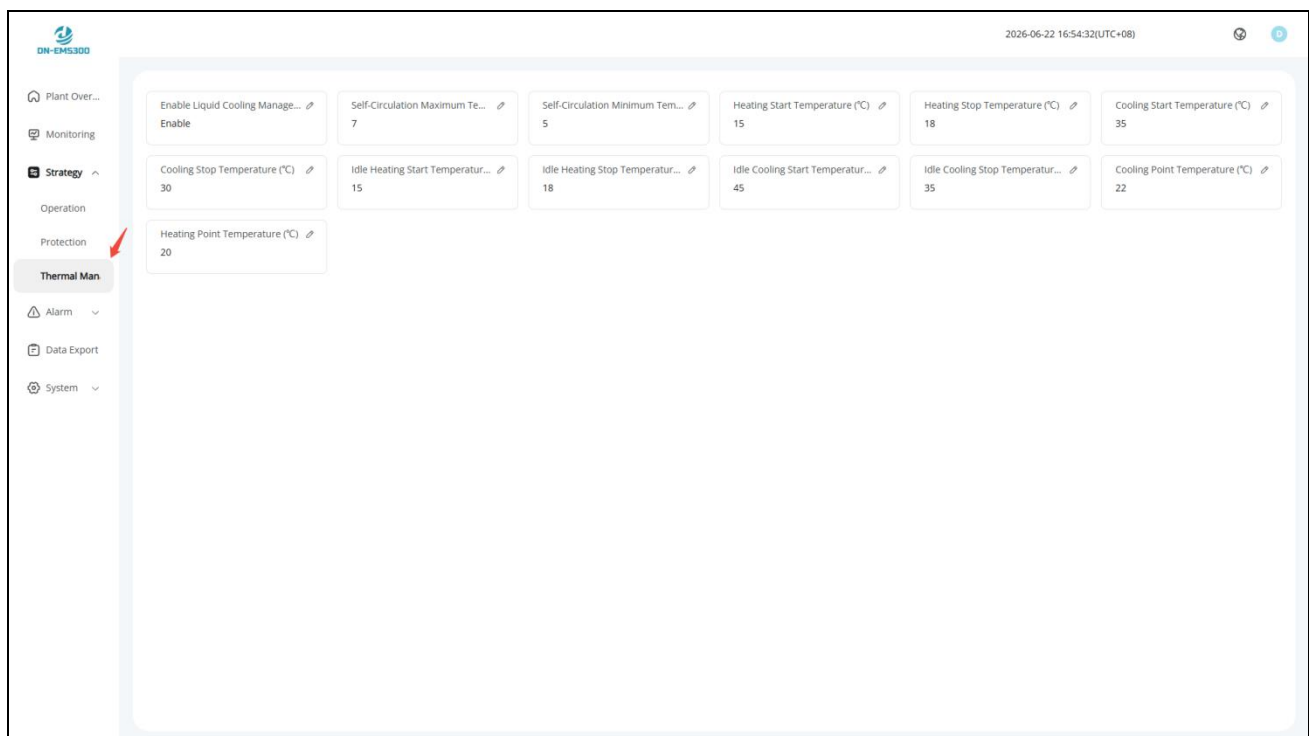


Table 10-4 Thermal Management Parameter Description

Parameter	Unit	Description	Value
Enable Liquid Cooling Management	-	Function switch for EMS control of the liquid cooling unit The EMS automatically starts or stops heating or cooling of the liquid cooling unit based on the	● Enabled: Function enabled ● Disabled: Function disabled

Parameter	Unit	Description	Value
		temperature thresholds set in the system.	
Self-Circulation Maximum Temperature Difference	°C	When the EMS detects that the temperature difference between the maximum cell temperature and the minimum cell temperature is greater than this threshold, the liquid cooling unit self-circulation mode is enabled.	$X \geq 0$
Self-Circulation Minimum Temperature Difference	°C	When the EMS detects that the temperature difference between the maximum cell temperature and the minimum cell temperature is less than this threshold, the liquid cooling unit self-circulation mode is disabled.	$X \geq 0$
Heating Start Temperature	°C	This parameter takes effect only when Enable Liquid Cooling Management = Enabled. When the device is in charging or discharging status, if the EMS detects that the minimum cell temperature is lower than this threshold, the liquid cooling unit heating is enabled.	$X \geq 0$
Heating Stop Temperature	°C	This parameter takes effect only when Enable Liquid Cooling Management = Enabled. When the device is in charging or discharging status, if the EMS detects that the minimum cell temperature is greater than this threshold, the liquid cooling unit heating is disabled and the liquid cooling unit is set to standby.	$X \geq 0$
Cooling Start Temperature	°C	This parameter takes effect only when Enable Liquid Cooling Management = Enabled. When the device is in charging or discharging status, if the EMS detects that the maximum cell temperature is greater than this threshold, the liquid cooling unit cooling is enabled.	$X \geq 0$
Cooling Stop	°C	This parameter takes effect only	$X \geq 0$

Parameter	Unit	Description	Value
Temperature		when Enable Liquid Cooling Management = Enabled. When the device is in charging or discharging status, if the EMS detects that the maximum cell temperature is lower than this threshold, the liquid cooling unit cooling is disabled and the liquid cooling unit is set to standby.	
Idle Heating Start Temperature	°C	This parameter takes effect only when Enable Liquid Cooling Management = Enabled. When the device is in standby status, if the EMS detects that the minimum cell temperature is lower than this threshold, the liquid cooling unit heating is enabled.	$X \geq 0$
Idle Heating Stop Temperature	°C	This parameter takes effect only when Enable Liquid Cooling Management = Enabled. When the device is in standby status, if the EMS detects that the minimum cell temperature is greater than this threshold, the liquid cooling unit heating is disabled and the liquid cooling unit is set to standby.	$X \geq 0$
Idle Cooling Start Temperature	°C	This parameter takes effect only when Enable Liquid Cooling Management = Enabled. When the device is in standby status, if the EMS detects that the maximum cell temperature is greater than this threshold, the liquid cooling unit cooling is enabled.	$X \geq 0$
Idle Cooling Stop Temperature	°C	This parameter takes effect only when Enable Liquid Cooling Management = Enabled. When the device is in standby status, if the EMS detects that the maximum cell temperature is lower than this threshold, the liquid cooling unit cooling is disabled and the liquid cooling unit is set to standby.	$X \geq 0$
Cooling Point Temperature	°C	Modify the cooling point temperature of the liquid cooling	$X \geq 0$


Parameter	Unit	Description	Value
		unit.	
Heating Point Temperature	°C	Modify the heating point temperature of the liquid cooling unit.	X>=0

10.7 Alarm

10.7.1 Active Alarm

You can view alarm information in the energy storage system, such as occurrence time, alarm level, and alarm name, to promptly identify problems of the system or device and take corresponding measures, troubleshoot potential risks, and ensure normal operation of the devices. You can also click the <Export> button to export the active alarm list.

Figure 10-36 Active Alarm Page

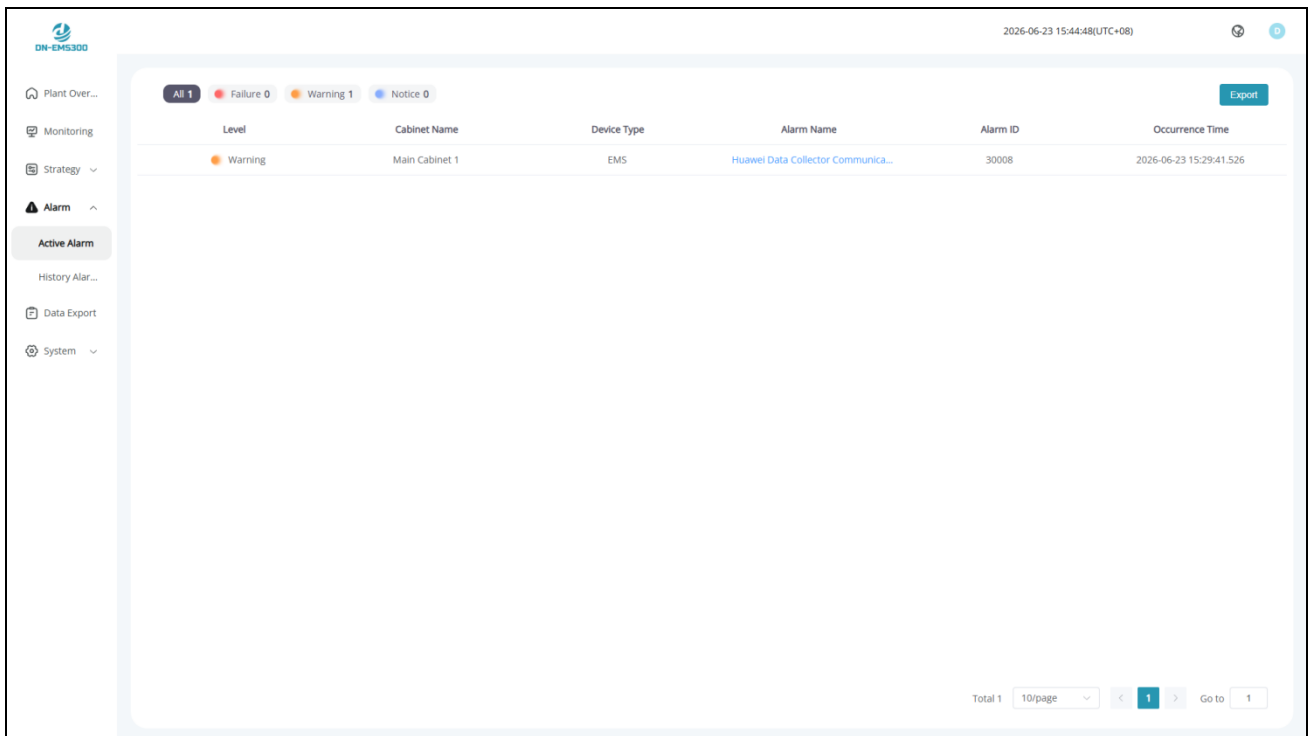

Level	Cabinet Name	Device Type	Alarm Name	Alarm ID	Occurrence Time
Warning	Main Cabinet 1	EMS	Huawei Data Collector Communica...	30008	2026-06-23 15:29:41.526

10.7.2 History Alarm

You can view historical alarm information that has been cleared in the energy storage system, such as occurrence time, end time, alarm level, and alarm name, helping users troubleshoot faults and ensure normal operation of the energy

storage system. The system supports filtering history alarms by alarm name, alarm ID, and occurrence time, as well as exporting the history alarm list.

Figure 10-37 History Alarm Page

The screenshot shows the 'History Alarm' page in the DN-EMS300 interface. The top navigation bar includes the system name 'DN-EMS300' and the current time '2026-06-22 16:57:27(UTC+08)'. The left sidebar contains menu items: Plant Overview, Monitoring, Strategy, Alarm, Active Alarm, History Alarm (selected), Data Export, and System. The main content area features search filters for Alarm Name, Alarm ID, Occurrence Time (Start Date, End Date), Cabinet Name, and Device Type. Below the filters is a summary bar showing 'All 59' alarms, with breakdowns for Failure (11), Warning (47), and Notice (1). An 'Export' button is located on the right. The table below lists individual alarm events with their levels, cabinet names, device types, names, IDs, occurrence times, and end times. At the bottom, a pagination bar indicates 'Total 59' records and '10/page' per page, with page numbers 1 through 6 and a 'Go to' field.

Level	Cabinet Name	Device Type	Alarm Name	Alarm ID	Occurrence Time	End Time
Warning	Main Cabinet 1	EMS	Slave 1-1 Communication Lo...	30031	2026-06-16 20:00:04.837	2026-06-17 09:34:45.877
Warning	Main Cabinet 1	EMS	Huawei Data Collector Com...	30008	2026-06-16 19:59:48.881	2026-06-17 09:34:53.719
Warning	Main Cabinet 1	EMS	Slave 1-1 Communication Lo...	30031	2026-06-16 19:15:06.187	2026-06-16 19:22:17.760
Warning	Main Cabinet 1	EMS	Slave 1-1 Communication Lo...	30031	2026-06-16 19:10:51.003	2026-06-16 19:12:56.600
Failure	Main Cabinet 1	DIDO	Door Access	7009	2026-06-16 16:13:39.873	2026-06-16 16:13:56.837
Warning	Main Cabinet 1	EMS	Slave 1-1 Communication Lo...	30031	2026-06-15 15:54:44.667	2026-06-15 15:55:56.793
Warning	Main Cabinet 1	EMS	Huawei Data Collector Com...	30008	2026-06-15 15:54:28.511	2026-06-16 16:05:07.877
Warning	Main Cabinet 1	EMS	Huawei Data Collector Com...	30008	2026-06-12 18:56:28.106	2026-06-15 09:39:49.593
Warning	Main Cabinet 1	EMS	Huawei Data Collector Com...	30008	2026-06-11 20:04:33.464	2026-06-12 09:30:38.099
Warning	Main Cabinet 1	EMS	Huawei Data Collector Com...	30008	2026-06-10 20:14:15.444	2026-06-11 09:38:57.175

10.8 Data Export

After selecting the main/slave device and date, click the <Export> button. A prompt window will appear; click Confirm to export.

Figure 10-38 Data Export

The screenshot shows the 'Data Export' process in the DN-EMS300 interface. The left sidebar has 'Data Export' selected. The main area shows 'Device Selection' set to 'Main Cabinet 1' and 'Time Range' set to '2026-06-22'. The 'Export' button is highlighted with a red box. A confirmation dialog box is displayed, asking to confirm downloading the file 'MainCabinet1_20260622.tar.gz?'. The 'Confirm' button in the dialog is also highlighted with a red box.

10.9 System

10.9.1 Plant

Fill in the main-slave cabinet switching, energy storage rated power, power plant capacity, plant time zone, and commissioning date according to the actual situation. Click the edit icon in the upper-right corner of a parameter box to edit the parameter, and click <Confirm> to complete the operation.

Figure 10-39 Plant Page



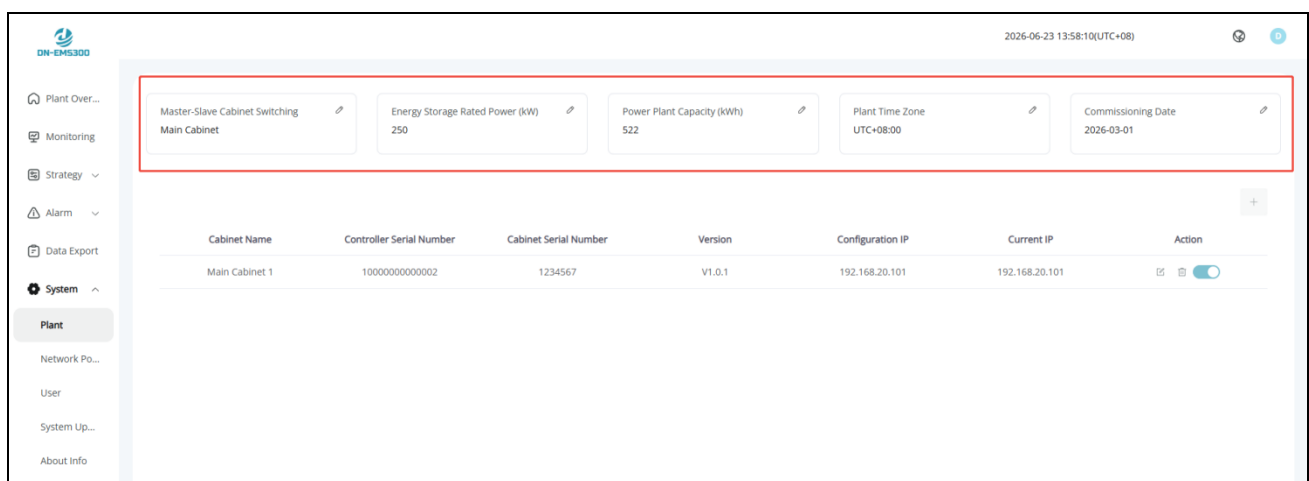


Figure 10-40 Plant Parameter Editing

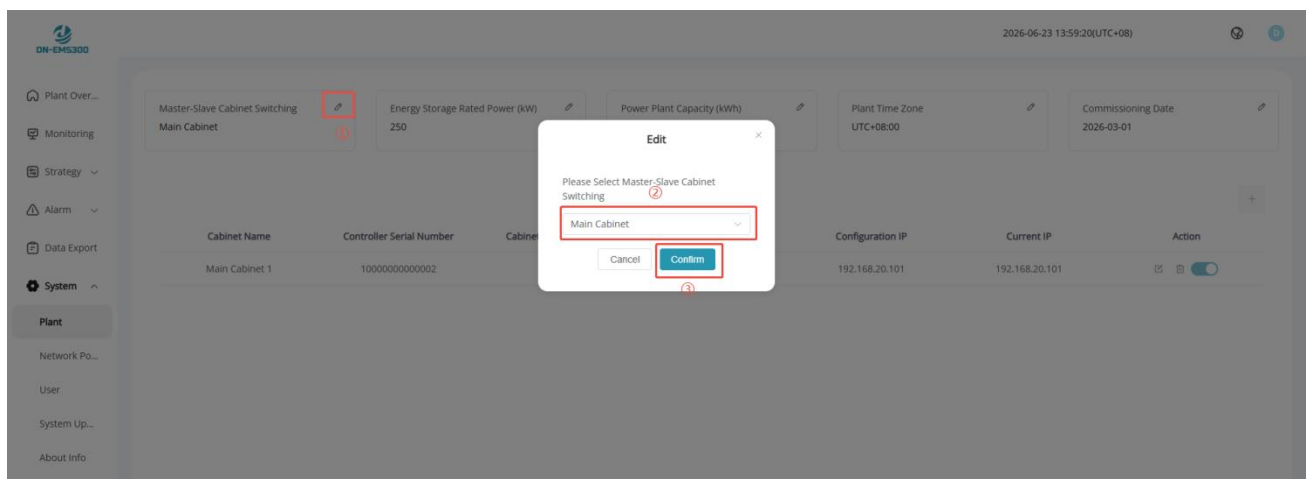

Click the  button in the upper-right corner of the table to add main/slave cabinet information. The cabinet serial must be unique. After completing the information, click <Confirm> to finish adding it.

Figure 10-41 Main/Slave Cabinet Adding

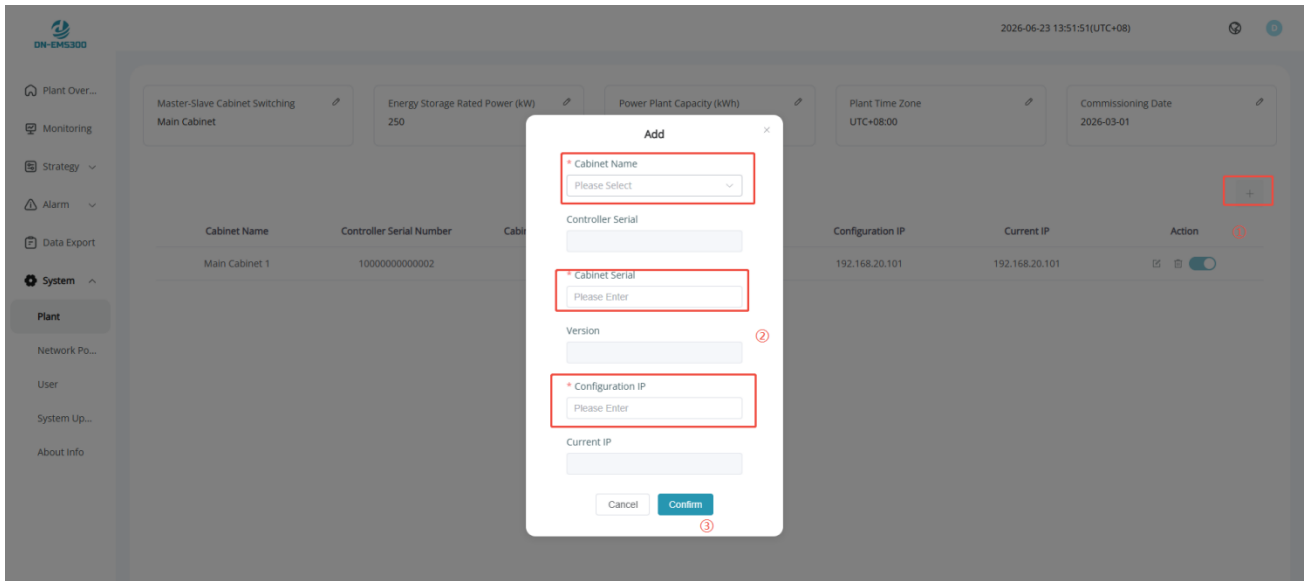

Click the row edit icon in the table to open the edit pop-up window. For the main cabinet, only the cabinet serial can be edited. For a slave cabinet, the cabinet name, cabinet serial, and configuration IP can be edited.

Figure 10-42 Main Cabinet Editing



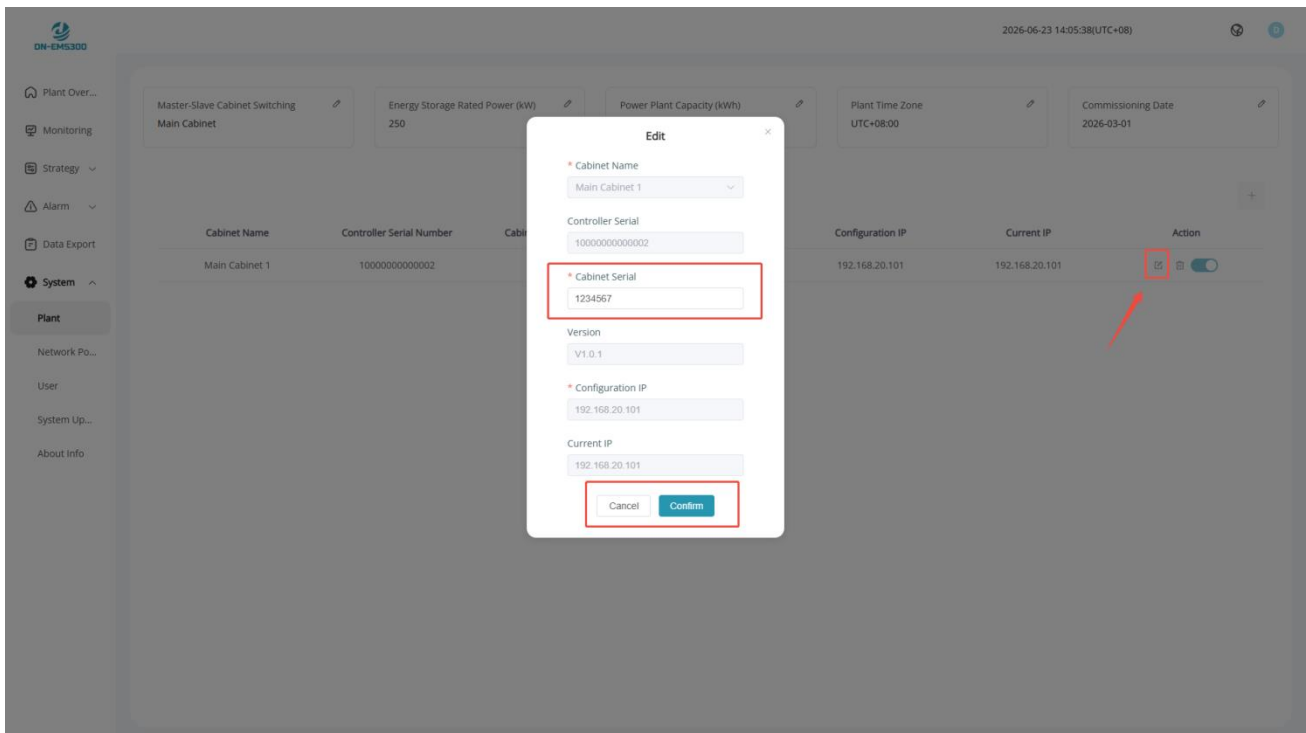


Figure 10-43 Slave Cabinet Editing

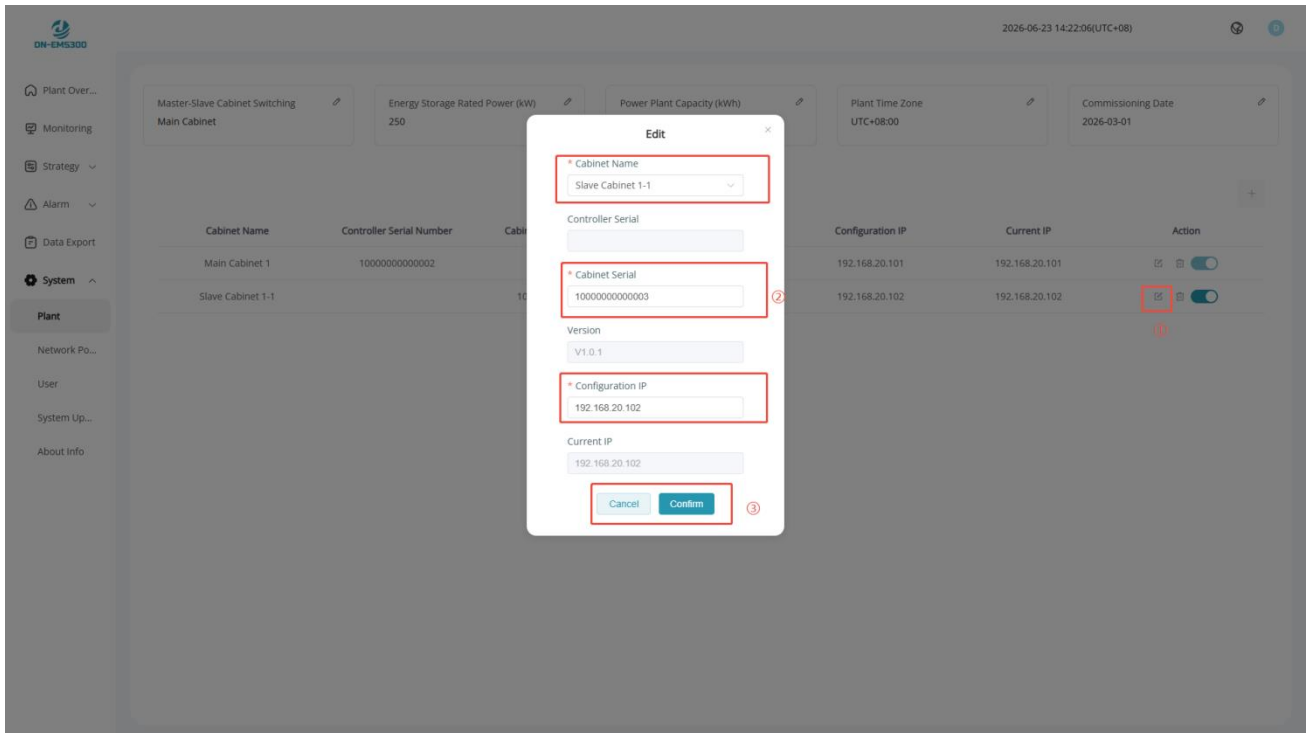


The main cabinet cannot be deleted by default. For a slave cabinet, click the row delete icon in the table to delete it.

Figure 10-44 Main/Slave Cabinet Deletion

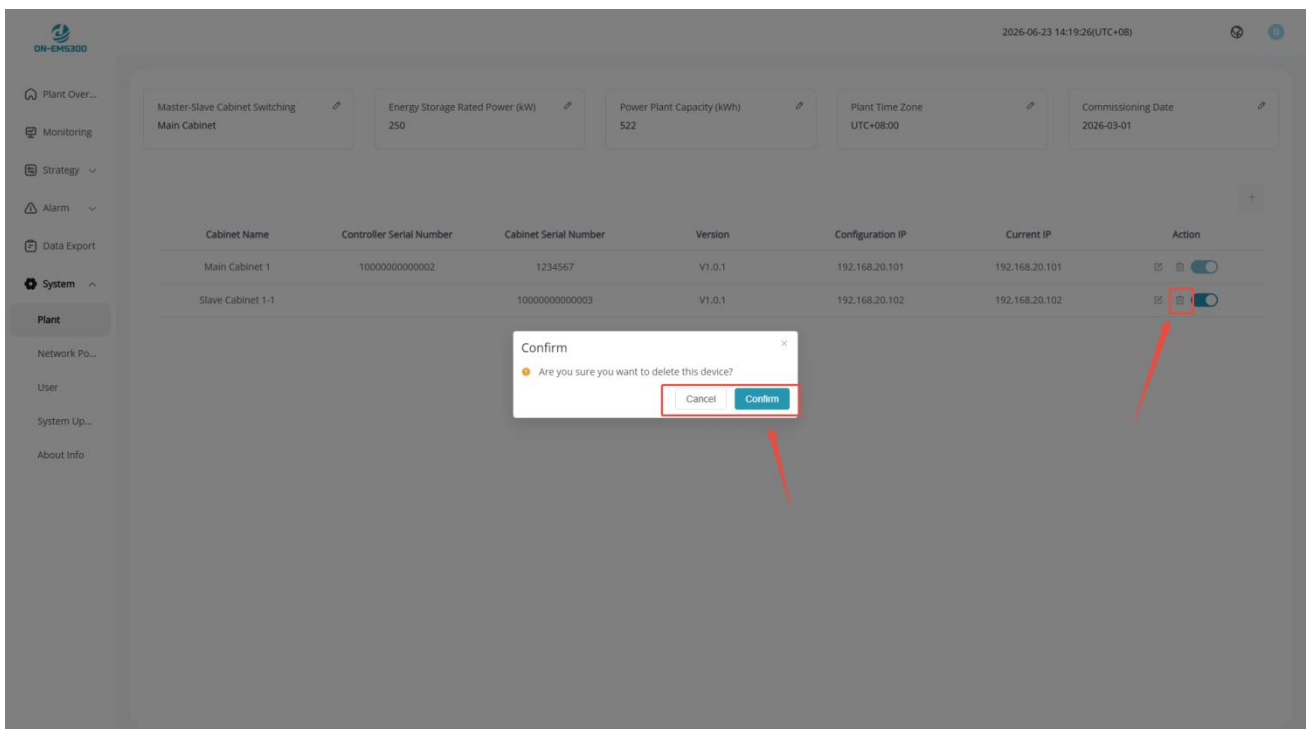

Each row in the table has an enable switch that determines whether the row can be edited. If the switch is enabled, the row is editable. If the switch is disabled, the entire row turns gray and cannot be edited. The switch for the main cabinet is disabled by default and cannot be changed.


Figure 10-45 Enable Switch Operation

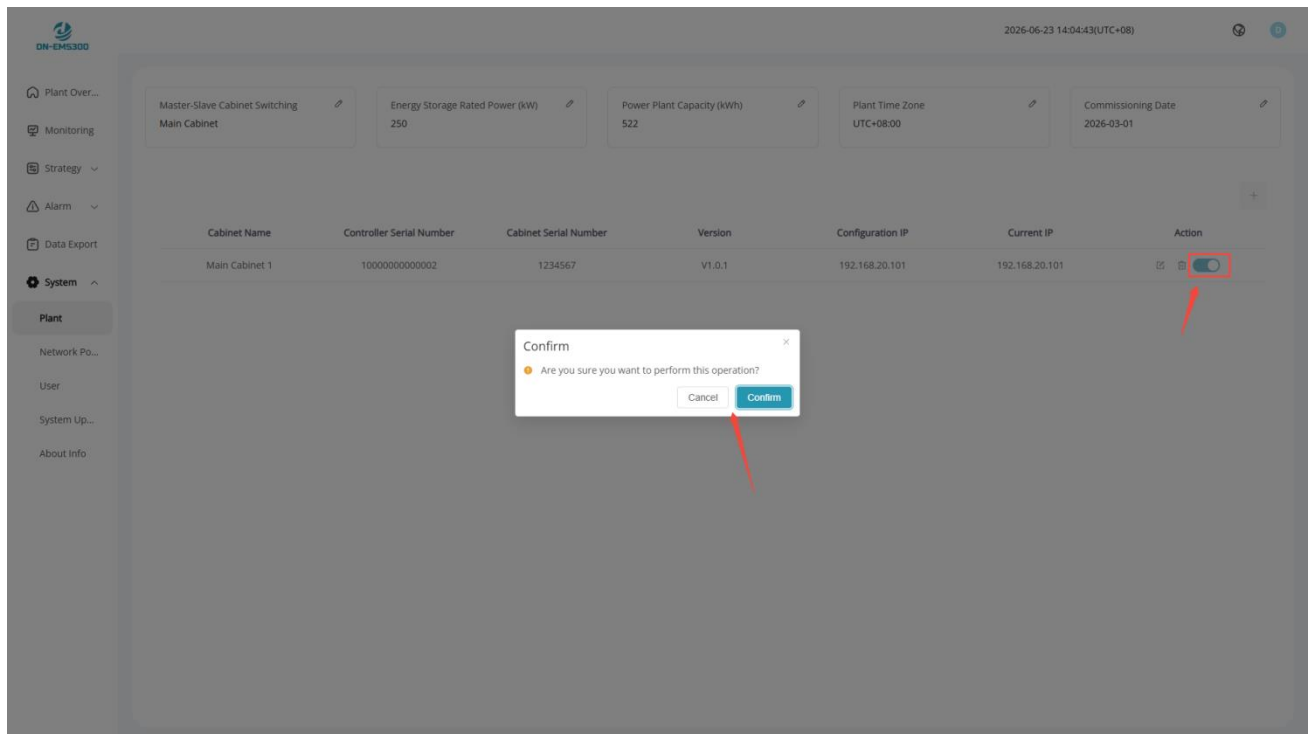

10.9.2 Network Port Configuration

Select Network Port Config in the left panel to view and set the LAN port configuration.


Figure 10-46 Network Port Configuration Page

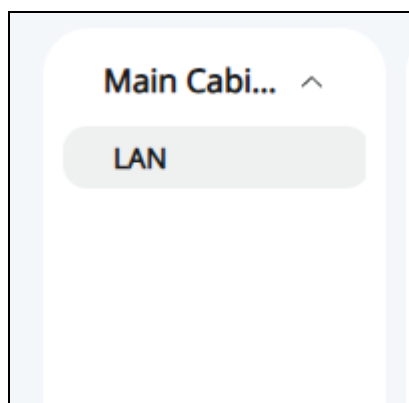

Procedure

1. Click System -> Network Port Config.
2. Select the LAN tab.

Figure 10-47 LAN Port Configuration Page

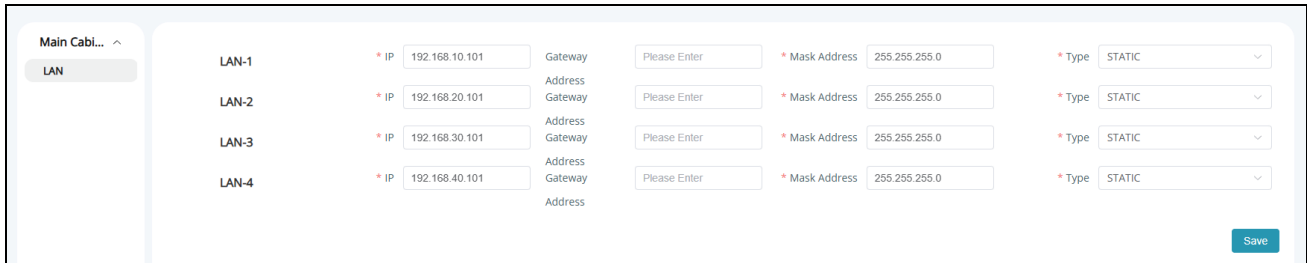


Port	* IP	Gateway	* Mask Address	* Type
LAN-1	192.168.10.101	Please Enter	255.255.255.0	STATIC
LAN-2	192.168.20.101	Please Enter	255.255.255.0	STATIC
LAN-3	192.168.30.101	Please Enter	255.255.255.0	STATIC
LAN-4	192.168.40.101	Please Enter	255.255.255.0	STATIC

10.9.3 User

Administrators can modify, add, and delete users on the System -> User page.

Figure 10-48 User Page

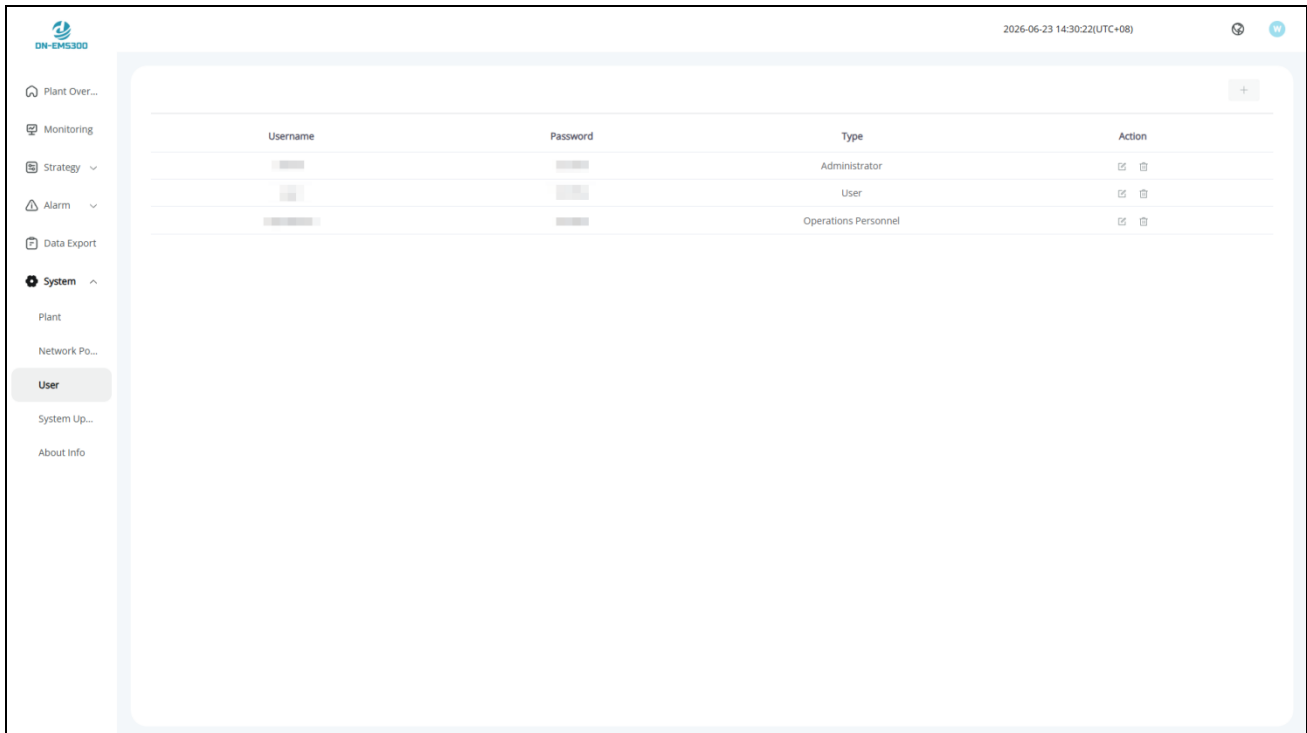


Username	Password	Type	Action
		Administrator	Edit Delete
		User	Edit Delete
		Operations Personnel	Edit Delete

Add user procedure:

1. Click the  icon in the upper-right corner;
2. Enter the username, password, and type in the pop-up window;
3. Click the <Confirm> button to save.


Figure 10-49 Add User Pop-Up Window

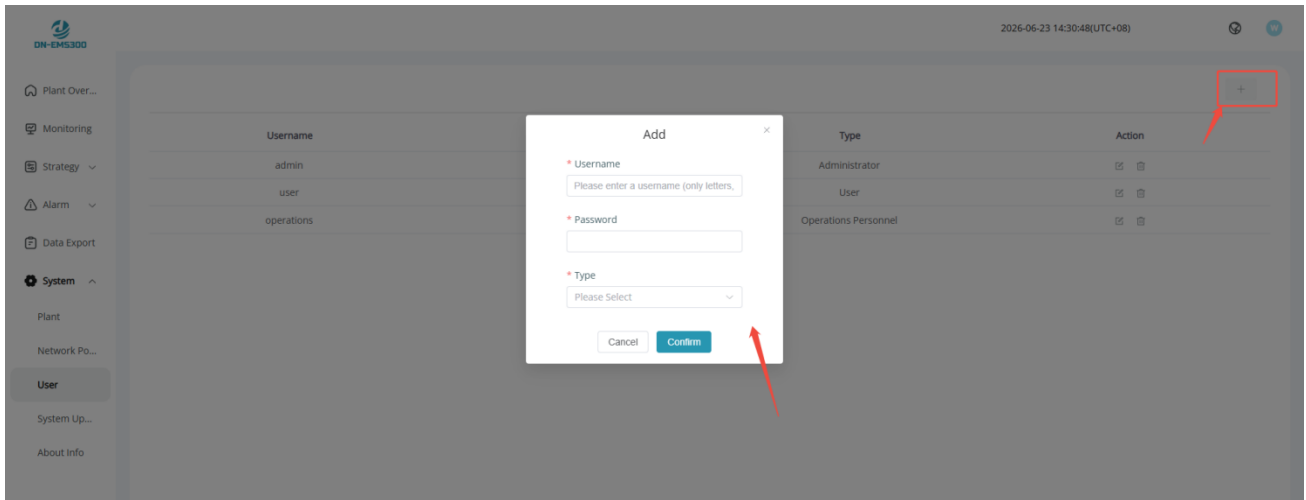

Modify user information procedure:


1. Click the edit icon in the selected row to open the edit pop-up window;
2. Modify the password and type in the pop-up window. The username cannot be modified;
3. Click the <Confirm> button to save.

Figure 10-50 Modify User Pop-Up Window

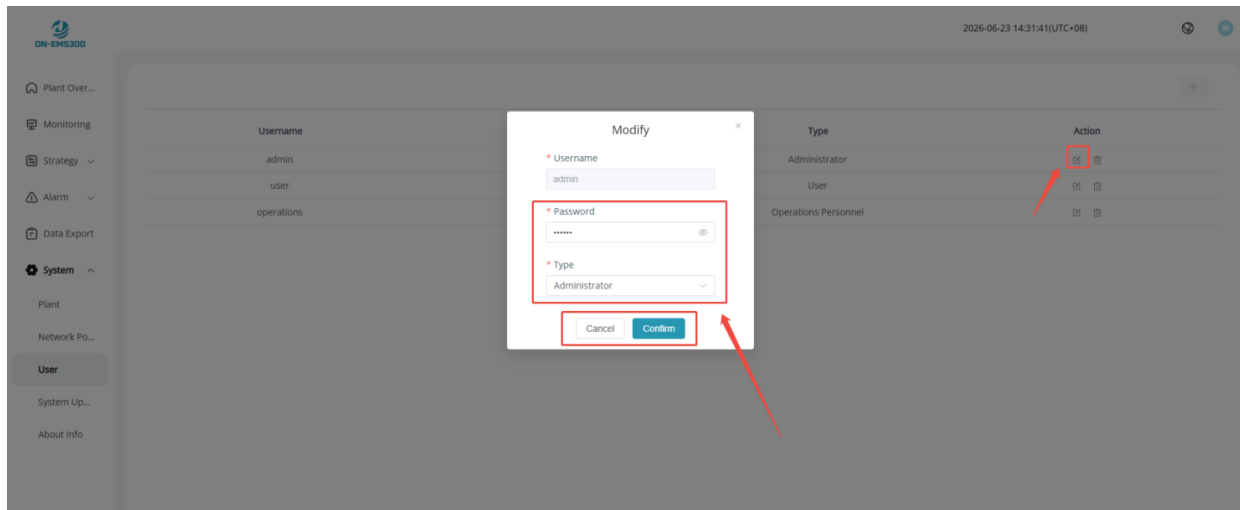

Click the delete icon in the selected row to delete a user.


Figure 10-51 Delete User Pop-Up Window

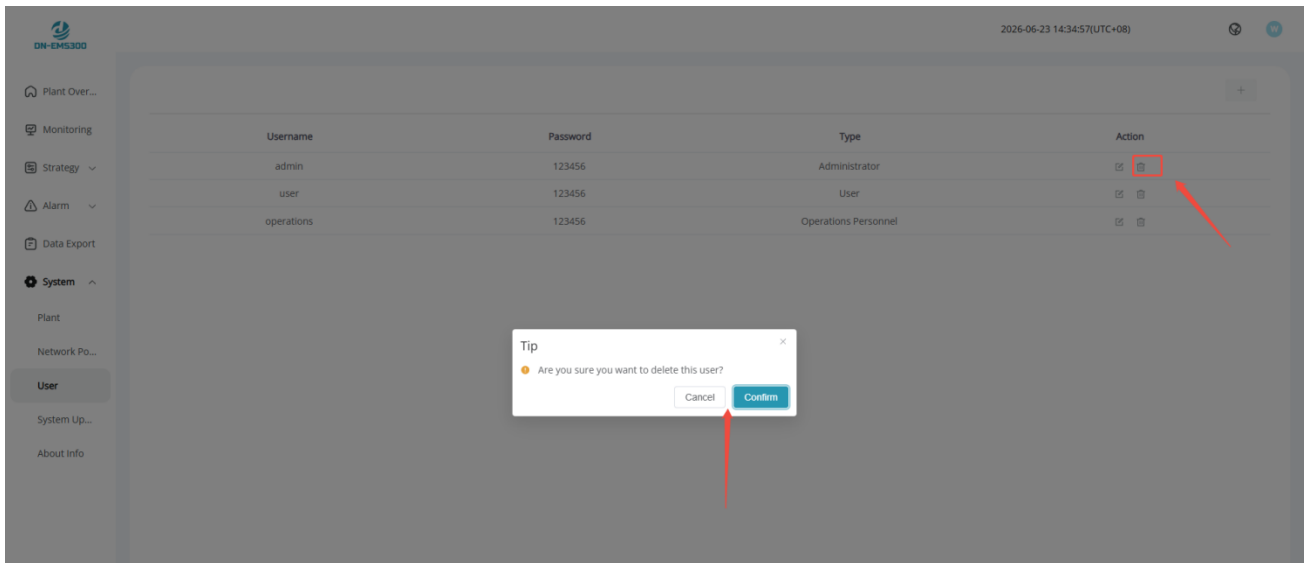

10.9.4 System Upgrade

Enter the account login password to access the System Upgrade page.

Figure 10-52 System Upgrade Verification Page

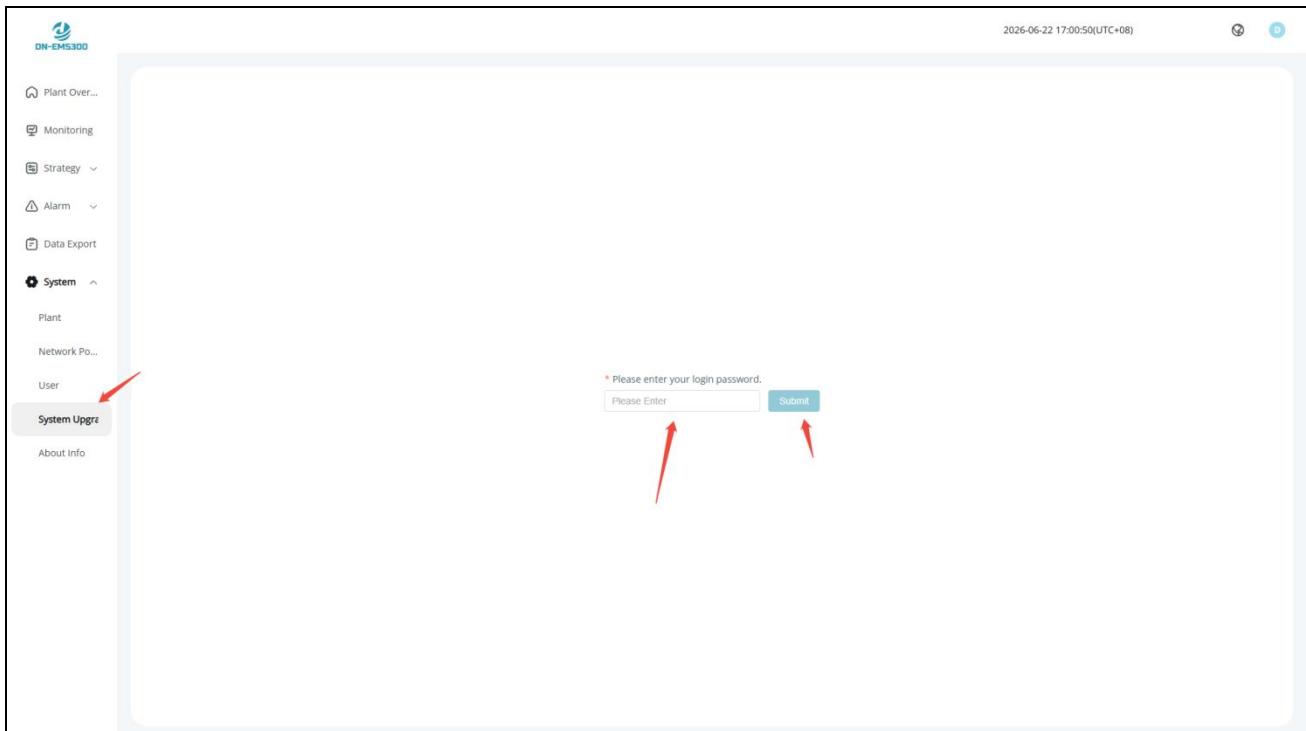


10.9.4.1 System Upgrade

Procedure

1. Click System -> System Upgrade;
2. Select System Upgrade;
3. Select the cabinet to be upgraded in Device Selection;
4. Click the file upload area to upload the upgrade file. In the pop-up Open dialog box, locate the directory where the upgrade file is stored, select the required tar.gz file, and then select Open;
5. Click the <Upload> button in the lower-right corner of the page;
6. After the upload is successful, click the <Upgrade> button;
7. After the upgrade is successful, click <Restart Now>. The upgrade takes effect only after the system restarts.

Figure 10-53 Upgrade File Upload Page

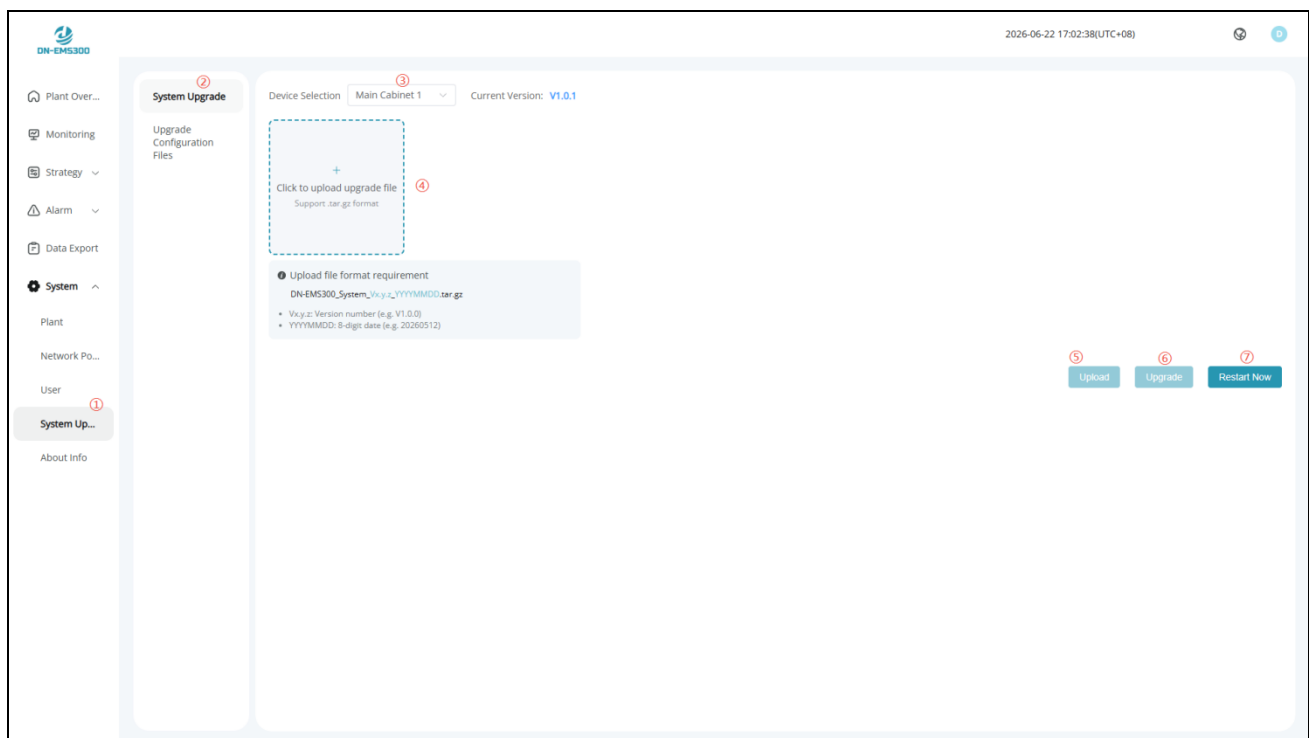


10.9.4.2 Upgrade Configuration Files

Procedure

1. Click System -> System Upgrade;
2. Select Upgrade Configuration Files;
3. Select the cabinet to be upgraded in Device Selection;

4. Click the file upload area to upload the upgrade file. In the pop-up Open dialog box, locate the directory where the upgrade file is stored, select the required tar.gz file, and then select Open;
5. Click the <Upload> button in the lower-right corner of the page;
6. After the upload is successful, click the <Upgrade> button;
7. After the upgrade is successful, click <Restart Now>. The upgrade takes effect only after the system restarts.

Figure 10-54 Configuration File Upload Page

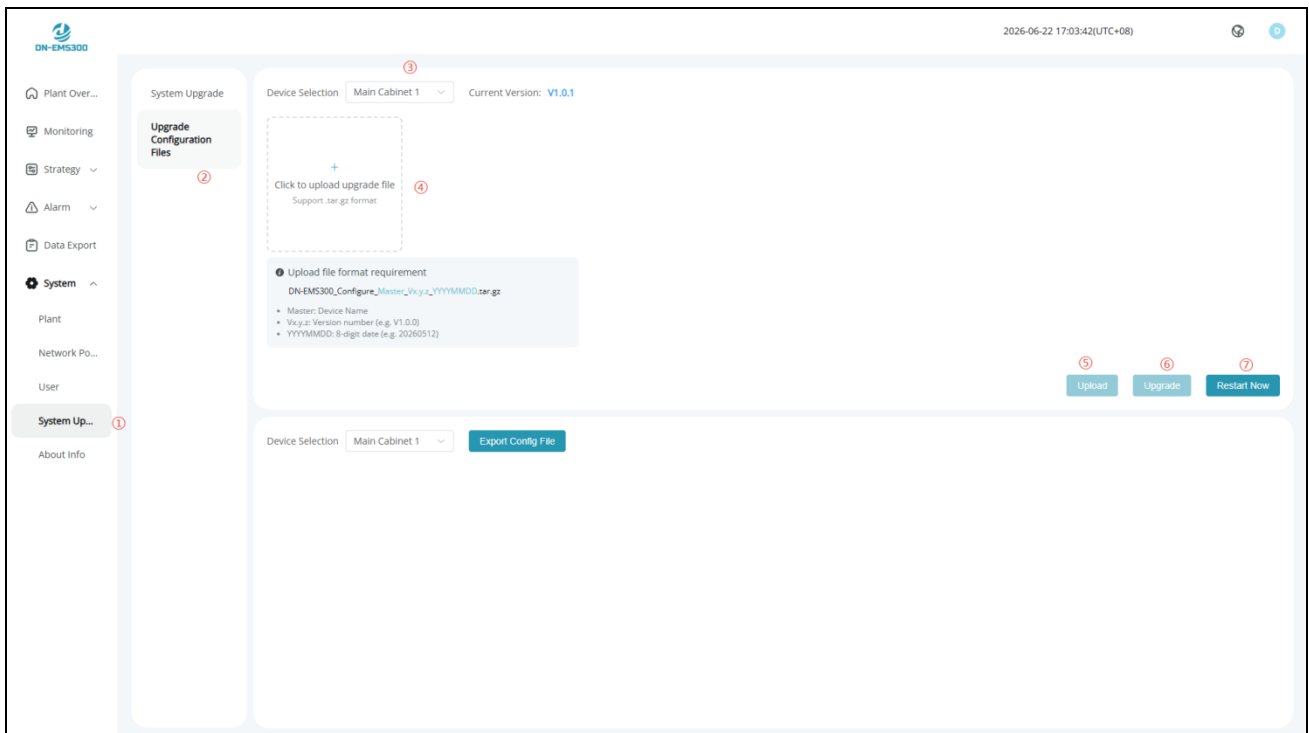


10.9.4.3 Export Configuration File

Procedure

1. Click System -> System Upgrade.
2. Select Upgrade Configuration Files.
3. Select the cabinet whose configuration needs to be exported.
4. Click <Export Config File> to export.

Figure 10-55 Configuration File Export

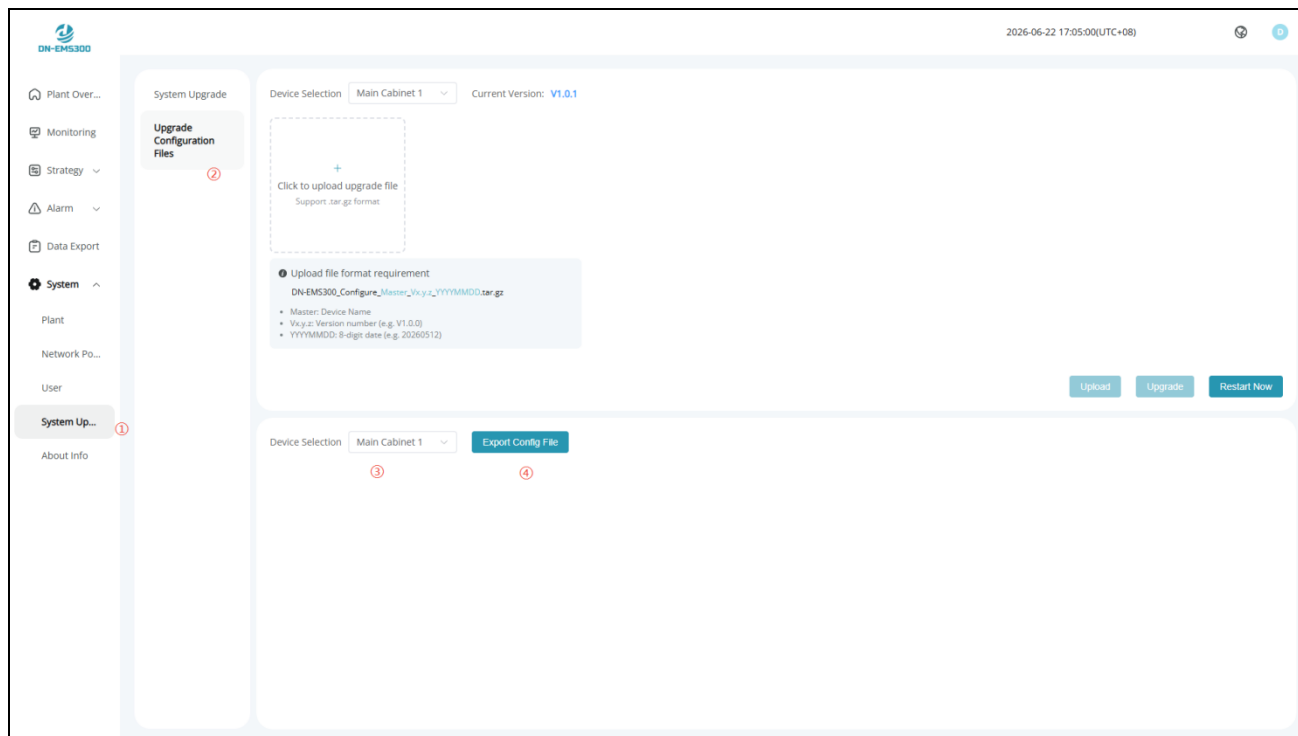

11

Operation, Maintenance, and Troubleshooting

To ensure proper operation of all devices inside the outdoor BESS, regular maintenance is required. The maintenance intervals provided in this section are for reference only. Actual maintenance intervals should be reasonably determined based on the specific environmental conditions of the project site. If the outdoor BESS operates in harsh environments—such as desert regions—the maintenance intervals should be shortened accordingly. In particular, internal and external cleaning, as well as anti-corrosion and rust prevention measures, should be carried out more frequently. For systems installed in desert areas, it is recommended to thoroughly inspect and clean the interior and exterior of the battery cabinet after each sandstorm.



WARNING!

Regularly check the operation of the module cooling fans and other fans inside the battery cabinet. Pay attention to any abnormal noises such as friction sounds, which may be caused by dust ingress. If such issues occur, the battery cabinet must be shut down and the dust removed. After completely powering off the battery cabinet, wait at least 10 minutes to allow internal capacitors to discharge. Before cleaning, use a multimeter to confirm that there is no residual voltage inside the equipment to avoid electric shock.

Most maintenance tasks require removal of protective meshes or covers inside the equipment. After all maintenance work is completed, be sure to reinstall all removed protective covers and ensure that all screws are securely fastened.

During routine maintenance and inspections of devices inside the battery cabinet, immediately correct any nonconformities found. If you have any questions, please contact Dunext promptly.

11.1 Monthly Operation & Maintenance Requirements

No.	Check Item	Check Method	Maintenance Interval
1	Appearance	Check if the cabinet exterior has paint peeling or rust.	Every Month
2	Cabinet Grounding	Check if grounding is reliable.	
3	Battery Cabinet O&M Requirements		
3.1	Sealing Strip	Ensure cabinet doors open and close smoothly; sealing strips should not be aged, damaged, or detached. They must fit tightly when closed.	
3.2	IP Rating Check	Check for water marks along cabinet door edges.	
3.3	Battery Mounting Bracket	Check for deformation or loose mounting screws.	
3.4	Battery Modules	Check for bulging, leakage, or pungent gases from the battery.	
3.5	Cables	Check if high-voltage and communication cables are damaged or disconnected.	
3.6	Module Indicators	Check if indicator lights of smoke detectors, temperature sensors, and combustible gas detectors are on.	
3.7	Dehumidifier	Verify the dehumidifier's parameters are accurate.	
4	Electrical Cabinet O&M Requirements		
4.1	Sealing Strip	Ensure cabinet doors open and close smoothly; sealing strips should not be aged, damaged, or detached. They must fit tightly when closed.	
4.2	IP Rating Check	Check for water marks along cabinet door edges.	
4.3	Louver	Check for blockages; inspect whether filter cotton needs cleaning.	
4.4	Circuit Breaker	Check if the DC main circuit breaker operates normally.	
4.5	Internal Power Meter	Check if the internal power meter is lit and displaying data correctly.	
4.6	Module Indicators	Check if indicator lights on the power supply module, IO controller module, and water leakage sensor module are on. Also check system status indicators.	
4.7	High-voltage Cables	Inspect cable connection points for signs of burning or torque marker changes.	
4.8	Air Filter Cleaning	Ensure the equipment is shut down and disconnected from power. Loosen the air filter screws (without fully removing) fixed on the device. Gently pull out the air filter, avoiding damage to	

No.	Check Item	Check Method	Maintenance Interval
		internal components. Clean the air filter using a dry soft brush or vacuum cleaner. Reinstall the cleaned air filter and tighten screws in the correct sequence.	
5	Liquid Cooling Unit O&M Requirements		
5.1	Operating Data	Verify the following parameters during unit operation: Current: Less than the maximum operating current indicated on the nameplate Voltage: 220V ±15% Coolant operating temperature: -30°C to 55°C Return water pressure ≥ 0.8 bar	
5.2	Operating Sound	Ensure no abnormal vibration or noise; observe the following components: - Compressor - Fan - Circulation water pump	
5.3	Pipeline Integrity	Ensure no refrigerant leakage in the cooling system and no coolant leakage in the circulation system.	
5.4	Appearance	The liquid cooling unit surface should be clean and free of dust and stains.	

11.2 Annual Operation & Maintenance Requirements

The C&I energy storage system has an IP55 protection rating and is suitable for outdoor use. However, harsh environments or long-term operation can still cause aging of the integrated energy storage system or damage to internal devices. Regular maintenance inspections of the integrated energy storage system and replacement of aged or damaged components will effectively extend its service life and improve the performance of internal devices.

Maintenance Cycle:

To ensure the proper operation of all devices within the energy storage cabinet, regular maintenance should be performed. The maintenance cycles provided here are reference values. The actual maintenance cycle should be reasonably determined based on the actual environmental conditions of the project site. If the energy storage cabinet operates in a harsh environment, such as a desert area, the corresponding maintenance cycle should be shortened. In particular, internal and external cleaning, anti-corrosion, and anti-rust work should be performed more frequently. If the system is installed in a desert area, it is recommended that after each sandstorm, the inside and outside of the energy storage cabinet be carefully inspected and thoroughly cleaned.

Maintenance Tasks (Every six months to one year)	
Item	Inspection Content
Safety Functions	Check the emergency stop button and the LCD stop function.
	Simulate a stop.
	Check machine warning labels and other equipment labels. If they are found to be blurred or damaged, replace them promptly.
	1. Check whether the cabinet door opens and closes flexibly, and whether the door lock, hinges, etc. are functioning properly and in good condition. If necessary, appropriately lubricate the door lock keyhole, hinges, etc. 2. Check whether the sealing gasket is aged, damaged, or detached. After closing, it should fit tightly.
	Check for any external water ingress into the cabinet to confirm whether the IP rating has failed.
Internal Components Inspection	Check whether the battery pack support bracket is deformed or the fixing screws are loose.
	Check whether the battery pack has any leakage or emits any pungent gas.
	Check whether the dehumidifier parameters are accurate.
	Check whether the indicators of the smoke detector, temperature sensor, combustible gas detector, switching power supply module, IO controller module, and water sensor module are lit. C
	Check whether the system status indicator is lit.
	Check whether the DC main circuit breaker can be opened and closed normally.
	Check whether the meter is lit and whether the data is normal.
	Check the high-voltage harness connections for any signs of burning or changes in torque.
	Check the dust accumulation on various modules. If necessary, clean the modules using a vacuum cleaner.
Component Maintenance	Check whether the louver is blocked and whether the filter cotton requires dust removal. If the filter cotton is damaged, replace it promptly.
	Perform a routine inspection for corrosion on all metal components (every six months).
	Perform an annual inspection of contactors (auxiliary switches and micro-switches) to ensure their mechanical operation is in good condition.
Liquid Cooling Unit Operation & Maintenance Requirements	Check operating parameters (especially voltage and insulation).
	The current, voltage, inlet/outlet water temperature/pressure, etc., during unit operation shall comply with the following ranges: Current: Less than the maximum operating current marked on the nameplate. Voltage: 220V $\pm$ 15%.

Maintenance Tasks (Every six months to one year)	
Item	Inspection Content
	Coolant operating temperature range: $-30^{\circ}\text{C} \sim 55^{\circ}\text{C}$. Return water pressure: ≥ 0.8 bar.
	The unit shall operate without abnormal vibration or noise. Observe the operation of the following components: 1. Compressor 2. Fan 3. Circulating water pump
	Piping reliability: 1. No refrigerant leakage from the refrigeration system. 2. No leakage from the coolant circulation system.
	Unit appearance: The unit surface is clean, dust-free, and free of dirt.

Maintenance Tasks (Every one year)	
Item	Inspection Content
Cabinet Exterior	1. Check whether there are flammable objects on top of the energy storage cabinet. 2. Check whether the foundation fixing screws of the energy storage cabinet are secure and free from corrosion. 3. Check whether the energy storage cabinet enclosure has any damage, paint loss, oxidation, etc.
Cabinet Interior	Check the interior of the energy storage cabinet for foreign objects, dust, dirt, and condensation.
Air Inlets/Outlets	Check the internal dust accumulation. If necessary, clean the relevant modules using a vacuum cleaner.
Wiring and Cable Arrangement	1. Check whether the cable arrangement is standardized and whether there are any risks such as short circuits. If any abnormality is found, correct it immediately. 2. Check whether all cable entry and exit holes of the energy storage cabinet are properly sealed. 3. Check for any water ingress inside the energy storage cabinet. Check whether power cable connections are loose, and re-tighten according to the previously specified torque. 4. Check power cables and control cables for any damage, especially whether the outer sheath in contact with metal surfaces has any cut marks. 5. Check whether the insulating tape at the terminals of power cables is detached.
Grounding and Equipotential Bonding	1. Check whether the grounding connection is correct. The grounding resistance value shall not exceed 4Ω . 2. Check whether the equipotential bonding inside the energy storage cabinet is correct.
Fans	1. Check the operating status of the fans.

Maintenance Tasks (Every one year)	
Item	Inspection Content
	2. Check whether the fans are blocked. 3. Check whether there is any abnormal noise from the fans during operation.
Wall Penetrations	Check whether the IP rating of various types of wall penetration components has failed.
Screws	Check whether any screws have fallen inside the energy storage cabinet.
Liquid Cooling Unit Operation & Maintenance Requirements	Condenser Cleaning 1. The condenser is free from dust and foreign object blockage. 2. The fins are not severely bent or deformed.
	Electrical Connections 1. Electrical cables and terminals are not loose. 2. Electrical cables show no signs of aging, damage, abnormal heating, or other anomalies. 3. The terminal panel is free from dust.
	Coolant 1. Appearance: Clear, transparent liquid with no precipitation or suspended matter. 2. pH > 7. 3. Freezing point: $\pm 2^{\circ}\text{C}$ of the product specification.

11.3 Biennial Operation & Maintenance Requirements

Maintenance Tasks (Every two years)	
Item	Inspection Content
System Status and Cleaning	Check the following items. If any do not meet the requirements, correct them immediately: 1. Check whether the energy storage cabinet and internal devices are damaged or deformed. 2. Check whether internal devices produces any abnormal noise during operation. 3. Check whether the internal temperature of the energy storage cabinet is too high. 4. Check whether the internal humidity and dust level of the energy storage cabinet are within the normal range. Clean if necessary. 5. Check whether the air inlets and outlets of the energy storage cabinet are blocked.
Warning Labels	Check that warning signs and labels are clearly visible and not dirty or damaged. Replace if necessary.
Cable Shield Grounding	Check whether the cable shield is in good contact with the insulating bushing and whether the grounding copper busbar is properly fixed.

Maintenance Tasks (Every two years)	
Item	Inspection Content
Surge Protection Devices and Fuses	Check whether surge protection devices and fuses are in good condition and properly tightened.
Corrosion	Check for any oxidation or corrosion inside the energy storage cabinet.

11.4 ESS Troubleshooting

Table 11-1 Common Troubleshooting

No.	Fault Name	Solution
1	PCS communication interruption	Check the communication network cable between the PCS and the EMS.
2	Communication interruption with the liquid cooling unit, BMS, or dehumidifier	Check the RS485 communication cables from the liquid cooling unit, BMS, and dehumidifier to the EMS.
3	Low battery SOC	Charge in time
4	Differential cell voltage fault	Notify the manufacturer
5	BMS communication failure	Check BMS communication harness
6	High temperature of air inlet and outlet	Check the air inlet and outlet for blockage
7	Grid phase sequence alarm	Check for correct wiring sequence on the grid side
8	Electricity becomes low	Calibrate SOC

12

Technical Data

Model	PowerHill-P125-261kWh
Battery	
Cell Type	LFP/314Ah
System Configuration	1P52S*5
Rated Battery Capacity	261kWh
Nominal Voltage	832V
Battery Voltage Range	715~936V
AC Output	
Rated Power	125kW
Rated Grid Voltage	230V/400V, 3W+N+PE
Voltage Range	±15%
Rated Grid Frequency	50Hz
Rated Power	125kW
Rated Current	181A
Isolation Method	Non-isolated
Power Factor	0.99 / -1 ~ 1
Overload Capacity	110% Continuous
General Parameters	
Enclosure IP Rating	IP55
Enclosure Anti-corrosion Grade	C5M
Dimensions (W×H×D)	1026*2366*1350mm
Weight	< 2800kg
Operating Temperature Range	-25~55°C (Derating above 45°C)
Storage Temperature Range	-20~45°C
Relative Humidity	0 ~ 100% RH
Operating Altitude	4000m (> 2000m derated)
Noise Level	≤70dB
Cooling Method	Liquid Cooling
Fire Suppression Gas	Aerosol (Pack-level)

Model	PowerHill-P125-261kWh
Fire Resistance	1h
Auxiliary Power Supply Interface	230Vac/50Hz, L+N
Auxiliary System Peak Power	≤4kW
Communication Interface	Ethernet

A Crimp an OT / DT Terminal

Requirements on an OT or DT Terminal

- If a copper cable is used, use copper wiring terminals.
- If a copper-clad aluminum cable is used, use copper wiring terminals.
- If an aluminum alloy cable is used, use copper-to-aluminum wiring terminals, or aluminum wiring terminals along with copper-to-aluminum washers.

NOTICE


NOTICE!

Do not connect aluminum wiring terminals to the terminal block. Otherwise electrochemical corrosion may occur, affecting the reliability of cable connections.

Comply with the IEC 61238-1 requirements when using copper-to-aluminum wiring terminals, or aluminum wiring terminals along with copper-to aluminum washers.

Do not mix up the aluminum and copper sides of a copper-to-aluminum washer. The outer contour of the washer shall not be smaller than that of the OT/DT terminal. Ensure that the aluminum side of the washer contacts the aluminum wiring terminal, and that the copper side contacts the terminal block. It is recommended that washers and terminals be purchased from the same vendor.

Figure A-1 Requirements on an OT or DT Terminal

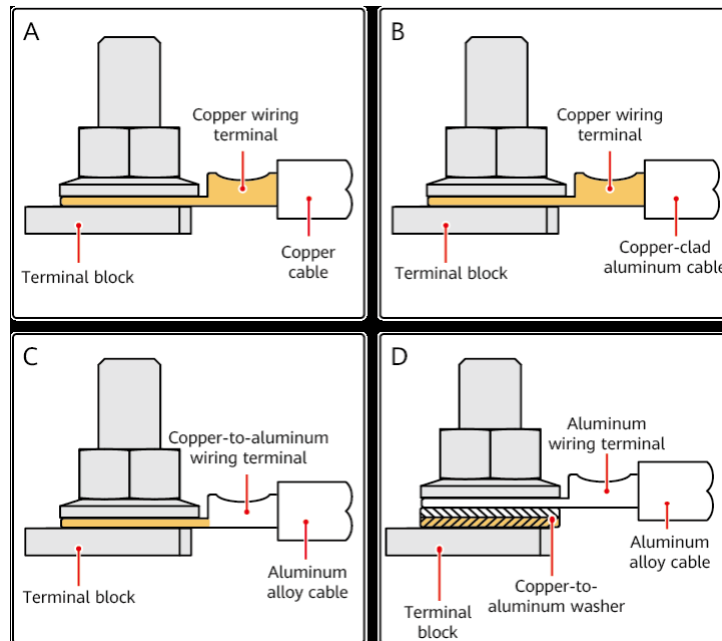

Crimp an OT or DT Terminal

NOTICE


NOTICE!

Avoid scratching the core wire when stripping a cable.


The cavity formed after the conductor crimp strip of the OT or DT terminal has been crimped must wrap around the core wire completely. The core wire must make close contact with the OT or DT terminal.

Wrap the wire crimping area with heat shrink tubing or insulation tape. The heat shrink tubing is used as an example. When crimping OT/DT terminals for electrical equipment, you must use heat shrink tubings.

Use a heat gun carefully to avoid heat damage to the equipment.

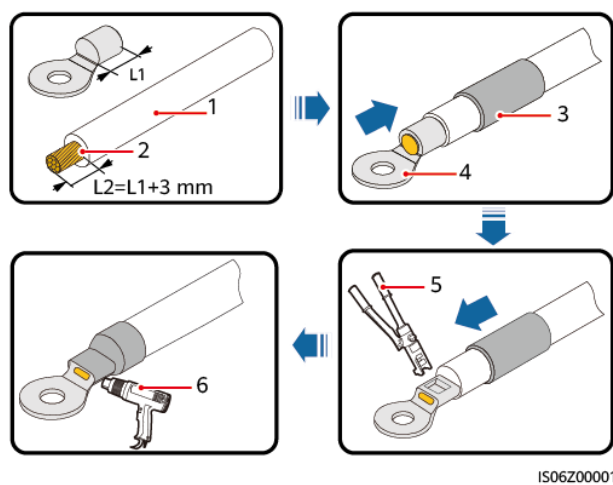Figure A-2 Crimp an OT Terminal


- (1) Cable (2) Core wire (3) Heat shrink tubing
(4) OT terminal (5) Hydraulic pliers (6) Heat gun

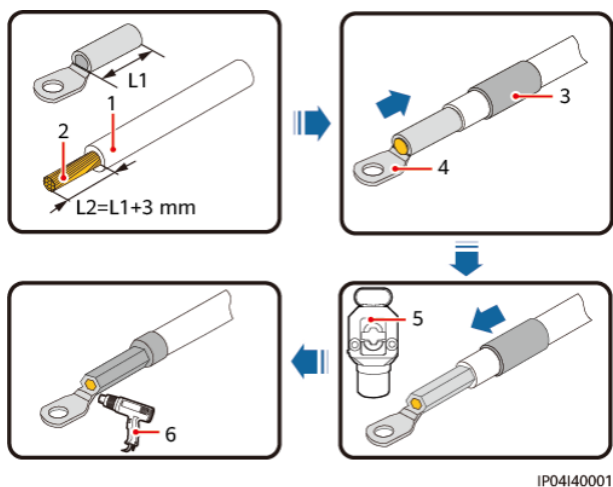Figure A-3 Crimp a DT Terminal


- (1) Cable (2) Core wire (3) Heat shrink tubing
(4) DT terminal (5) Hydraulic pliers (6) Heat gun

B How to Repair Paint Damage

Check the appearance of the outdoor BESS and AC outdoor cabinet for signs of damage.

- Case 1: Surface dirt caused by water stains or dust; can be cleaned.
- Case 2: Surface dirt with paint damage; surface marks cannot be completely cleaned.
- Case 3: Primer layer is damaged, and the substrate is exposed.

Maintenance Procedure for Case 1 (Cleanable Surface Dirt)

Materials:

- Cleaning cloth
- Water
- Alcohol (97%) or other non-corrosive cleaning agents

Image	Steps
	Use a cloth (or other wiping tool) dampened with water to clean the dirty surface areas. If water alone is not sufficient, use 97% alcohol to clean the surface until the cleanliness is acceptable. (Alternatively, a commonly used non-corrosive cleaner in the local region may be used.)

Maintenance Procedure for Case 2 (Surface Dirt with Paint Scratches or Damage)

Image	Steps
	1. Use sandpaper to polish the scratched or rough paint areas to make the surface smooth.
	2. Use a cloth dampened with water or 97% alcohol to wipe the damaged area and remove surface stains.
	3. After the surface is completely dry, use a soft brush to apply touch-up paint to the scratched area to ensure the paint is applied evenly and consistently.

Maintenance Procedure for Case 3 (Exposed Substrate due to Primer Damage)

Materials:

- Sandpaper
- Cleaning cloth
- Water
- Alcohol (97%)
- Zinc-rich primer
- Soft brush
- Topcoat paint in RAL 9003 color

Image	Steps
	1. Use sandpaper to grind the damaged paint area, removing rust and burrs, and smoothing the surface.

Image	Steps
	2. Use a cloth dampened with water or 97% alcohol to wipe the damaged area and remove dust and debris.
	3. Once the surface is dry, apply zinc-rich primer to the exposed substrate using a spray method to ensure full coverage of the bare metal.
	4. After the primer has dried completely, use a soft brush to apply topcoat paint to the damaged area to ensure the paint is applied evenly.

Inspect the protective coating on the surface of the energy storage integrated system for signs of peeling, flaking, or paint loss.

If any such issues are found, carry out repair work promptly.

It is recommended to recoat the entire exterior of the energy storage integrated system with a specialized protective paint every five years.

C Emergency Handling

If an accident (including but not limited to the following) occurs on the site, ensure the safety of onsite personnel first and contact Dunext's service engineers.

Battery Falling or Strong Impact

- If a battery has obvious damage or abnormal odor, smoke, or fire occurs, evacuate the personnel immediately, call emergency services, and contact the professionals. The professionals shall use fire extinguishing facilities to extinguish the fire under safety protection.
- If the appearance is not deformed or damaged, and there is no obvious abnormal odor, smoke, or fire, ensure safety and perform the following operations:
 - Warehouse: Evacuate personnel, transfer the battery to an open and safe place by professionals using mechanical tools, and contact Dunext's service engineers. Leave the battery for an hour and ensure that the battery temperature is within the room temperature range (tolerance: $\pm 10^{\circ}\text{C}$) before handling.
 - ESS onsite: Evacuate personnel, close the doors of the ESS, transfer the battery to an open and safe place by professionals using mechanical tools, and contact Dunext's service engineers. Leave the battery for an hour before handling.

Flood

- Power off the system if it is safe to do so.
- If any part of the batteries is submerged in water, do not touch the batteries to avoid electric shock.
- Do not use batteries that have been soaked in water. Contact a battery recycling company for disposal.

Fire

- If a fire occurs, power off the system if it is safe to do so.

- Extinguish the fire with carbon dioxide, FM-200 or ABC dry powder fire extinguishers.
- Ask firefighters to avoid contact with high-voltage components during firefighting to prevent the risk of electric shock.
- Overheating may cause battery deformation, faults, and leakage of corrosive electrolytes or toxic gases. Use respiratory protective equipment and keep a safe distance from the batteries to prevent skin irritation and chemical burns

Extinguishant Release or Fire

- Suggestions for onsite O&M personnel:
 - When a fire occurs, evacuate from the building or equipment area, press the fire alarm bell, and immediately call the fire emergency service. Notify the professional firefighters and provide them with relevant product information, including but not limited to battery pack types, ESS capacity, and battery pack location and distribution.
 - Do not enter the affected building or equipment area under any circumstances, and do not open the doors of the ESS. Isolate and monitor the site. Keep irrelevant personnel away from the site.
 - After calling the fire emergency service, remotely power off the system (e.g. intelligent prefabricated substation, intelligent energy storage controller, auxiliary power supply device, combiner box power supply) while ensuring your own safety.
 - After professional firefighters arrive, provide relevant product information, including but not limited to battery pack types, ESS capacity, battery pack location and distribution, and user manuals.
 - After the fire is extinguished, the site must be handled by professionals in accordance with local laws and regulations. Do not open the doors of the ESS without permission.
 - Post-disaster product maintenance: Contact Dunext's service engineers for evaluation.
- Suggestions for professional firefighters:
 - For product information, see the information provided by O&M personnel, including but not limited to battery pack types, ESS capacity, battery pack location and distribution, and user manuals.
 - Do not open the doors of the ESS before it is deemed safe by professionals.
 - Follow local firefighting regulations.
 - When a fire occurs, prevent the fire from spreading to nearby ESSs.

D How to Recycle Used Batteries

**NOTE!**

Dunext does not provide battery recycling services. Customers are responsible for contacting local recycling agencies to properly dispose of used batteries. If there are no local agencies available, it is recommended to contact nearby national recycling organizations for assistance.

1. Classification and Collection

This is the first step in battery recycling: sorting batteries by type. Batteries can be classified into:

- Primary batteries (e.g., dry cells, lithium batteries)
- Secondary batteries (e.g., nickel-metal hydride, lead-acid batteries)

Since different battery types contain different materials and require different disposal methods, proper classification enhances recycling efficiency and effectiveness. Dedicated recycling bins should be set up in public areas such as communities, schools, and shopping malls for convenient disposal.

2. Transportation

Collected batteries must be transported to recycling facilities using specialized vehicles. Proper packaging must be used to ensure safe transportation and to prevent incidents such as short-circuiting or leakage.

- For lithium batteries prone to short-circuiting, insulated packaging is required.
- For lead-acid batteries that may leak, containers must be well-sealed to prevent spillage.

3. Disassembly

Upon arrival at the recycling facility, the batteries undergo disassembly, including the following steps:

- Discharging to eliminate any residual energy (especially important for lithium batteries, which may catch fire or explode if disassembled with remaining charge)
- Removing the battery casing
- Extracting internal components, such as metals, plastics, and electrolytes

4. Materials Recovery

The materials obtained from disassembly are further processed for recovery:

- 1) Valuable metals (e.g., cobalt, lithium, nickel) and plastics are recovered through methods such as:
 - Hydrometallurgical processing: dissolving and precipitating valuable metals via chemical treatment
 - Pyrometallurgical processing: using high temperatures to smelt and separate metals
 - Mechanical processing: crushing and sieving to preliminarily separate materials
- 2) Hazardous substances (e.g., heavy metals, electrolytes) are treated to neutralize environmental risks.

5. Resource Utilization

Recovered materials can be reused to manufacture new battery products, achieving closed-loop recycling.

Some materials may also be used in other industries, such as construction materials or fertilizers.

For example:

- Recovered cobalt and lithium can be reused as electrode materials in new batteries.
- Recycled plastics can be processed and used in the production of other plastic goods.

6. Harmless Treatment

Waste batteries and residual hazardous substances that cannot be recycled must undergo harmless (non-toxic) treatment, including:

- Solidification
- Stabilization
- Landfilling, under strict safety protocols

For example, waste batteries containing mercury or cadmium can be encapsulated in stable materials and safely buried to prevent heavy metal contamination of the environment.

E Abbreviations

Abbreviation	Description
BESS	Battery energy storage system
BMS	Battery management system
EMS	Energy management system
SOC	State of charge
SOH	State of health
AC	Alternating current
DC	Direct current
PCS	Power conversion system
DOD	Depth of discharge
MPPT	Maximum power point tracking



Innovate for a Green Future

Dunext Technology Xiamen Co., Ltd.

 Building 7, No. 1001 Haiming Road, Xiamen Torch High-tech
Industrial Development Zone (Xiang'an), Xiamen, Fujian, China

 info@dunext.com

 www.dunext.com